


Document: #HT000115

Document Title: Adjusting the Printer Pivot Block


Product(s): T-375 Printer

Procedure:

Turn Main Power 'OFF' and remove the Top Panel.

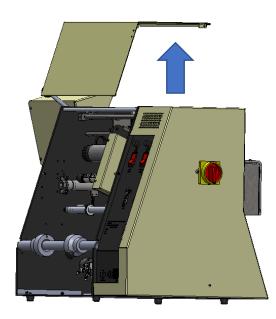


Locate the **Guide Rod** and **Guide Rod Holders**. These control the position of the **Pivot Block**.

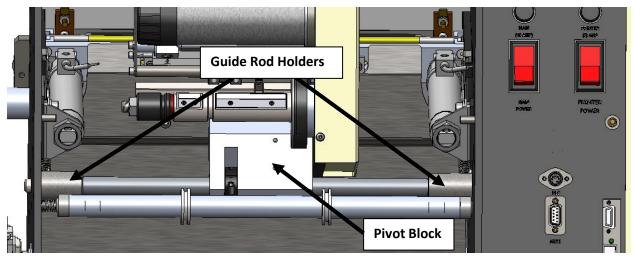

How To Service Documents from APPI

Examine the label printing for clarity, and determine which side is *not* printing clearly. Go to the Guide Rod Holder on the opposite side.

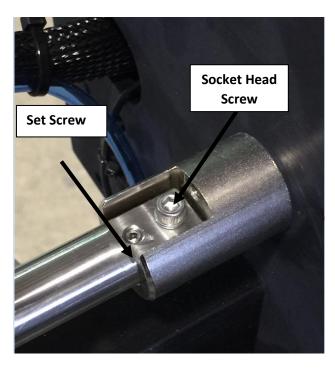

Loosen the Socket Head Screws on both Guide Rod Holders.

Tighten the adjacent Set Screw one full turn, then and re-tighten the Socket Head Screw on that side only.

Test the printing to determine if the quality has improved. If necessary, repeat the process, tightening the Set Screw one full turn each time, until the quality is satisfactory. When finished, tighten the Socket Head Screws on both sides.

