


Document: #HT000097

Document Title: Replace Drive Belt


Product(s): T-300/375

Procedure:

Turn Main Power OFF.

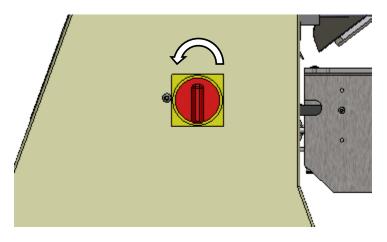


Remove Side Panel from unit.

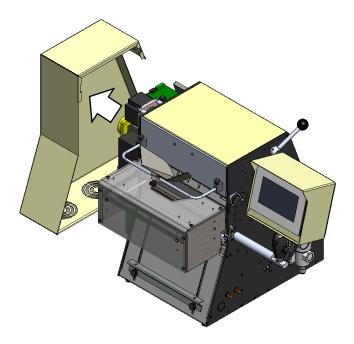




Loosen SHCS and move Tensioner back to release Drive Belt.

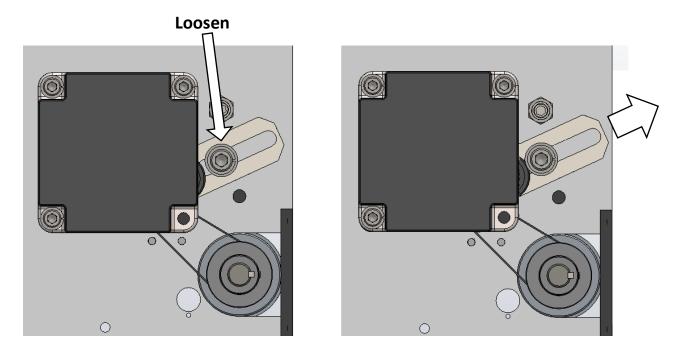


Remove worn Drive Belt. Install replacement Drive Belt.

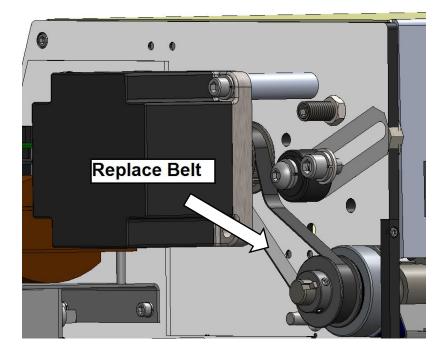



Move Tensioner back into position, tighten SHCS.

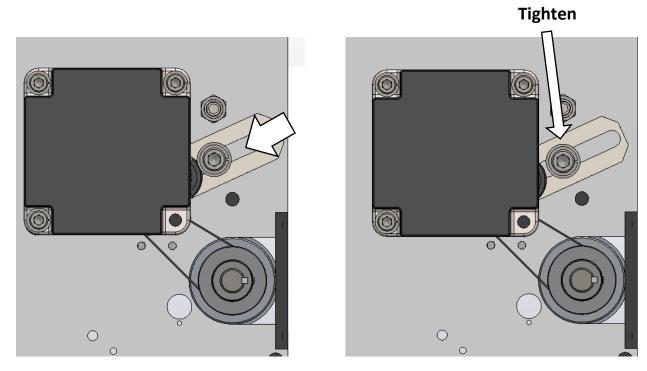

Replace Side Cover

