


Document: #HT000096

Document Title: Replace Coiled Cable


Product(s): T-1000

Procedure:

Turn Main Power OFF and disconnect air.

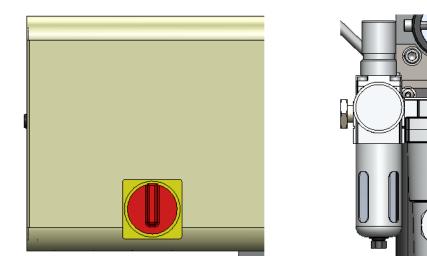


Remove Top Cover.

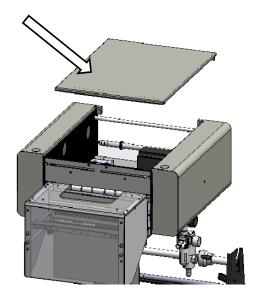


 \bigcirc

Remove Internal Guard Panel by first removing:


- Two (2) BHCS 10-24 x 1/2" SS
- One (1) BHCS 10-32 x 1/2"
- Two (2) BHCS 10-32 x 3/8"
- Five (5) #10 Lock Washer
- Five (5) #10 Flat Washer

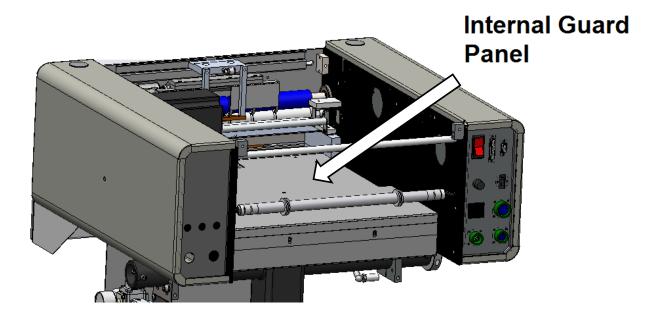


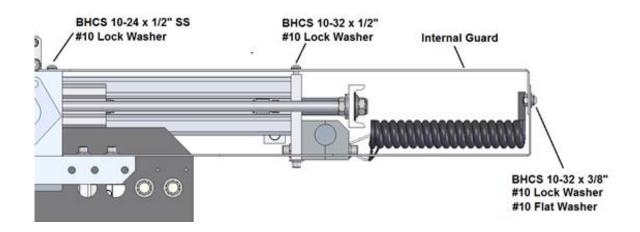



Cut cable-ties holding **Coiled Cable** to unit, and unplug cable.

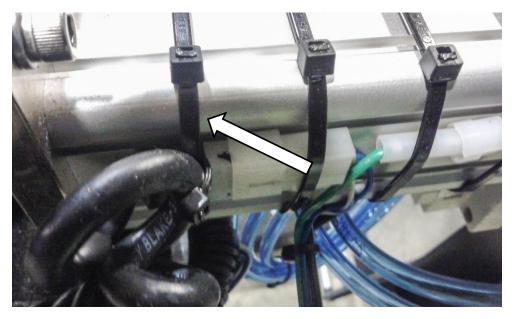


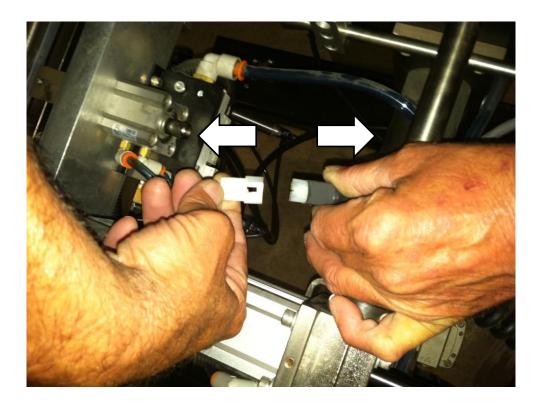

Disconnect **Coiled Cable** from **Seal Guide Rods** by removing Hex Jam Nuts and Internal Tooth Lock Washers.




Remove Wire Clamp.

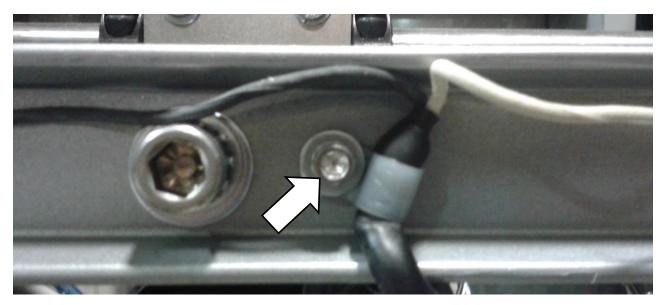

Install the new **Coiled Cable** to the **Seal Guide Rods**, installing the following, in order:

- Thrust Nylon Bushing
- 3/8" Flat Washer
- Seal Bar Coil Contact
- 3/8" Int. Tooth Lock Washer
- 3/8-16 Hex Jam Nut

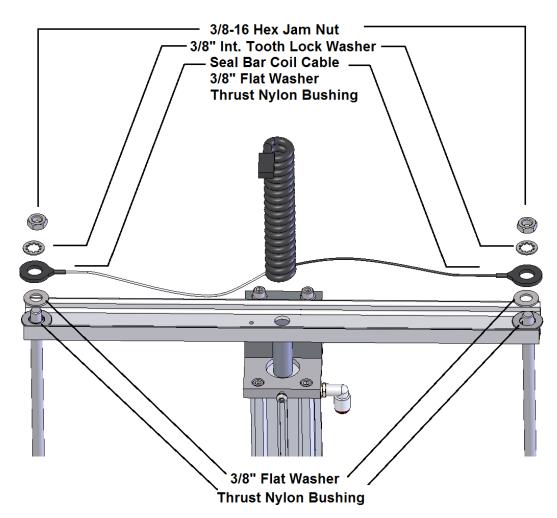


Tighten the Jam Nuts, ensuring that the Jam Nuts in front of the Sealer Rod Tie are tightened first.

Make sure to connect the white and black wires as shown below (Rear View):


Black Wire




White Wire

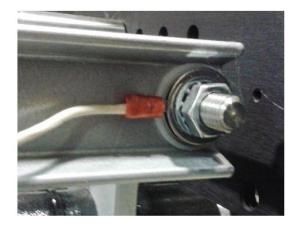

Plug in **Coiled Cable** connector, and cable-tie to **Seal Cylinder** as before.

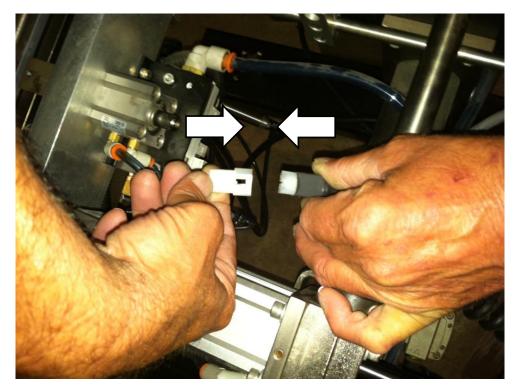



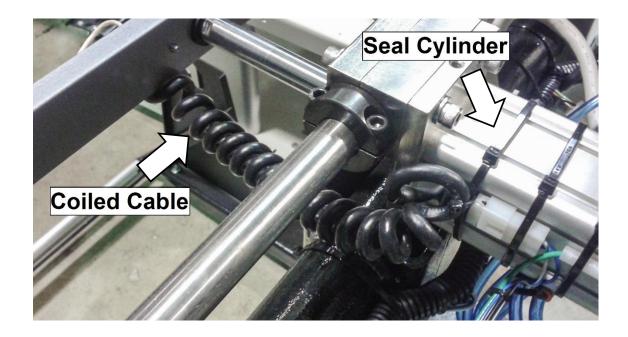

Replace Internal Guard and Top Panels.

