

Document: #HT000113

Document Title: Printer Settings for LabelView 10.02 Flash E Option

Product(s): Ti-1000Z

Procedure:

This type of printer does not require download and installation of separate drivers; everything is included in the LabelView software. This Guide assumes Zebra Xi4 is already set up and working, and that LabelView is up and running with a label on the computer screen.

Zebra 110Xi4 printer setup

Page setup

In LabelView, click FILE, then LABEL/PAGE SETUP.



How To Service Documents from APPI

Make sure your settings are as follows:

Stock tab:

1 📙 Stock	🔟 Label 📑	Page	Marg	jins	¢
Туре				v	
Name				~	
Number of labels :	1	Pr	eview		
Label size :	4.000 x 2.500(inches)				
Page size : Background :	Customized 4.000 x 2.500(inches)	-			
<none></none>	~				
Comment					
			Save	Remove	

Page tab:



Label tab:

Media	Continuous	×	
Label size(inches)		Preview	
Width	4.000		
Height	2.500		
Corner roundness	0.000 🗘		
Number of labels Per row	1		
Per column		4	

Margins tab:



Click OK.



Printer setup

In LabelView, click FILE, then select PRINTER SETUP.



Make sure all your setting is as follows:

General tab:

6.000 V Print speed (Inches)/s			Paper calibration
25.0 Temperature	Paper feed mode		
180° rotation	Rewind 🗸	0.000 🚽 Adjust vertical origin(Inches)	Print mode
		0 🖨 Country code	Thermal transfer
Backfeed off		10 Transation	O Direct thermal
Pause		10 Imeout(s)	
Cut after batch		0 🖶 Maximum number of images	
		Activate bidirectional communication for RF label readir	ng
Pages printed between pauses/cuts		Black/white reversed	Reverse overlayed objects
Images		Do not reverse overlayed lines or rectangles	Send modified data only
Reload images at next print job		Use font name for downloaded font output	Check printer status
DRAM v Destination memory		Allow Unicode characters for downloaded fonts	>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>
Download images to buffer memory		Disable sending the print width command	Use Download Format Command
Image format		Disable sending the Label Home (^LH) command.	
Binary Datas : No Compression		Disable sending the Label Top (^LT) command	
bindi y bunda i na compression 1		Disable sending the Label Shift (^LS) command	
Set date/time	Network settings	Initialization sequence:	
0 Change the RTC time accuracy tolerance value (se	econds)		

Advanced tab:

How To Service Documents from APPI

Environment tab:

General Advanced Environment Fonts Lay	out	
Auxilary port settings		
Applicator mode		
Off Mode 1		
O Mode 2 Mode 3		

Fonts tab:

Layout tab:

Printer settings - Copy of	Zebra 110Xi4 (203dpi)	Printer setting	js - Zebra 110Xi4 (203dpi)
eral Advanced Environment Fonts Layout	1	General Advanced Environment Fonts	ayout
Store layout in printer		Store layout in printer	
DRAM V Memory		DRAM DRAM Flash B Flash F	
Layout management		Layout management	
	Delete the selected layout		Delete the selected layout
	Delete all layouts		Delete all layouts
	Print the test page		Print the test page
	Refresh		Refresh
			,

If using the FLASH E option, you will be asked for a file name when clicking PRINT in the PRINT screen. The file name is limited to 3 numbers. This label can be called up from the printer itself, in the labels screen.

How To Service Documents from APPI

Click OK; this will take you back to your label.

This label now contains all the printer settings, and can be used as a base for all future labels.

To save this as a "Standard Label" click FILE, then Save As.

Type in the name you want for your standard label, and click OK