

How To

Service Documents from APPI

Document: #HT000219

Document Title: Change Print Head on ZT Printer TI-1000ZT

Product(s): TI-1000ZT

Procedure:

To Replace the Printhead, start by powering down the machine using the AB On/Off switch

Power Must Be OFF!!!!

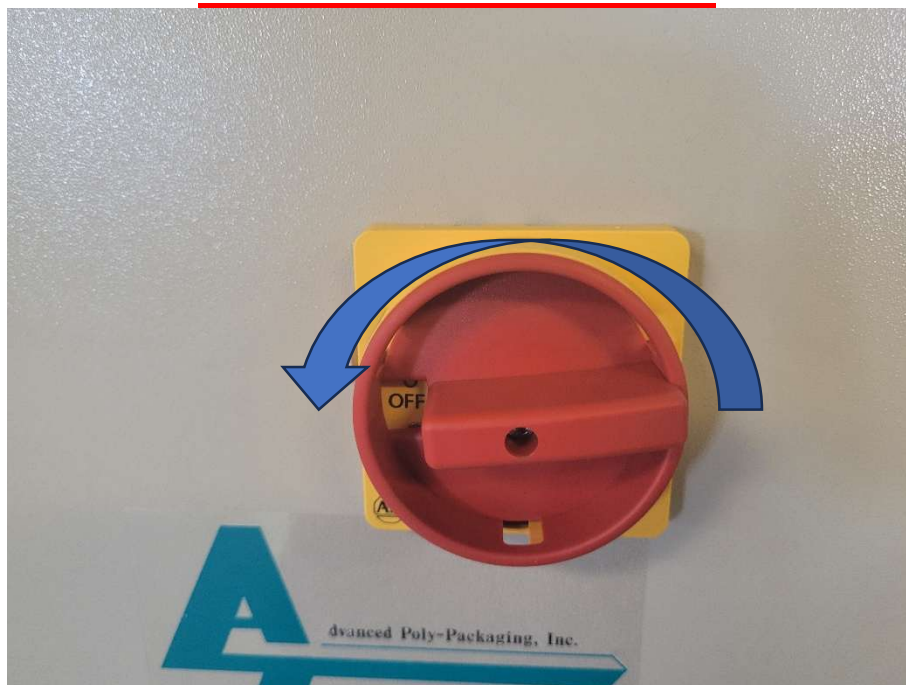


Fig 1

Remove Ribbon and Disconnect Springs from the washers.

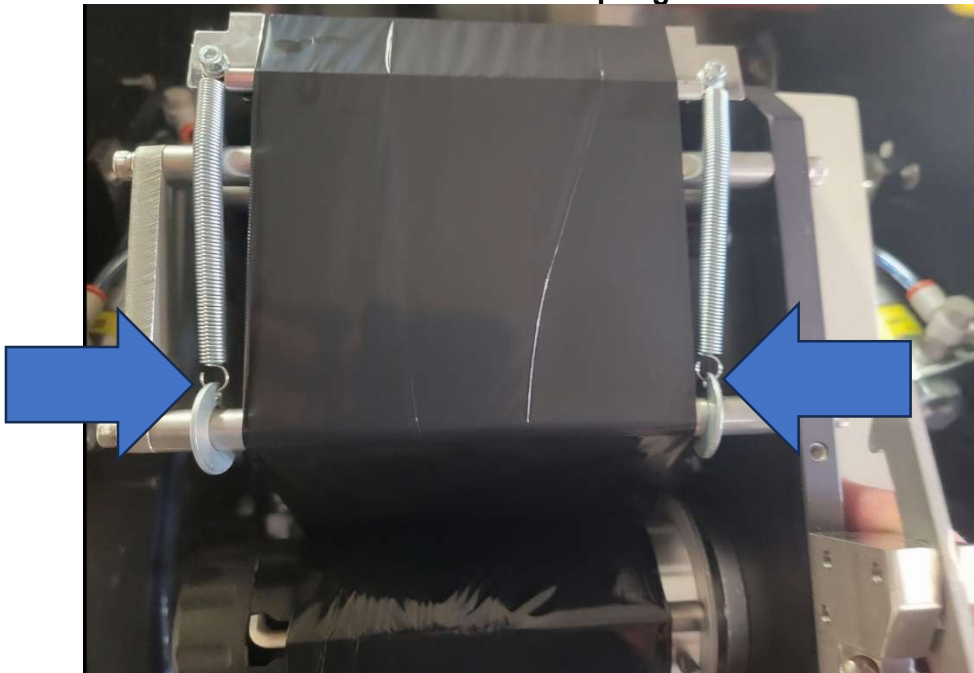


Fig 2

Loosen screw holding Printhead using a Flat Head Screwdriver

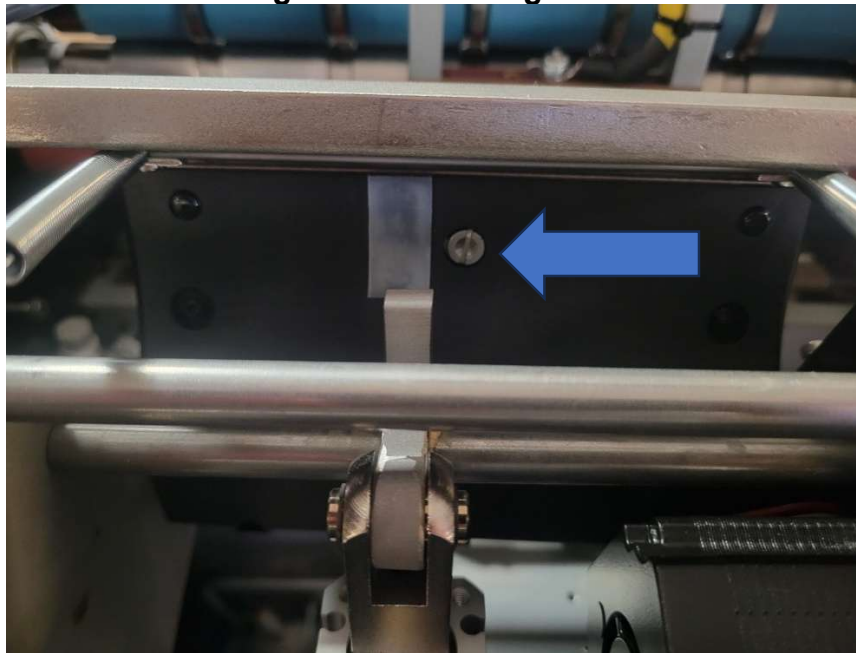


Fig 3

Remove old Print Head and Install new Print Head, aligning Guide Posts on Print Head to the Mounting Bracket. Tighten screw (Fig 3). Screw should be snug, but not too tight. (There should be no gap between Print Head and Bracket.)

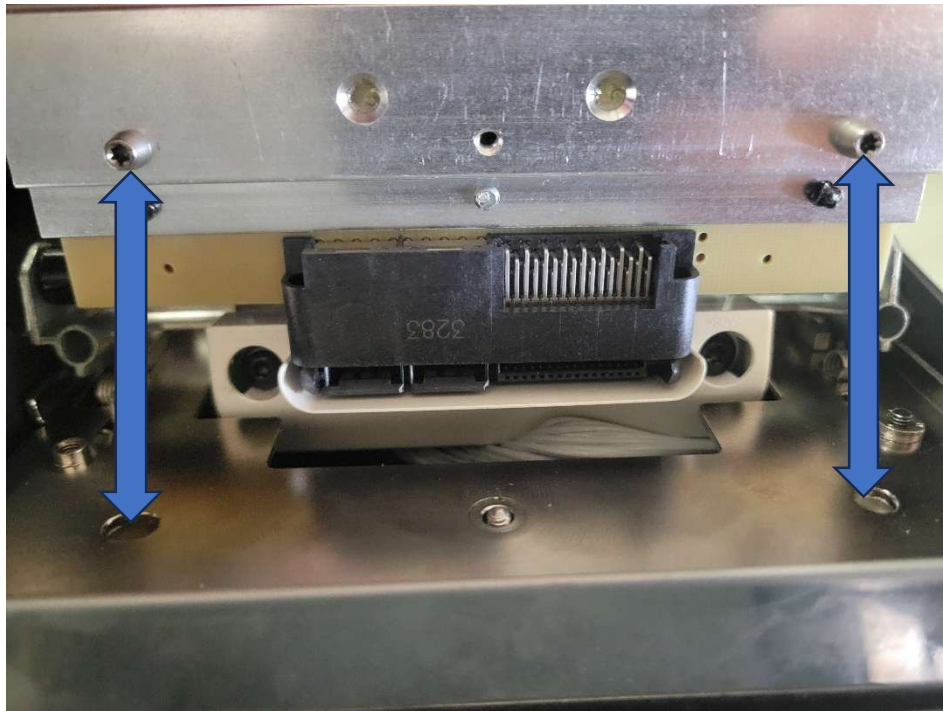


Fig 4

Reapply Ribbon and Reconnect Springs to the washer

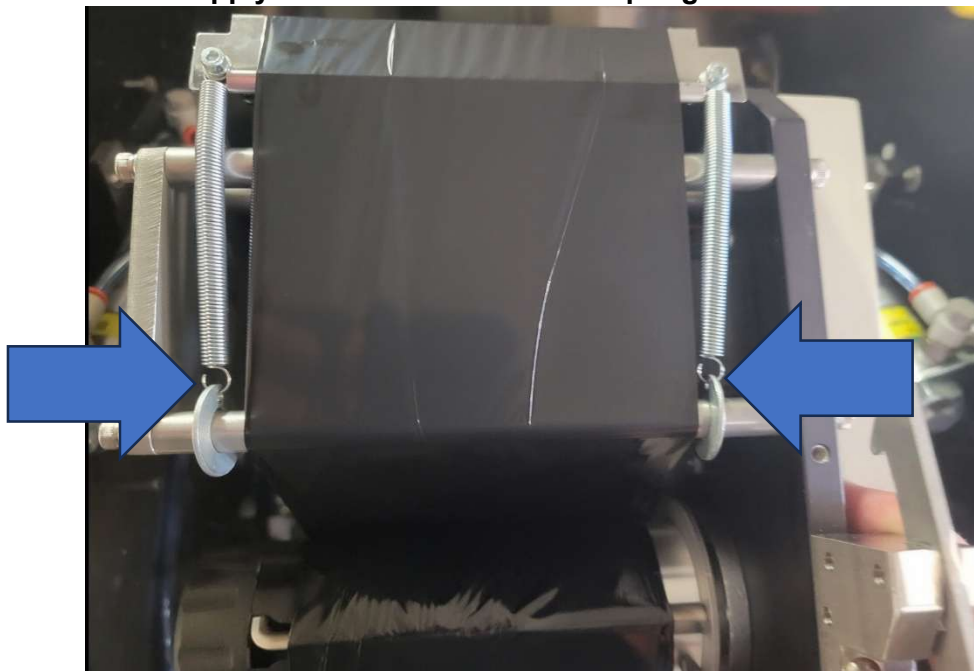


Fig 5