

Document: #HT000082


**Document Title: Adjust Seal Temperature** 

Product(s): T-300/375

## **Procedure:**

From the "Main Menu", which will be different for the T-300 and T-375, select "Settings".


Note: If the Pass Code function is enabled, access to the Main Menu will require the input of the Pass Code.

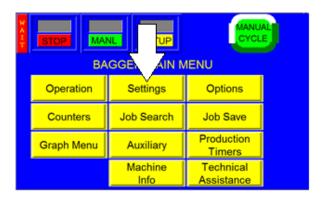



T-300 Main Menu

T-375 Main Menu

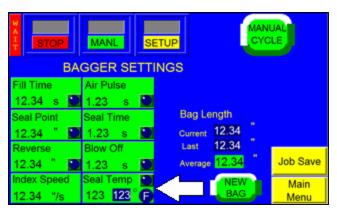

On the Bagger Settings screen, select "Seal Temperature".

Enter the desired value on the numeric keypad, and then press ENT.