

Document: #HT000034

Document Title: Update Ground Sensor

Product(s): T-375

Procedure:

Turn Air and Power **OFF**.






Remove side cover.



Remove Copper Ground Sensor.

Copper Ground Sensor

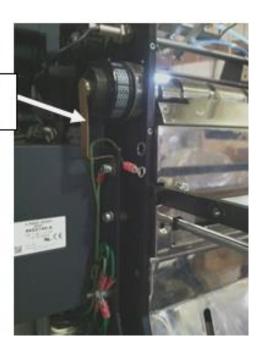






Exit Plate (Front View)

The New Exit Plates have a Notch cut out for Ground Sensor.



You can grind a Notch like above, or purchase a new one with Notch in it.



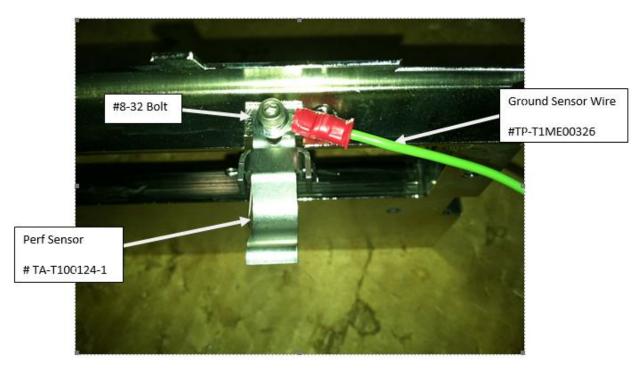



Remove Old Ground Sensor.





Pull New Ground Sensor thru hole then attach to Ground.