

Document: #HT000076

**Document Title: Trim Time and Trim Count Settings** 

Product(s): US-9000

## **Procedure:**

The current US-9000's have two new settings on them: Trim Time & Trim Count.

This document will try to explain how they work.

- **Trim Count** = The number of product away from the Accept Count that the bowl stops at.
- Trim Time = The amount of time the bowl turns back on if count is Under.

## Example:

Accept = 10 Trim Count = 1 Trim Time = 0.1 seconds

- 1. With these settings, the bowl will feed until a count of 9 (Accept minus Trim Count) is reached.
- 2. It then waits for the **Settle Time**. If count is equal to the **Accept Count**, the machine dumps the product and signals the bagger to cycle.
- 3. If count is **Under**, the bowl turns back on for 0.1 seconds (**Trim Time**).
- 4. It then waits for the **Settle Time**. If count is equal to the **Accept Count**, the machine dumps the product and signals the bagger to cycle.
- 5. If count is **Under**, the bowl turns back on for 0.1 seconds (**Trim Time**).
- 6. Steps 4 & 5 repeat until either Accept or Over is reached