

Document: #HT000082

Document Title: Adjust Seal Temperature

Product(s): T-300/375


Procedure:

From the **"Main Menu"**, which will be different for the T-300 and T-375, select **"Settings"**.

Note: If the Pass Code function is enabled, access to the Main Menu will require the input of the Pass Code.

***	STOP MANL UP MANUAL CYCLE BAGGE AIN MENU				STOP MANL UP MANUAL BAGGE AIN MENU			
	Operation	Settings	Options		Operation	Settings	Options	
	Counters	Job Search	Job Save		Counters	Job Search	Job Save	
	Graph Menu	Auxiliary	Production Timers		Graph Menu	Auxiliary	Production Timers	
		Machine Info	Technical Assistance		Printer Setup	Machine Info	Technical Assistance	

T-300 Main Menu

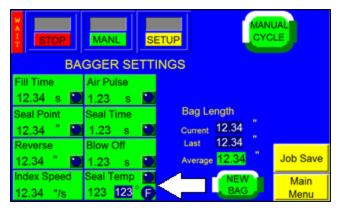

T-375 Main Menu

On the Bagger Settings screen, select "Seal Temperature".

Enter the desired value on the numeric keypad, and then press ENT.