

Document: #HT000148

Document Title: Adjust Seal Temperature


Product(s): ST-1000

Procedure:

From the Bagger Main Menu, select "Bagger Settings".

W A I T	STOP MANUAL SETUP BAGGER MAIN MENU				
	Operation	Bagger Settings	Options		
	Counters	Job Search	Job Save		
	Graph Menu	Auxiliary Options	Log Menu		
	Printer Setup	Machine Info	Technical Assistance		

All settings will be entered numerically on a keypad. Press the green "Seal Temp" button, then enter the value on the number keypad followed by the <Enter> button.

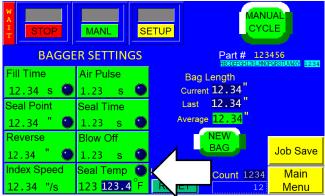

The typical temperature is setting is between 360°F and 440°F (182°C to 226°C) depending on film thickness.