


Ultra Counter-Scale 2400

Operation Guide, Version 1C
Setup, Operation and Parts Manual

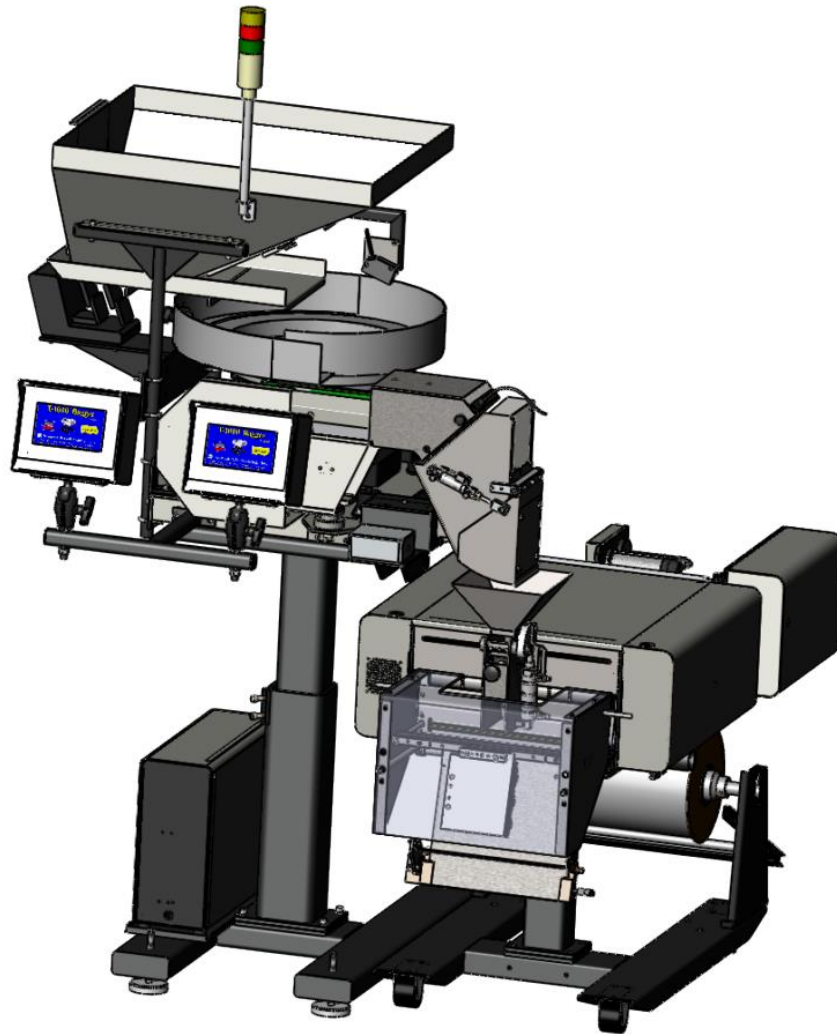

 **Advanced
Poly-Packaging, Inc.**

1331 Emmitt Road • Akron, OH 44306 • 1-800-754-4403 • fax 330-785-4010 • www.advancedpoly.com

Acknowledgments

Written By: Charles Tolbert, updated by David Kolinski-Schultz
Reviewed By: Stuart Baker

Copyright

© 2018(Ver.1C), 2016(Ver. 1B), 2014 (Ver. 1), Advanced Poly-Packaging, Inc. (APPI). All rights reserved.

This manual and the program operating the equipment described in it are copyrighted. You may not copy this manual in whole or part without written consent of Advanced Poly-Packaging, Inc.

All information pertaining to the promotion, sale, distribution, operation and maintenance of the Ultra Counter-Scale 2400 including this manual, drawings, schematic, wiring diagrams, VHS video tapes, brochures, specification sheets, figures, charts or any other information, due to its proprietary design and manufacture, remain the property of Advanced Poly Packaging, Inc. Unauthorized duplication, distribution or disclosure to third parties without the express permission of Advanced Poly Packaging, Inc. is strictly prohibited.

Trademarks

Ultra Counter-Scale is a trademark of Advanced Poly-Packaging, Inc. Advanced Poly-Packaging, Inc. also owns the following trademarks: T-1000, Advanced Poly-Bags, Twin-Seal, Advanced Poly-Pack, Advanced Poly-Bag, Blist-a-Bag, Ultra-Feed, Flip-Series, Seal-a-Print, Roll-a-Print.

Warranty

Warranty period is one year. The warranty commences on the date of delivery of the equipment to the purchaser. APPI warrants to the Purchaser that the equipment is free from defects in workmanship or material under normal use and service. During the warranty period, APPI agrees to repair or replace, at its sole option, without charge to Purchaser, any defective component part of the equipment. To obtain service, Purchaser must return the equipment or component to APPI or an authorized APPI distributor or service representative in an adequate container for shipping. Any shipping charges, insurance, or other fees must be paid by Purchaser and all risk for the equipment shall remain with Purchaser until APPI takes receipt of the equipment. Upon receipt, APPI, the authorized distributor or service representative will promptly repair or replace the defective component and then return the equipment or component to Purchaser, shipping charges, insurance, and additional fees prepaid. APPI may use reconditioned or like new parts or units, at its sole option, when repairing any component or equipment. Repaired products shall carry the same amount of outstanding warranty as from original purchase. Any claim under the warranty must include a dated proof of delivery. In any event, APPI's liability for defective components or equipment is limited to repairing or replacing the components. This warranty is contingent upon proper use of the equipment by Purchaser and does not cover: expendable component parts such as print heads, rollers, bushings, and the like; or if damage is due to accident, unusual physical, electrical or mechanical stress, neglect, misuse, failure of electric power, improper environmental conditions, transportation, tampering with or altering of the equipment, packaging of corrosive or contaminating products or other products damaging to components, and equipment or components not owned or in the possession of original Purchaser. APPI will not be liable for loss of production, profits, lost savings, special, incidental, consequential, indirect, or other similar damages arising from breach of warranty, breach of contract, negligence, or their legal action even if APPI or its agent has been advised of the possibility of such damages or for any claim brought against the Purchaser by another party. This warranty allocates risks of equipment failure between Purchaser and APPI. APPI's pricing reflects this allocation of risk and the limitations of liability contained in this warranty. The warranty set forth above is in lieu of all other express warranties, whether oral or written. The agents, employees, distributors, and dealers of APPI are not authorized to make modifications to this warranty, or additional warranties binding on APPI. Accordingly, additional statements such as dealer advertising or presentations, whether oral or written, do not constitute warranties by APPI and should not be relied upon. Warranty on equipment is considered void when outstanding balances become delinquent (over 30 days late - 60 days after ship date). Equipment Integration to other Equipment: APPI assumes no responsibility for the integration of its products to other products or within a system unless APPI performs the integration, testing and provides the results of the tests to the purchaser in writing. Furthermore, APPI assumes no responsibility for bag sizing whether suggested or recommended.

TABLE OF CONTENTS

| | |
|--|-----------|
| Chapter 1: Introduction | 6 |
| <hr/> | |
| 1.1 Welcome..... | 7 |
| 1.2 Using This Manual | 7 |
| 1.3 Specifications | 7 |
| 1.4 Available Options..... | 8 |
| 1.5 Warranty Registration | 10 |
| Chapter 2: Getting Started | 12 |
| <hr/> | |
| 2.1 Chapter Summary..... | 13 |
| 2.2 Unpacking and Setup | 13 |
| 2.3 Safety, Risks..... | 13 |
| 2.4 Machine Setup..... | 14 |
| 2.5 Hookups and Connections..... | 15 |
| 2.6 Operating Environment..... | 15 |
| 2.7 Air and Power Requirements | 15 |
| 2.8 Turning on the Power..... | 15 |
| Chapter 3: Touch Screen Operation | 16 |
| <hr/> | |
| 3.1 Touch Screen Operation..... | 17 |
| 3.2 Touch Screen Specifications / Features | 17 |
| 3.3 Touch Screen Program Overview | 17 |
| 3.4 Introduction Screen | 18 |
| 3.5 Main Menu | 18 |
| 3.6 Machine Mode..... | 18 |
| 3.7 Counter Settings Screen | 19 |
| 3.8 Check-Weigh Settings..... | 21 |
| 3.9 Scale Settings | 22 |
| 3.10 Hopper Settings..... | 24 |
| 3.11 Eye Test / Eye Settings..... | 25 |

| | |
|---|-----------|
| 3.12 Counter Operation Screen | 27 |
| 3.13 Check-Weigh Operation Screen..... | 28 |
| 3.14 Scale Operation Screen | 29 |
| 3.15 Part Sample | 29 |
| 3.16 Counters Screen..... | 30 |
| 3.17 Recipe List / Recipe Search Screens | 30 |
| 3.18 Memory Files and Data Structure | 32 |
| 3.19 Production Screen | 37 |
| 3.20 Counter Auxiliary Options Screen | 38 |
| 3.21 Technical Assistance Screen | 38 |
| 3.22 Password Setup Screen | 39 |
| 3.23 PLC I/O Status Screen..... | 40 |
| 3.24 APPI Factory Screen | 41 |
| 3.25 Factory Settings..... | 41 |
| 3.26 Scale Factory Settings | 42 |
| 3.27 Production Logs | 43 |
| 3.28 License Activation..... | 44 |
| 3.29 Information Screens | 45 |
| Chapter 4: Adjustments, Maintenance, Troubleshooting | 48 |
| <hr/> | |
| 4.1 Bowl Discharge Position..... | 49 |
| 4.2 Skivers..... | 49 |
| 4.3 Drop Gate | 49 |
| 4.4 Level Switch/Sensor..... | 49 |
| 4.5 Bowl Drive | 51 |
| 4.6 Erratic Feeding of the Bowl | 52 |
| 4.7 Dead Spots in the Bowl..... | 52 |
| 4.8 Adjustment of the Coil Gap | 52 |
| 4.9 Spring “Tuning” | 52 |
| 4.10 Belt Tracking..... | 53 |
| 4.11 Accumulator Funnel Adjustment | 53 |
| 4.12 Optical Frame Pot Settings..... | 53 |

| | |
|--|---------------------|
| 4.13 Setting the Vibra-Drive Potentiometer..... | 55 |
| 4.14 Height Adjustment | 57 |
| 4.15 Troubleshooting Checklist (Ultra Counter-Scale 2400)..... | 58 |
| 4.16 Troubleshooting: Base / Bowl Drive Unit | 59 |
| 4.17 Troubleshooting Checklist (Conveyor Feed Problems) | 60 |
| 4.18 PLC IO Listing | 61 |
| 4.19 UCS-2400 Spare Parts Kit | 63 |
| Chapter 5: Parts and Drawings | 64 |
| <hr/> | |
| 5.1 Ultra Counter-Scale 2400..... | 65 |
| 5.2 Electronics Assembly | 67 |
| 5.3 Cable Assemblies | 69 |
| 5.4 V-Track Assembly, Long | 71 |
| 5.5 Long Belt Guide Assembly | 73 |
| 5.6 Belt Drive Housing Assembly..... | 75 |
| 5.7 Belt Drive Assembly | 77 |
| 5.8 Touch Screen Assembly..... | 79 |
| 5.9 Accumulator Funnel Assembly..... | 81 |
| 5.10 Optical Eye Assembly..... | 83 |
| 5.11 Supply Hopper Assembly..... | 85 |
| 5.12 CCW Vibratory Bowl Assembly..... | 87 |
| 5.13 Prox Sensor Assembly | 89 |
| 5.14 Ultra Counter-Scale Stand..... | 91 |
| 5.15 110 VAC Electrical Drawing | 93 |
| 5.16 FPG I/O Electrical Drawing..... | 94 |
| 5.17 Analog Control Electrical Drawing..... | 95 |
| 5.18 DB9 Electrical Drawing | 96 |
| 5.19 DB25 Electrical Drawing | 97 |
| 5.20 Aux Interface Electrical Drawing | 98 |
| | Appendix 100 |
| <hr/> | |
| A. UCS-2400 Detailed Setup Procedure..... | 101 |
| I. Counter Setup..... | 101 |

| | |
|---|-----|
| II. Procedure | 101 |
| III. Troubleshooting Inaccurate Counts..... | 105 |
| IV. Setup Procedure Summary | 105 |

Chapter 1: Introduction

Welcome

Using This Manual

Specifications

Available Options

Warranty Registration

1.1 Welcome

Thank you for selecting the Ultra Counter-Scale 2400. Designed to accurately sort and count various molded, medical, industrial and food products, the Ultra Counter-Scale 2400 will lower your packaging costs with automatic operation, increased speeds, versatility, reliability, and simplicity.

1.2 Using This Manual

The following manual conventions are frequently used to assist in understanding important information, to alert the operator of potentially dangerous or damaging practices and to describe the normal functions of the Ultra Counter-Scale 2400.

- Text Normal text.
- *Italics* Used for emphasis.
- **Boldface** Used to identify heading names and touch screen buttons.
- **CAUTION:** Warning messages. To avoid physical harm, damage to equipment or damage to the product, be sure to read these messages carefully.
- *Note:* Identifies important information.

1.3 Specifications

General

- Machine Dimensions: 54" high x 36" wide x 42" deep
- Conveyor Motor: Stepper drive
- Optical Frame: 80mm x 120mm staggered emitter / receiver
- Weight: Approximately 400 lbs. (varies based upon bowl and drive size)
- Air: 60 PSI
- Electric: 115V/60Hz

Touch Screen Specifications

- Power: 24 VDC (+/- 10%)
- Operating Environment: 0-50°C, 85% RH or less
- Display: Color LCD
- Resolution (W x H): 320 x 240 dots
- Display Area: 174 x 131mm (5.7")
- Backlight: CCFL
- Backlight Hours: Approx. 75,000
- PLC Connection: RS232
- Number of Characters: 40 columns x 30 lines max.

Touch Screen (Back Panel)

- MJ1: Connector used for serial communication with an external device and screen data transfer
- MJ2: Connector used for serial communication with an external device
- USB-A Port: Provides connection to a USB printer
- USB-B Port: Provides connection to a computer for screen data transfer
- LAN Connector (Optional): Provides Ethernet communication

Drive Specifications - Performance Data

- Part movement approaching 100 feet per minute is obtainable
- Overall Dimensions: 8 ¾" high, 16 ½" square base, 18" or 24" diameter bowl
- Weight: 222 pounds (drive unit less bowl)

- Power Required: 3.5 amps maximum amperage draw at 120 Volt AC, also available at 240 Volt
- Springing: 4 spring banks 90° apart, 15° spring angle
- Rotation: Counterclockwise or clockwise
- Bowl Mounting: One hole (or four holes on some models), top or bottom mount, bolt circles up to 16 ½"
- Bowl Size: Up to 30" stainless steel fabricated or cast aluminum
- Operating Mode: 7200 cycles per minute at 60 Hz; 50 Hz tuning available

1.4 Available Options

Although the UCS-2400 is extensively equipped with many “built-in” options, APPI offers some additional options that may better suit your UCS-2400 and your specific needs.

- **Bowl configurations:** The UCS-2400 comes equipped with a flat track (or high-negative bowl) as a custom feature. Special tooling, including air assist, may also be incorporated based on your product.
- **Vibratory hopper with leveling arm:** A supply hopper, triggered by a level switch designed to keep the bowl filled to a consistent level, provides a greater accuracy of parts flow. The leveling switch may be in the form of a leveling arm, an ultrasonic sensor, or a photo optic sensor.
- **Incline feed conveyor and hopper with leveling arm:** A hopper with a floor level stand provides for lower filling of the hopper. An incline conveyor feeds the bowl and maintains a constant level in the bowl for greater feed accuracy.
- **FDA coating or rubber coating:** FDA coatings are available for food contact. Rubber or polyurethane coatings are also available.
- **Special tooling:** Bowls can be custom-tooled to provide for the orientation requirements of special parts.
- **LAN connection:** Provides for Ethernet communication.
- **UF-2000 Takeaway Conveyor:** This conveyor removes the packaged product to a packing station or directly feeds a carton or table. Small, lightweight, and equipped with castors, this conveyor can be used anywhere in the plant. Designed for 24 hour / 7 days a week operation.
- **Photo eyes:** APPI can provide different types and configurations of sensors to meet the specific needs of your product.
- **Recipe management system:** The UCS-2400 allows for a system with the ability to create, manage and store “recipes” of past jobs settings from multiple machines operating in a system. These recipes can be saved and applied to future jobs to make operation faster and easier.
- **Reject Funnel:** The custom Reject Funnel System is designed to separate the product that has been rejected by the machine. The funnel at the top of the assembly collects the product as it drops from the UCS-2400 accumulating funnels. The accepted product will drop down the chute into the bag to be sealed. When there is rejected material, the machine will signal for the partition door located in the “throat” to open, discarding the product down the Reject Chute and into the Reject Accumulation area located in the front of the Lexan Guard.

This page intentionally left blank.

1.5 Warranty Registration

This section must be completed and returned to Advanced Poly-Packaging, Inc. to register the scale for Warranty Protection.

Serial Number:

(Serial Number located on the back panel)

Company Name and Address

Contact Name(s) / Title(s) / Phone Number

| | |
|-------|-------|
| <hr/> | <hr/> |
| <hr/> | <hr/> |
| <hr/> | <hr/> |

Please fax or mail this page to:

Service Manager
Advanced Poly-Packaging, Inc.
1331 Emmitt Road
Akron, OH 44306
USA

Fax # (USA) 330-785-4010

Or email the information above to: sales@advancedpoly.com

This page intentionally left blank.

Chapter 2: Getting Started

Chapter Summary

Unpacking and Setup

Safety, Risks

Machine Setup

Hookups and Connections

Operating Environment

Air and Power Requirements

Turning on the Power

2.1 Chapter Summary

This chapter describes procedures to receive and set up the UCS-2400, including uncrating and assembly instructions, environmental, air and power requirements, and safety precautions.

2.2 Unpacking and Setup

The UCS-2400 is typically shipped completely assembled on a pallet. However, photo eye or accumulating assemblies may be removed to various levels of disassembly. Cartons securing the electronic module, cables and manual will be also on the pallet. Remove all tape, banding or packing materials that secure the machine.

2.3 Safety, Risks

Many safety features have been included in the mechanical, electronic, and pneumatic systems of this machine. Despite these safety precautions, operators may receive lacerations or crushed or broken bone injuries if they encounter any moving components. Improper use, improper adjustments and neglect of preventative maintenance may also result in serious personal injury. No special personal protective equipment is required to operate the equipment, but eye protection, gloves or other protection should be worn, depending on the characteristics of product being packaged or the method of loading the product.

Please carefully read the following precautions to operate the equipment properly and avoid injury:

- **CAUTION:** Initial setup of the machine must be performed by specialized personnel. Qualified service engineers should uncrate the equipment, assemble the equipment (if required), test and connect power sources, test the equipment for proper operation and set up the equipment for use.
- **CAUTION:** Due the very heavy weight of the machine, for lift trucks, chains and/or strapping must be used to transport the machine from the pallet or from one location to another within your plant. When lifting the system, forks should be positioned under the mounting plate which the bowl rubber mounts are attached. **DO NOT** attempt to lift the machine with the forks positioned under the H-frame/stand.
- **CAUTION:** Ensure that height adjustments allow for sufficient movement of the operator. Improper height adjustments could negatively affect operator movement, causing strain, added stress, discomfort, and fatigue.
- **CAUTION:** To avoid injury, do not operate the equipment if funnels, guards, covers or other access panels have been removed. If any of these safety measures have been removed or modified or if any openings have been increased, the operator will have access to moving components that can cause crush, cut, or burn injuries to hands or fingers.
- **CAUTION:** To avoid injury, do not reach under guards or elsewhere under the machine.
- **CAUTION:** Due to the very heavy weight of the machine, use a fork truck to change the height of the machine. Do not loosen or remove the locking bolts unless the weight of the bowl is supported by the forks of a fork truck, with the forks positioned beneath the plate on which the bowl feet are mounted. Any attempt to loosen the bolts will cause the upper machine to suddenly drop which may cause severe injury or possibly death.

- **CAUTION:** To avoid injury, avoid coming in contact with pinch points including rollers, automatic funnel doors or other moving components.
- **CAUTION:** Exercise care when adjusting or relocating the touch screen. Movement of the touch screen could cause unexpected movement of the machine and injury to the operator.
- **CAUTION:** Do not attempt to feed parts that are not suited to the machinery. Doing so could cause jams, damage to machinery and ejection of parts. For example, parts too large for the accumulating funnel may jam and eject when the door closes.
- **CAUTION:** If control or air pressure settings are set too high, higher noise levels may result from increased part on part contact or part on machinery contact. Limit these settings and add guards or covers to reduce airborne noise.
- **CAUTION:** Exercise extreme care when clearing jams, replacing materials, changing controls or mechanical settings, and cleaning internal parts. Be sure to de-energize energy sources prior to removing guarding. Failure to do so may result in unexpected movement or flying objects, which could cause crush, cut, or eye injuries.
- **CAUTION:** Maintenance must be performed by specialized personnel. Qualified service engineers must remove guards or covers to gain access to electrical or mechanical areas.
- **CAUTION:** Maintenance must be performed regularly to ensure that the machine is operating properly and to protect against injury. Routine maintenance includes: periodic inspections, the replacement of worn or damaged components, the tightening of loose bolts or components, and regular cleaning and adjustments. Contact APPI and/or service centers for service support if there is not sufficient maintenance staff at the user facility to perform regular maintenance.

2.4 Machine Setup

Using a fork truck with the machine fastened properly to the fork truck, locate the machine in the proper operating position. If the bowl feeder has been removed from the unit, using a fork truck or lift, position the drive unit onto the bowl mounting plate, locating the feet in their mounting pads, or mounting holes. Bolt the four rubber feet with mounting brackets to the mounting plate. It is essential that these feet are in good condition and are securely attached to the plate. The rubber mounting feet will isolate the slight vibrations of the drive unit from the mounting structure. Mounting screws restrain the drive unit from moving. Secure the feeder bowl to the top plate of the drive unit with the screws provided.

If the unit is equipped with a V-track which has been removed, mount the V-track to the mounting plate.

Mount or position the electronic module so that the cables reach the connections.

Note: The base drive may not be bolted to the stand. Do not attempt to move the counter while the base drive is positioned on the stand. Remove the feeder bowl, then the base drive, prior to repositioning the stand.

Note: Erratic parts feeding will occur if the bowl mounting screws are not drawn down tightly or if the screws become loose.

2.5 Hookups and Connections

The back of the UCS-2400 control module has eight clearly marked ports:

| PORT | CONNECTION |
|-----------------|---|
| Belt Drive | Military Connector, 10 Pin Female, Belt Drive |
| Bowl Drive | Military Connector, 3 Pin Female, Base Drive |
| Level Input | DB9F, 9 Pin Female, Leveling Switch |
| Optical Input | DB9F, 9 Pin Female, Optical Frame |
| IOP Serial Port | 5 Pin Female, Touch Screen Operator Panel |
| Hopper | 110 Outlet, Line Out, Vibratory Hopper |
| Aux In | Military Connector, 7 Pin Male, Aux. In Signal (from bagger/conveyor) |
| Aux Out | Military Connector, 6 Pin Female, Aux. Out Signal (to other counter, bagger, check weigh scale or terminator) |

2.6 Operating Environment

When you choose a location for installation, make sure the area is free of excess dust, dirt, and moisture. To ensure the highest production possible, consider product flow to the counter and ensure that the finished (packaged) product can easily flow from the system.

Note: For suggested system layouts, please contact an APPI technical sales person for layout drawings.

2.7 Air and Power Requirements

The UCS-2400 is equipped with an external regulator, and the air supply should be fed to the UCS-2400 with ¼" O.D. poly tubing. Make the connection at the rear of the machine. Set the air pressure on the UCS-2400 between 20 and 40 PSI ensuring that the scale door (or tilting mechanism) operate smoothly without banging or excess vibration. Adjust flow controls so that the unit operates consistently and smoothly without banging open or closed.

Note: Air should be dry and oil free.

The UCS-2400 requires an 120V/60Hz dedicated power source and will draw 15 amps total per unit.

2.8 Turning on the Power

The main power switch is located on the control module at the base of the machine. To turn the machine on, turn the switch clockwise from its horizontal OFF position to its vertical ON position. The green Power light on the touch screen will illuminate and the Introduction screen will be displayed. The program version will also be identified. The Introduction screen will only appear for a few seconds until automatically changing to the Operation screen or Main Menu.

Chapter 3: Touch Screen Operation

| | |
|---|---------------------|
| Touch Screen Operation | Production Logs |
| Touch Screen Specifications / Features | License Activation |
| Touch Screen Program | Information Screens |
| Touch Screen Program Overview | |
| Introduction Screen | |
| Main Menu | |
| Machine Mode | |
| Counter Settings Screen | |
| Check-Weigh Settings | |
| Scale Settings | |
| Hopper Settings | |
| Eye Test / Eye Settings | |
| Counter Operation Screen | |
| Check-Weigh Operation Screen | |
| Scale Operation Screen | |
| Part Sample | |
| Counters Screen | |
| Memory Files and Data Structure | |
| Production Screen | |
| Counter Auxiliary Options Screen | |
| Technical Assistance Screen | |
| Password Setup Screen | |
| PLC I/O Status Screen | |
| APPI Factory Screen | |
| Factory Settings | |
| Scale Factory Settings | |

3.1 Touch Screen Operation

The touch screen is comprised of LEDs, system and function buttons and the screen operation itself. This chapter describes the identification, operation, and settings of the touch screen program.

3.2 Touch Screen Specifications / Features

| | |
|-----------------------------|--|
| Screen, Resolution | 7", 800 x 480 pixels, 65,536 TFT Colors |
| Features | Real time clock, recipes, USB |
| LCD | 65,536 colors, TFT |
| Memory | 11.6 MB |
| Communication | RS232C |
| Touch Key Resolution | Free, Analog |
| Languages | English, Spanish, French, German, Italian, Japanese, Chinese, Korean |
| Dimension | 215 x 156 x 42 mm |
| Back Light | White LEDs (No maintenance) |
| Power Supply | 24V DC, 0.2A |
| Protection (Front) | IP65 |
| Conforming | CE, UL, cUL |

CAUTION: Do not attempt to reprogram the PLC or touch screen. Doing so may cause an unsafe operating condition. Doing so will also void the warranty. Additionally, do not change the DIP switch settings.

3.3 Touch Screen Program Overview

The touch screen program is a user-friendly, menu-driven setup and operation program. To move through the system, touch the area of the screen that describes the desired operation. A color scheme is used to identify functions:

- **Blue** is the background color used for text information. No “buttons” or functions are blue.
- **Green** is the color used for “buttons” that change settings. For example, pop-up windows may be displayed or a function turned on/off when a green button is pressed.
- **Red** indicates that a function is off or stopped. For example, pressing a red button may turn a function on.
- **Yellow** is the color used for menu buttons. A menu button displays another screen and allows for movement throughout the entire program.

3.4 Introduction Screen

When the UCS-2400 is turned on, an **Introductory Screen** is displayed. See Figure 3- 1. The Introduction screen is a welcome screen, and it contains a button that will take the operator to the Operation screen. When turned on, the machine will be in **Stop** mode.



Figure 3- 1

3.5 Main Menu

The **Main Menu Screen** (Figure 3- 2) allows the operator to navigate quickly through the entire program.

The yellow buttons located in the center of the Main Menu screen are menu command buttons. Pressing one of these buttons will change the screen currently displayed on the IOP. To access another screen, simply press the corresponding menu command button. Menu buttons appear throughout the touch screen program to assist in navigation and are normally located on the right side of the screen.

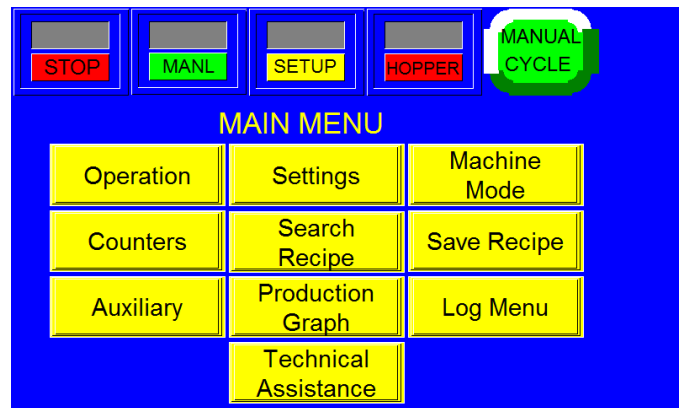


Figure 3- 2

3.6 Machine Mode

This machine is capable of operating in three different modes, a Counter mode, a Check-Weigh mode, and a Scale mode.

When the system is in Counter mode it is able to count the product accurately without the use of the Check-Weigh. Counter mode is also used for jobs that require low counts of product (i.e.1-24) and can be run at a high rate of speed producing more bags per minute.

The Check-Weigh mode is used for midrange counts of material, (i.e. 25-50 units) and uses both the eye and the scale to ensure accuracy,

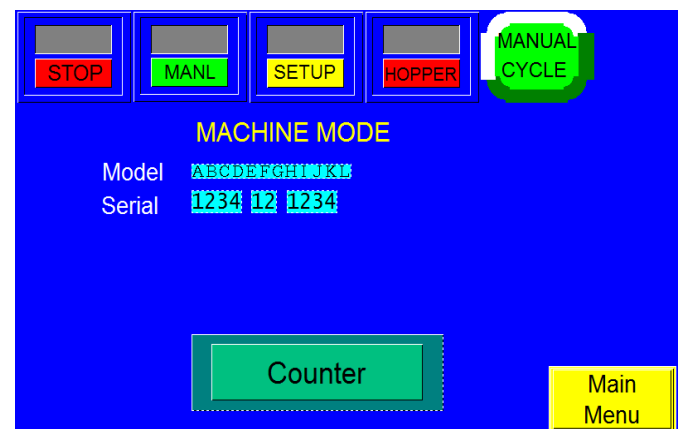


Figure 3- 3

however, using both does cause the machine to function more slowly. In this function the eye is still counting pieces but as there are more pieces that may be oddly shaped or difficult to see, the counter is less accurate and the assistance of the scale to check the weight is necessary.

When using the Scale mode of the machine, the highest amount of product can be bagged with accuracy. By setting a weight, the scale measures the amount of product until it reaches a certain point then uses the eye to count the remainder of the product. The scale then checks the weight for accuracy before releasing the product to be bagged.

To switch between modes, simply go to the **Main Menu** and select **Machine Modes**. At the bottom of the screen there is a button to toggle between **Counter / Check-Weigh / Scale** modes. See Figure 3- 3. Once the preferred mode has been selected, the Settings and Operations screens will already be selected for the mode in which the machine is operating. To access these screens, go back to the **Main Menu** and select **Settings** or **Operations** to adjust the settings in these screens.

Once the mode has been selected and the settings have been adjusted (as described below), the machine will be ready to operate. The operation buttons at the top of the screen must be turned on in order for the machine to start. First toggle the **STOP** button to **START**. Next toggle **SETUP** to **RUN**. Once the machine is in **RUN** mode, toggle the **MANL** button to **AUTO**. The machine is now in full auto mode.

Note: The Machine must be in RUN mode before it will operate in AUTO mode. Once the machine is taken out of RUN, it will automatically revert to MANUAL mode.

3.7 Counter Settings Screen

The **Counter Settings Screen** (Figure 3- 4) is affected by which mode is selected on the **Machine Mode Screen** (Figure 3- 3). The Counter Settings screen contains all the timer settings, count settings and speed settings used to control the operation of the counter. Pressing a button on this screen will display a numeric keypad that allows the operator to change the setting value. Enter the value and press the **ENT** button to accept the value. If entered incorrectly, press the **CLR** button, then reenter the value. The LEDs on these buttons indicate whether or not the function is turned on.

Slow Count Setting: Press the **SlowCount** button to set the Slow Count to a value that causes the bowl (and/or belt) to slow down when the counter approaches the Final Count. The Slow Count setting helps prevent extra parts from being counted. For small value counts (such as 1 through 5), the Slow Count value may be set to the Final Count value since the bowl will be running more slowly for smaller counts. To determine the Slow Count setting, first set the value to 80% of the Final Count and adjust after testing.

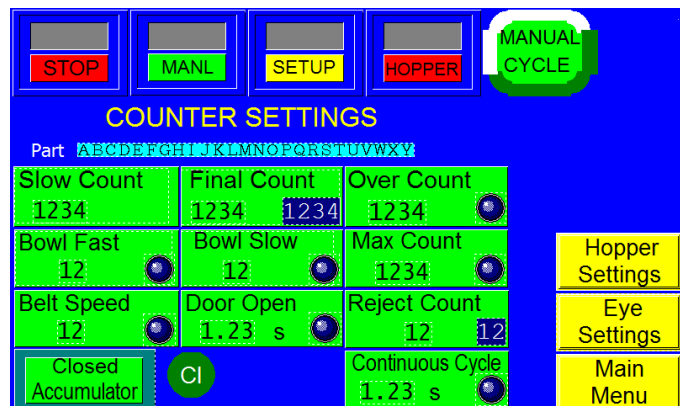


Figure 3- 4

Final Count Setting: Press the **Final Count** button to set the Final Count value to the desired count. Once the Final Count is reached, the cycle operation will stop and await a signal to drop the parts.

Note: The difference between the Final Count and Slow Count settings must be greater than the number of parts on the V-track belt at any one time.

Over Count Setting: The Over Count setting is provided to stop the system if an Over Count condition exists. To enable this feature, press the **Over Count** button and use the numeric keypad to set the Over Count to one or higher. To disable this feature, set the Over Count setting to zero. If set to one, the cycle operation will stop and a message will appear on the screen, indicating an Over Count condition (an Over Count of one or higher). To continue operation, touch anywhere on the screen.

Note: Over counts may occur if the bowl is feeding parts onto the belt too closely, causing the optical frame to count two parts as only one. Slow the fast and/or slow bowl speeds down to avoid over counts.

Bowl Fast / Slow: The **Bowl Fast** and **Bowl Slow** buttons display the current fast bowl speed. The bowl speed changes immediately after pressing **ENT** on the numeric keypad if the value has been changed. Two speeds are provided in order to increase production and accuracy. The fast speed is used to reach the final count quickly, and the slow speed is used for accuracy.

Max Count: Press the **Max Count** button to adjust the maximum number of parts that can be in the accumulator. Adjusting this number will help avoid overfilling the accumulator. To disable this function, set the Max Count to zero.

Belt Speed: The **Belt Speed** button displays the current belt speed. To change the Belt Speed, press the **Belt Speed** button and change the value using the numeric keypad. The minimum and maximum values for each parameter are indicated in white to the right of the numeric pad. Use the numeric pad to enter a new value for the Belt Speed and press the **ENT** button. The Belt Speed will change only after the next cycle operation begins.

Door Open: Door Open is the amount of the time the accumulator door remains open before it closes. This allows the batch quantity of parts to fully escape the accumulator before it closes.

Reject Count: To set the Reject Count press the **Reject Count** button and setting the number of rejected material to pass through before the machine stops. Once the number reaches the set amount of allowed rejected bags, the machine will stop and a Warning screen will appear notifying the operator the Reject Count has been reached. Check to see if any adjustments need to be made and touch the screen to start the machine again.

Open / Closed Accumulator: In Closed Accumulator mode, the Final Count will be reached with the accumulator doors closed. In Open Accumulator mode, the Final Count will be reached with the doors open, and the doors will close as soon as the Final Count has been reached. There is an accumulator button on the Counter Settings screen that allows for adjustment of this mode. If the accumulator button displays Closed Accumulator, pressing the **Closed Accumulator** button will change the accumulator mode from closed to open, and the button will then display Open Accumulator. If the accumulator button displays Open Accumulator, pressing the **Open Accumulator** button will change the accumulator mode from open to closed, and the button will then display Closed Accumulator.

Cont. Cycle Setting: The Continuous Cycle timer provides a delay time if the counter is running in a standalone mode and automatic mode. The operator can keep pace with the counter and, if needed, increase the Continuous Cycle counter to slow down the operation.

3.8 Check-Weigh Settings

The **Check-Weigh Settings Screen** (Figure 3- 5) is affected by which mode is selected on the **Machine Mode Screen** (Figure 3- 3). Check-Weigh mode uses both the counting eye and the scale to count and weigh the product. The Check-Weigh Setting screen contains all the timer settings, speed settings, and counting settings used to control the operations of the Check-Weigh. Pressing a button on this screen will display a numeric keypad that allows the operator to change the setting value. Enter the value and press the **ENT** button to accept the value. If entered incorrectly, press the **CLR** button then reenter the value. The LEDs on these buttons indicate whether or not the function is turned on.

Auto Fix On / Off: In the Check-Weigh mode, the Auto Fix function allows the scale to catch up with the eye counter. If the scale has fallen behind and is not at the weight for the number of product the eye has counted, the scale will signify the eye and the machine will slow down until the scale weight is caught up with the eye count. To turn the Auto Fix function on, press the **AutoFix OFF** button so it displays **AutoFix ON**. To turn the function off, press the **AutoFix ON** button so it displays **AutoFix OFF**.

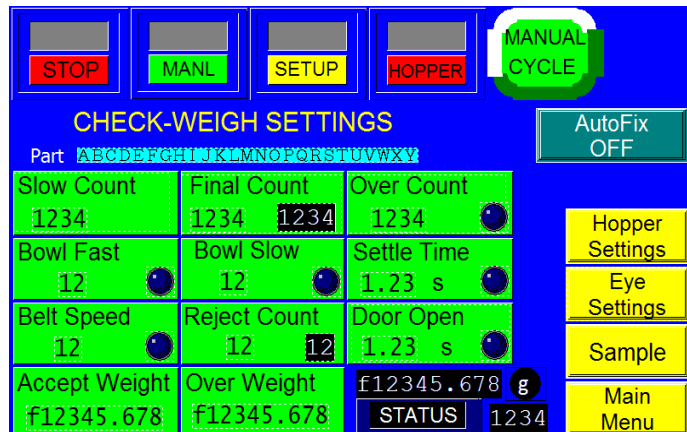


Figure 3- 5

Slow Count Setting: Press the **Slow Count**

button to set the Slow Count to a value that causes the bowl (and/or belt) to slow down when the counter approaches the Final Count. The Slow Count setting helps prevent extra parts from being counted. For small value counts (such as 1 through 5), the Slow Count value may be set to the Final Count value since the bowl will be running more slowly for smaller counts. To determine the Slow Count setting, first set the value to 80% of the Final Count and adjust after testing.

Final Count Setting: Press the **Final Count** button to set the Final Count value to the desired count. Once the Final Count is reached, the cycle operation will stop and await a signal to drop the parts.

Note: The difference between the Final Count and Slow Count settings must be greater than the number of parts on the V-track belt at any one time.

Over Count Setting: The Over Count setting is provided to stop the system if an Over Count condition exists. To enable this feature, press the **Over Count** button and use the numeric keypad to set the Over Count to one or higher. To disable this feature, set the Over Count setting to zero. If set to one, the cycle operation will stop and a message will appear on the screen, indicating an Over Count condition (an Over Count of one or higher). To continue operation, touch anywhere on the screen.

Bowl Fast / Slow: The **Bowl Fast** and **Bowl Slow** buttons display the current fast bowl speed. The bowl speed changes immediately after pressing **ENT** on the numeric keypad if the value has been changed. Two speeds are provided in order to increase production and accuracy. The fast speed is used to reach the final count quickly, and the slow speed is used for accuracy.

Note: Over counts may occur if the bowl is feeding parts onto the belt too closely, causing the optical frame to count two parts as only one. Slow the fast and/or slow bowl speeds down to avoid over counts.

Door Open: Door Open is the amount of the time the accumulator door remains open before it closes. This allows the batch quantity of parts to fully escape the accumulator before it closes.

Belt Speed: The **Belt Speed** button displays the current belt speed. To change the Belt Speed, press the **Belt Speed** button and change the value using the numeric keypad. The minimum and maximum values for each parameter are indicated in white to the right of the numeric pad. Use the numeric pad to enter a new value for the Belt Speed and press the **ENT** button. The Belt Speed will change only after the next cycle operation begins.

Settle Time: The settle time is the designated amount of time the scale waits after all the product has finished accumulating before weighing the product.

Reject Count: To set the Reject Count press the **Reject Count** button and setting the number of rejected material to pass through before the machine stops. Once the number reaches the set amount of allowed rejected bags, the machine will stop and a Warning screen will appear notifying the operator the Reject Count has been reached. Check to see of any adjustments need to be made and touch the screen to start the machine again.

Accept Weight / Over Weight: Accept Weight and Over Weight are measured in grams and displayed on the bottom of the designated button. Press the Accept Weight button to set the Accept Weight value to the desired weight. Once the Accept weight is reached, the cycle operation will stop and await a signal to drop the parts. Over Weight sets the maximum weight allowed to pass through to be bagged. If the product is either under the Accept weight or over the Over Weight, the product will be rejected. The Over Weight setting is provided to stop the system if an Overweight condition exists. To enable this feature, press the **Over Weight** button and use the numeric keypad to set the Over Weight to 0.01 or higher. To disable this feature, set the Over Weight setting to zero. If set to one, the cycle operation will stop and a message will appear on the screen, indicating an Over Weight condition (an Over Weight of 0.01 or higher). To continue operation, touch anywhere on the screen.

3.9 Scale Settings

The **Scale Settings Screens** (Figure 3- 6, Figure 3- 7, and Figure 3- 8) are affected by which mode is selected on the **Machine Mode Screen** (Figure 3- 3). The **Scale Setting Screens** contain all the timer settings, speed settings, and counting settings used to control the operations of the Scale. Pressing a button on this screen will display a numeric keypad that allows the operator to change the setting value. Enter the value and press the **ENT** button to accept the value. If entered incorrectly, press the **CLR** button then reenter the value. The LEDs on these buttons indicate whether or not the function is turned on.

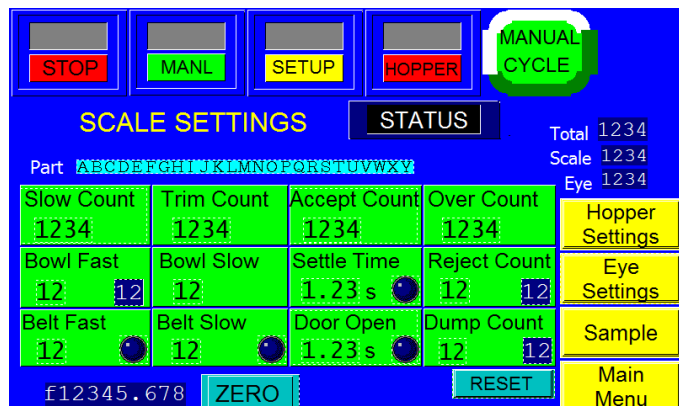


Figure 3- 6

Controls on these **Scale Settings Screens** include:

Settle Time: The amount of time, in seconds, provided to allow product or the scale to become motionless before the scale locks the weight and cycles. By increasing the settle time, the accuracy of the scale increases, but the output/productivity decreases. To set this value, press the **Settle Time** button, enter a value into the numeric keypad and press the **ENT** button.

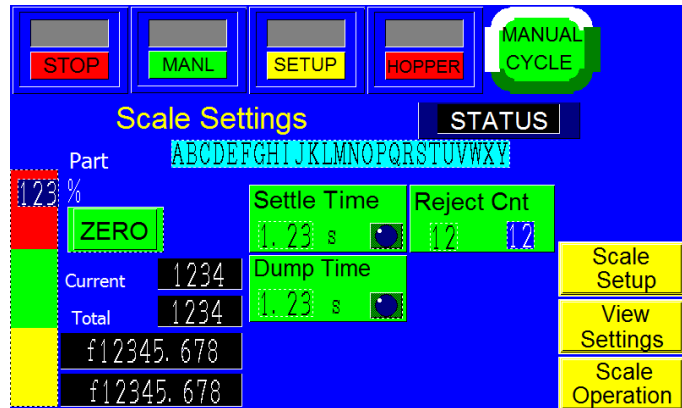


Figure 3- 7

Dump Time: The length of time, in seconds, the scale dispenses parts into the bag. This time should be sufficient to consistently allow all parts to fully exit the scale. To set this value, press the **Dump Time** button, enter a value into the numeric keypad and press the **ENT** button. *NOTE: Increasing the dump time reduces production.*

Reject Count: The maximum number of consecutive rejects the scale can accept before operation stops and the operator is prompted to adjust the system. For example, if the Reject Count is set to four, and five consecutive measurements produce five consecutive rejects, an information/warning message will be displayed on the screen and operation will stop. To set this value, press the **Reject Count** button, enter a value into the numeric keypad and press the **ENT** button.

Status: The Status box displays whether the weight is Over, Under or Accept.

Slow Count Setting: Press the **Slow Count** button to set the Slow Count to a value that causes the bowl (and/or belt) to slow down when the counter approaches the Final Count. The Slow Count setting helps prevent extra parts from being counted. For small value counts (such as 1 through 5), the Slow Count value may be set to the Final Count value since the bowl will be running more slowly for smaller counts. To determine the Slow Count setting, first set the value to 80% of the Final Count and adjust after testing.

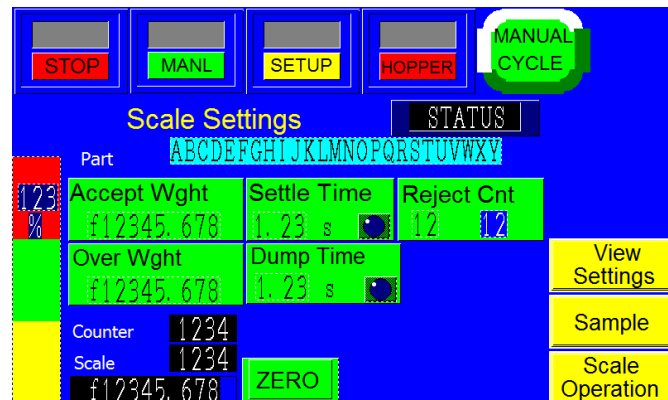


Figure 3- 8

Trim Count: Press the **Trim Count** button to set the Trim Count to a value that causes the counting eye to count the product when the counter approaches the Accept Count. The Trim Count setting helps prevent extra parts from being counted. For small value counts (such as 1 through 5), the Slow Count value may be set to the Accept Count value since the bowl will be running more slowly for smaller counts. To determine the Trim Count setting, first set the value to 80% of the Accept Count and adjust after testing.

Accept Count Setting: Press the **Accept Count** button to set the Accept Count value to the desired count. Once the Accept Count is reached, the cycle operation will stop and await a signal to drop the parts.

Over Count Setting: The Over Count setting is provided to stop the system if an Over Count condition exists. To enable this feature, press the **Over Count** button and use the numeric keypad to set the Over Count to one or higher. To disable this feature, set the Over Count setting to zero. If set to one, the cycle operation will stop and a message will appear on the screen, indicating an Over Count condition (an Over Count of one or higher). To continue operation, touch anywhere on the screen.

Note: Over Counts may occur if the bowl is feeding parts onto the belt too closely, causing the optical frame to count two parts as only one. Slow the fast and/or slow bowl speeds down to avoid over Counts.

Bowl Fast / Slow: The **Bowl Fast** and **Bowl Slow** buttons display the current fast bowl speed. The bowl speed changes immediately after pressing **ENT** on the numeric keypad if the value has been changed. Two speeds are provided in order to increase production and accuracy. The fast speed is used to reach the final count quickly, and the slow speed is used for accuracy.

Note: Over Counts may occur if the bowl is feeding parts onto the belt too closely, causing the optical frame to count two parts as only one. Slow the fast and/or slow bowl speeds down to avoid over Counts.

Settle Time: The settle time is the designated amount of time the scale waits after all the product has finished accumulating before weighing the product. To change the value, press the **Settle Tm** button to access the numeric keypad.

Reject Count: To set the Reject Count press the **Reject Count** button and setting the number of rejected material to pass through before the machine stops. Once the number reaches the set amount of allowed rejected bags, the machine will stop and a Warning screen will appear notifying the operator the Reject Count has been reached. Check to see if any adjustments need to be made and touch the screen to start the machine again.

Belt Fast / Slow: The **Belt Fast** and **Belt Slow** buttons are provided in order to increase production and accuracy. The belt speed changes immediately after pressing **ENT** on the numeric keypad if the value has been changed. The fast speed is used to reach the final count quickly, and the slow speed is used for accuracy.

Door Open: Door Open is the amount of the time the accumulator door remains open before it closes. This allows the batch quantity of parts to fully escape the accumulator before it closes. To set the time (in seconds) press **Door Open** to access the numeric keypad, enter the value and press **ENT** to confirm.

Dump Count: Set the target count and number of dumps. The Scale will calculate the number of parts for each intermediate dump.

3.10 Hopper Settings

APP bowls are designed to be mostly empty. Additionally, for consistent accuracy of counts/weights, the parts level in the bowl must be consistent.

The **Hopper Settings Screen** allows for adjustment of the hopper settings, including speed and on and off time. See Figure 3- 9.

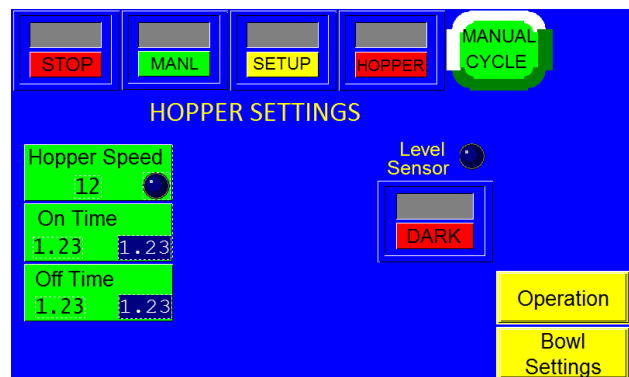


Figure 3- 9

If a hopper or other “pre-feeder” is not included as part of the system, parts must be fed into the bowl at a consistent feed rate so that the volume of parts is consistent. Varying weights in the bowl will cause possible surges of parts when empty and decreased flow when full. This only occurs when running heavier parts. For heavier parts with varying levels, the volume of parts feeding from the bowl will not be consistent causing inconsistent counts and/or weights. Please contact APP to discuss pre-feeding options or corrective measures to improve the operation of the system.

When equipped with a hopper which is sufficient to feed the parts, the Hopper Settings screen will cause the hopper or infeed conveyor to start/stop based on the level sensor, or leveling arm. Because APP provides various types of level sensors, the type of sensor must be matched to the type of parts. APP offers photo eyes which measure distance, proximity sensor which detect presence and mechanical leveling arms which measure volume height. Lighter parts (plastic parts) typically require a photo eye or proximity sensor. Heavier parts work with photo eyes or leveling arms. APP can assist if the level of parts in the bowl is not being measure properly.

With the level of parts being accurately detected, the Hopper Settings will allow for the setting of vibration levels with pan feeders along with the on/off timers for the pan feeder. For hopper /bulk conveyors, the on / off timer will allow for the conveyor on time and then allow for parts to feed to the sensor during off time. The Hopper Settings screen allows for adjustment of the hopper settings, including speed and on and off time.

Note: Hopper Settings can only be accessed under Counter Settings.

Hopper Speed: Press this button to enter a numeric value and adjust the speed of the hopper that distributes parts to the vibratory bowl.

Note: The higher the number, the faster the hopper will vibrate to distribute the parts to the bowl more quickly.

On Time: The amount of time the hopper will continue distributing parts to the bowl after the proximity sensors tell the hopper it is full.

Off Time: The amount of time the hopper will remain resting until it is turned on again.

Level Sensor: The **Level Sensor** toggle button controls the type of sensor that is used in operation. Typically, the Level Sensor should remain on DARK and should not be adjusted during operation.

There are three LED indicators on this screen that help troubleshoot the hopper:

- **Bowl Run:** Indicates whether or not the bowl is running.
- **Level Input:** If this LED is on, input is low. If this LED is off, input is high.
- **Hopper Run:** Indicates whether or not the hopper is feeding into the bowl.

3.11 Eye Test / Eye Settings

The Eye Test must be performed prior to full operation to obtain the minimum length and maximum length of the part to be counted when passing through the eye. The purpose of this is to a) ensure scrap pieces of parts or materials are not counted as a part and b) ensure two parts passing through the eye are not counted as one part.

To perform an Eye Test, turn off the vibratory bowl while leaving the belt running. Neither the bowl nor the hopper can run while an Eye Test is performed. Press the **Eye Test** button from the **Eye Settings Screen** (See Figure 3- 11) and follow the instructions. Randomly drop parts onto the belt. Parts must be loaded manually. The counter will begin counting and measuring the parts. The test will display the last nine counts only and will take the lowest and highest lengths of the tested parts. These will be your minimum and maximum sizes, which are displayed at the bottom of the **Counter Eye Test Screen** (Figure 3- 10) after each test.

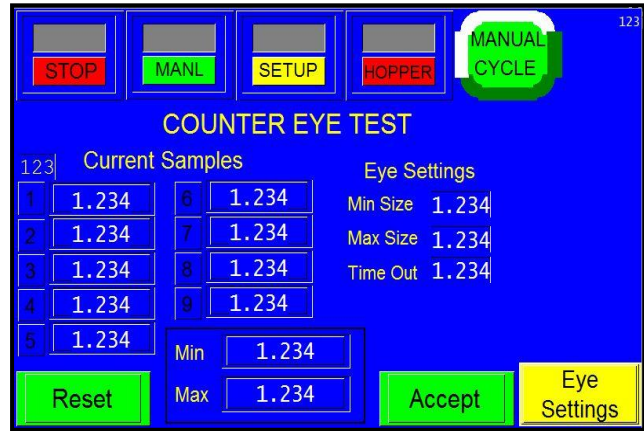


Figure 3- 10

Minimum Size: The minimum size is used to filter scrap. For example, if, through testing, the minimum value detected was 0.2, setting the value to 0.1 would cause parts that are 0.1 or less to not be counted. If the minimum setting is too close to the actual minimum test value, however, some parts may not be counted, causing Over Counts. Setting the minimum setting to zero will cause all parts to be counted.

Maximum Size: The maximum size is used to count parts connected or parts falling through the eye together (overlapped) as two parts. For example, if, when testing the parts length, the maximum value was determined to be 0.5, you could set the maximum setting to 0.8. Then, if two parts overlapped through the eye with a size of 0.9, they would be counted as two parts. However, if you set the maximum setting too close to the maximum value, one part may be counted as two, causing undercounts. To disable this function, set the maximum value to zero.

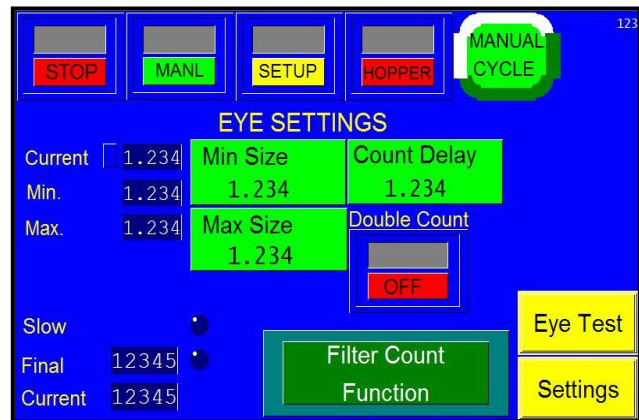


Figure 3- 11

Note: Min and Max are NOT the same as Min Size and Max Size. Min and Max display the results of each eye test. Min is the smallest size recorded during the test and Max is the largest size recorded during the test. The values for Min Size and Max Size are determined through a formula based on the results of the eye test, and they function as part of the eye settings and affect operation. Min Size is 80% of the Min measurement. Max Size is 160% of the Max measurement.

If Min and Max do not change after performing multiple eye tests, press the **Accept** button to accept those settings, which will then be displayed on the Eye Settings screen. Pressing the **Reset** button will zero the Current Samples values. To manually enter minimum and maximum settings, press the green **Min Size** and **Max Size** buttons on the Eye Settings screen. Enter a value into the numeric keypad and press **ENT**.

*Note: For more detailed information on eye testing and eye settings, refer to the **Detailed Setup Procedure** in the Appendix.*

Final and Current on the **Eye Settings Screen** display the count. Final is the preset number. Current is the count the machine is processing.

Pressing the large green button that displays either **Small Parts Function** or **Filter Count Function** will display a Counting Change Mode message. Press the message to return to the Factory Settings screen. The button will have changed to either **Small Parts Function** or **Filter Count Function**, depending on what the button displayed initially. Press **Filter Count Function** to change the counting mode from Filter Count Function to Small Parts Function. This will zero the Eye Settings. Press **Small Parts Function** to change the counting mode from **Small Parts Function** to **Filter Count Function**. This will start an **Eye Test** that will set minimum and maximum size.

Setting the counting mode to **Small Parts Function** allows the PLC to detect small inputs from the eye faster and more reliably. The **Small Parts Function** causes the eye to read every part, regardless of the size, as one part. For example, if a toothpick and a pencil pass through the eye, the toothpick would be counted as one part and the pencil would be counted as one part, despite their different lengths and widths.

The **Slow LED** displays when the counter reaches the **Slow Count**. The **Final LED** displays when the counter reaches the **Final Count**. For example, if the operator has set the **Final Count** to 50, meaning the counter will stop operation once 50 parts are counted, and the **Slow Count** to 40, meaning the bowl and/or belt will slow down for the last ten counts to ensure counting accuracy, the **Slow LED** will display when the count reaches 40 and the **Final LED** will display when the count reaches 50.

3.12 Counter Operation Screen

The **Counter Operation Screen** allows the operator to monitor operation, begin operation and stop the system from running. See Figure 3-12.

Top line toggle switches appear on most screens throughout the program. These toggle switches include the **RUN/STOP** button, **MANL/AUTO** button, **AUX** button and the **HOPPER** button.



Figure 3- 12

- **RUN/STOP:** This toggle button changes the current state of the counter's operation. To start the counter, toggle the button to RUN. To stop the counter, toggle the button to STOP.
- **MANL/AUTO:** This toggle button switches operation to Manual or Automatic mode. In Automatic mode, the counter will cycle in a continuous mode (if AUX is OFF) or in a closed loop communication mode (if AUX is ON). To run with a bagger or conveyor, this switch must be in the AUTO position. In Manual mode, the operator must press the **Manual Cycle** button to cycle the machine.
- **AUX:** To set up communication with the bagger, conveyor, or other equipment (including the CW scale), the **AUX** toggle button must be in the green ON position. If you wish to operate the unit as a standalone machine, then the **AUX** toggle button must be in the grey OFF position. For setup, place the **AUX** button in the OFF position.
- **HOPPER:** If equipped with a hopper or hopper/conveyor system, the toggle button must be in the green ON position. However, even in the ON position, the hopper will turn on only if the

bowl is in fast operation mode and the leveling switch is ON. To turn the hopper OFF, toggle this button to the grey OFF position.

Manual Cycle: Press this button to manually cycle the counter. If the final count has been reached, the unit should cycle. Before running the counter in a “system,” the counter should be cycled several times as a standalone unit to test parts flow and count accuracy. The **Manual Cycle** button can be pressed any time during the count sequence.

The Counter Operation screen displays the preset number of batch counts before operation will stop, displayed in the right box under **Count**, the remaining number of batch counts, displayed in the left box under **Count**, and the total number of parts processed during the cycle, displayed under **Total Parts**. A message will be displayed when the preset count has been reached. Pressing the **Reset** button will zero the Totals Parts count. The status of the accumulator, bowl and hopper are also displayed on this screen.

Bowl serves as an indicator for the status of the bowl speed. When STOP is displayed, the bowl is off. When RUN is displayed, the bowl is on.

Hopper serves as an indicator for the status of the hopper. When HOPPER displays STOP, the hopper is off. When HOPPER displays RUN, the hopper is on.

Accumulator serves as an indicator for the status of the accumulator. When CLOSED is displayed, the accumulator is in Closed mode. When OPEN is displayed, the accumulator is in Open mode.

If the pass code function is enabled, the Operation screen will automatically be displayed after the password timeout period, which can be adjusted on the Password Setup Screen, has expired.

3.13 Check-Weigh Operation Screen

The **Counter / Check-Weigh Operation Screen** displays the status of the product in the scale as Under in yellow, Accept in green, and Over in red. Also displayed is the Eye Count, which displays the number of product as it passes through and the current and last check weigh weights (measured in grams). The Bag Count, Production Time and User ID can also be reset from this screen. See Figure 3- 13.

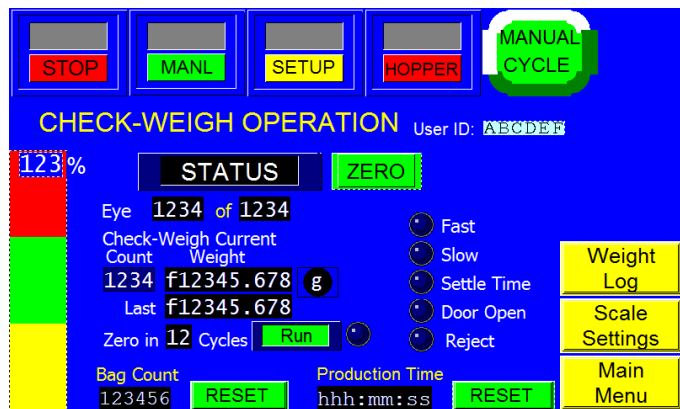


Figure 3- 13

3.14 Scale Operation Screen

In this screen, the scale status is displayed as either Over, Accept, or Under. The scale can also be zeroed from here as well by ensuring the scale is empty and then pressing the **Zero** button. The bar on the side displays the percent of what is in the scale. See Figure 3-14.

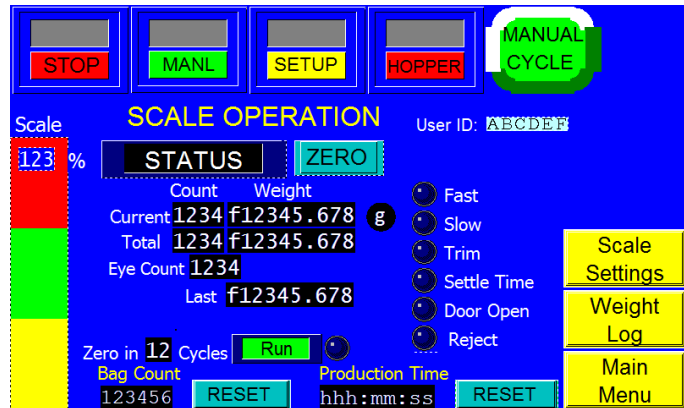


Figure 3- 14

3.15 Part Sample

This machine is capable of taking a weight for several parts and calculating the average weight of the individual pieces of the product. This function can be found in both the Check-Weigh and Scale modes. See Figure 3- 15. Part sample can be determined in two different ways:

- Put number of parts on the scale and enter quantity. The weight of one part will be calculated.
- Manually enter known part weight on the screen.

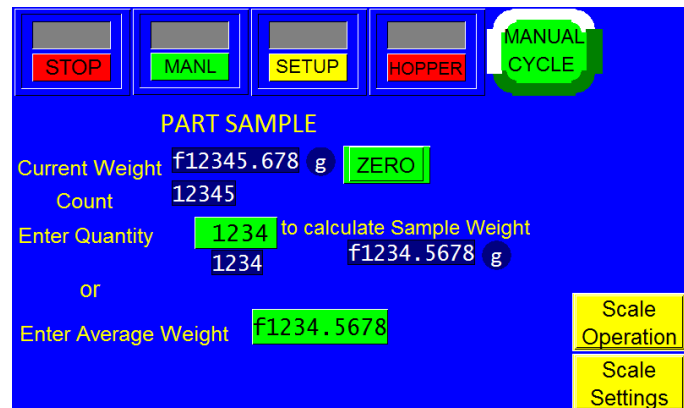


Figure 3- 15

Method One: Start out by pressing the **ZERO** button to zero the scale. Then, place several pieces of the product on the scale and wait for the weight to register. Click on the “Enter Quantity” button, and type in the number of pieces of product being weighed using the keypad. The machine will come up with an average weight for each individual piece. This function can be found in both the Check-Weigh and Scale modes.

Method Two: Again, start by pressing the **ZERO** button, and by placing several pieces of product on the scale. Click on the “Enter Average Weight” button and type in the known weight of the product.

Note: This will only work with multiple pieces of the product

Note: Part sample weight can be set in grams, pounds, or ounces.

3.16 Counters Screen

The UCS-2400 is equipped with a start-up counter that allows for system startup (numerous counters), a batch counter that counts the machine cycles, a parts counter that counts the individual parts and a maintenance counter that cannot be reset. The **Counters Screen** allows for display and adjustment of the Start-up Counter and the Preset Count. See Figure 3- 16.

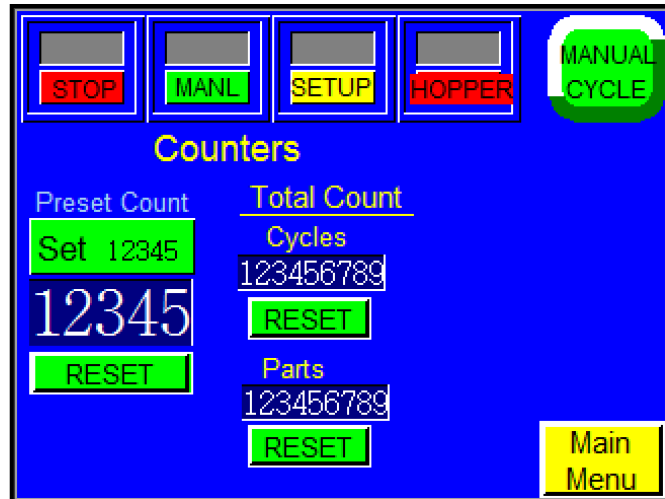


Figure 3- 16

Startup Counter: When in a system comprised of numerous parts counters feeding a compartment or bucket conveyor, the counter can be set up to begin operations when a preset number of “empty” compartments or buckets go by each counter “station.” The counter will “wait” a predetermined number of cycles before it starts running. A station number can be set so that the counter will begin operation only after that preset number of input signals is received. Press the green button below Start-up and use the numeric keypad to set the station number. When the Start-up function is **ON**, the auxiliary communication is suspended until the Start-up count has been reached. When the count is reached, normal auxiliary communications resume and the Start-up function will automatically switch **OFF**. Additionally, when the Start-up function is first switched **ON**, the current start-up, counts, functions and batch values are reset to their respective set values. Pressing the **Reset** button will reset the Start-up value.

Preset Count: The number of parts desired in one “batch” or bag. Press the green button under Preset Count and use the numeric keypad to enter a preset value. Press **Reset** to zero this value. If the Preset Count is set to zero, the LED will turn off, indicating that there is no preset count. If the Preset Count is set to one or higher, the indicator light will turn on, indicating that a preset count has been set.

Total Count: The Cycles total shows how many cycles have occurred since the counter was reset. Press the **Reset** button to zero this value. The Parts total shows the number of parts that have run through the eye since the counter was reset. Press the **Reset** button to zero this value.

Aux Out: The **Aux Out** button will display either READY or HOLD (or OFF if there is no auxiliary equipment). When Aux Out displays READY, the counter is ready to drop parts. When Aux Out displays HOLD, the counter is still cycling.

3.17 Recipe List / Recipe Search Screens

The UCS-2400 is equipped with memory storage to save the settings for 96 different parts. A part number can be assigned to each part for easy reference. The saved recipes can be located under the **Recipe List** button (see Figure 3- 18), and displayed on the Recipe List Screen (Figure 3- 17). To access a specific recipe from this screen, write down the exact name as it appears in the Recipe List Screen. Go back to the Main Menu and access the **Recipe Search** button.

Search for recipes by accessing the **Recipe Search** button on the **Main Menu**. From here the operator can enter a recipe name and press **Search**. See Figure 3- 18. The search will produce a list of matches; select recipe by tapping on it.

Note: The Part No entered must be exactly as it is listed in the Recipe List.

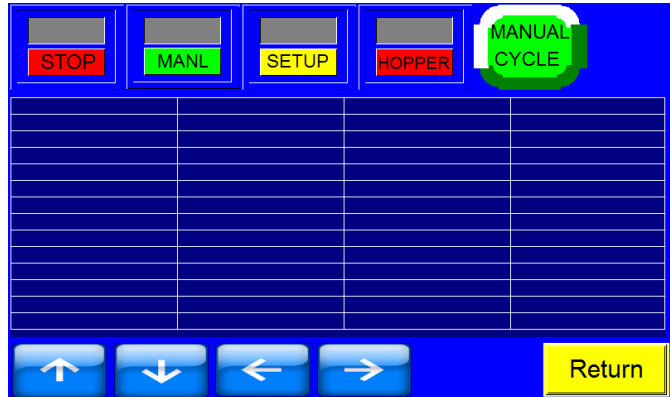


Figure 3- 17

The previous recipe can also be viewed in the bar that displays **“Previous”**.

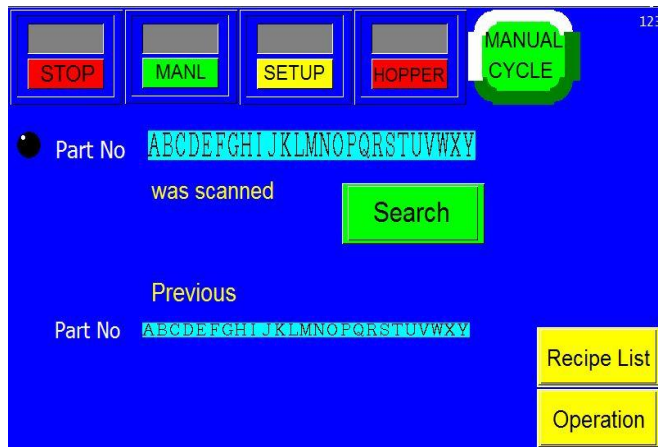


Figure 3- 18

Job Save Function: When all settings have been created and tested, press the **View Settings** button, located on the Settings Screen. A listing of jobs will be shown as follows:

View Settings (Figure 3- 19) displays the stats of the current settings for the current job. From here, there is an option to save these settings to recall later in the recipe log. To save, enter a name for the part, a note to identify the recipe and a quantity. Then touch **Save** and the settings will be stored. This function can be found in the **Main Menu** under **Settings** in all three modes under the **View Settings** button.

- **Part.:** Each column of the part save/recall screen is numbered and describes a memory address/order.
- **Note:** Enter a note for your reference.



Figure 3- 19

To save a job to a memory address that has no settings saved, press the field located to the right of the number (No.). Enter a part number that you will reference at a later date.

Note: You can also save the settings over a previously saved job, but this will cause the previous settings to be lost.

Job Recall Function: To recall a job that has already been saved, press the field that has your part number displayed. Then press the **View** button to display the settings. See Figure 3- 20. From this screen, you can run / load the job by pressing the **Load** button.

If you attempt to load a job that does not exist, an error message will be displayed.



Figure 3- 20

3.18 Memory Files and Data Structure

While the information related to machine settings may be stored internally on the PLC or externally on a USB Memory Stick (Flash Drive) is similar in content, the data structures and methodology are different.

PLC Storage

Information regarding the settings for a particular job, such as Fill Time, Seal Temperature, and Bag Length, are stored in the PLC as data files of various types. These data types include:

- Integers – data type used to store whole numbers
- Floating Point – data type used to store decimal numbers
- Strings – an array used to store characters

These data files are stored in PLC memory (see Figure 3- 21) and are accessible to the Ladder Logic of the PLC Program File.

PLC Memory

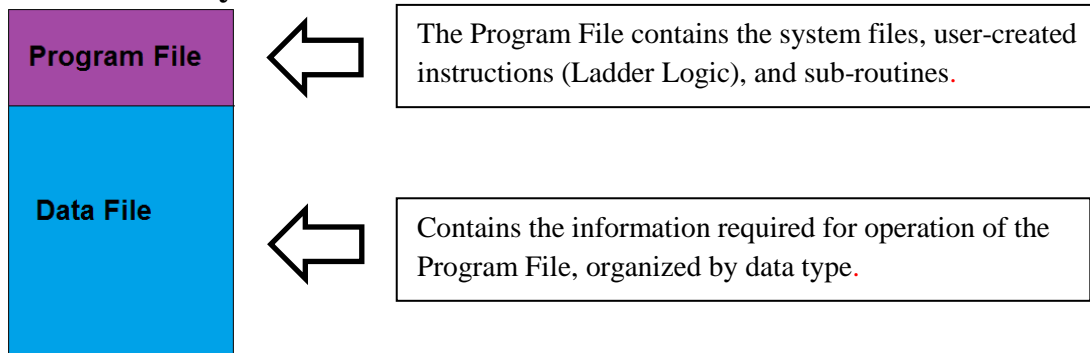


Figure 3- 21

External Storage

The Memory Stick contains several types of data from the machine. The machine settings are stored similar to the information in PLC Storage. There are also files for the additional functionality of Recipe Management, and information on Alarm and Production Data. To access this information, plug in the memory stick from the bagger to your PC and open the DAT0000 folder. There will be a list of folders that have been set up by the touch screen program, (see Figure 3- 22). The two folders that contain the Recipe Data and Production Data are called Recipe and Sample.

Inside DAT000 Folder:


















| Name | Folder Name | Contents |
|---|-------------|--|
|  BITMAP | BITMAP | Pattern (bitmap) data |
|  CARD | CARD | Recipe data using the V6-compatible memory manager function |
|  DISP | DISP | Screen data |
|  FONT | FONT | Gothic fonts or language data |
|  HDCOPY | HDCOPY | Hard copy image (JPEG/BIN format selectable for 128-color display) |
|  JPEG | JPEG | JPEG file (except for some models) |
|  LADDER | LADDER | Ladder data associated with the ladder monitor function |
|  MEMO | MEMO | Memo pad data |
|  MSG | MSG | Message file |
|  OPELOG | OPELOG | Operation log file |
|  RECIPE | RECIPE | Recipe data |
|  OPELOG | SAMPLE | Data of data logging and alarm history |
|  RECIPE | | Title file |
|  SAMPLE | | Header file |
|  SCRN | | Screen file |
|  SRAM | | Component parts (macro blocks, sampling messages) |
|  WEBSERV | | 3D parts file |
| | | Windows font file (graphics, messages) |
| | SRAM | Backup copy of SRAM |
| | WEBSERV | Files to be accessed from the Web browser |

Figure 3- 22

BITMAP, CARD, DISP, FONT, HDCOPY, JPEG, LADDER, MEMO, MSG, OPELOG, SCRN, SNAP, SRAM, WAV, and WEBSERV are folders used by the touch screen software and will appear empty on the PC. This is because the files are hidden to prevent damage, and therefore do not show up in Windows Explorer. Do not store any information in these files as it will alter the program and will not function when the memory stick is re-inserted in the touch screen.

Note: These hidden files include types used to store images, fonts, functions, database information, and macros that are used to control the Touch Screen, so it is important to not accidentally over-write these files.

RECIPE—contains REC0000.CSV which is a list of all the jobs / recipes saved to the USB memory stick as a .CSV (Comma-Separated-Values) file. This file type is essentially just a table of data in plain text where the values are separated by commas, as in the following example:

Item 1, Item 2, Item 3

This type of file (CSV) can be opened as an Excel spreadsheet.

To access this information, open the <**Recipe**> directory, and then on <**REC0000**>, this will open an Excel file containing all the information pertaining to each job as it was saved on the bagger. This file must be saved (copied) to the PC without the original file changed. Once the file has been saved as a different name than the original, then the operator can use the file and save it as a MS Excel file for full use of the MS Excel formulas.

On the spreadsheet, each row is a separate job / recipe that has been saved in the USB mode on the Bagger, and the columns list all the specifications as it was set on the bagger. Information for each of the jobs starts at column “C” and goes all the way through column “DU”. Some of the common settings are in column C-QTY, AF-Blow-off, AG-Seal Point, AH-Reverse, AI-Seal Temp, AJ-Index Speed, AK-Fill Time, AL-Seal Time, AM-Air Pulse, AN Bag Length, AS-Feed Distance, AT-Seal Delay, AU-Cool Time, AV Reverse Delay, AW-Temp Range, AY-Aux Out.

Note: The program does not save headings for the information being recorded. Also, the data logged is specific to each job; more data is acquired the longer the machine is run. It is recommended that you record each setting for your initial job. This information will be used the first time the spreadsheet is viewed by matching / updating the data to improve your records.

Note: DO NOT change the data in the memory stick. However, you can copy the files and past them into a folder on your PC and then use MS Excel to manipulate the data.

Note: If you are going to change anything on this file, remember to “Save As” a different name to keep the original intact.

SAMPLE—contains .BIN files and .CSV files. The .BIN files are data files stored in a binary format, and should not be accessed. Use the .CSV files to view the spreadsheet for each file that contains a different kind of data. The files are:

- **Cycle Log – SMP0003.CSV**
- **Production Time Log – SMP0004.CSV**
- **Event Logs – SMP0005.CSV, SMP0006.CSV and SMP0007.CSV**
(see below for full description of these .CSV files).

This data can be used to provide information about the machine, including number of parts per month. However, these files must be saved (copied) to a PC without the original file changed. Then, the files can be used and saved as MS Excel files for full use of the MS Excel formulas.

Note: There are .BIN files and .CSV files in the Sample folder. DO NOT try to open or change the program used to run the .BIN files. This is the file the touch screen uses to read the information and if it is changed the program will no longer recognize the file. Use the files that have been saved as .CSV.

Note: If you wish to change the data listed in the spreadsheet, “Save As” a different name, then make your changes, keeping the original intact.

Note: Some files may not be used depending on the options of the machine. For instance, if your machine does not have a scale, you will not have any information recorded in the SMP0003.CSV file.

SMP0003.CSV Cycle Log – records every Scale production cycle. (See Figure 3- 23). The data recorded in each column is as follows:

- A. Date & Time—Records when the occurrence happened
- B. Production#--the number assigned to the production run.
- C. Part#--the number to identify each part.
- D. Part weight—the weight of the part
- E. Target quantity—records the quantity that is to go in the bag.
- F. Actual quantity—records the actual quantity that is in the bag.
- G. FULL/PARTIAL mode—records if the kit is in Full or Partial mode.

Note: There is a Backup Period every day at midnight. A new backup file with full day data is created; old data is then cleared from the buffer to start the new day. Previous records are not erased. Cycle count and timing start over from Zero every day.

| | A | B | C | D | E | F | G |
|----|-------------------|---------|-------|----------|----|---|---------|
| 1 | No.003 | | | | | | |
| 2 | 14/ 7/25 10:19:14 | | 44 | 0 | 22 | 6 | FULL |
| 3 | 14/ 7/25 10:21:16 | | 55 | 0 | 22 | 6 | FULL |
| 4 | 14/ 7/25 10:21:28 | | 55 | 0 | 22 | 6 | FULL |
| 5 | 14/ 7/25 11:13:58 | | 55 | 0 | 22 | 6 | FULL |
| 6 | 14/ 7/25 11:14:17 | | 55 | 0 | 22 | 6 | FULL |
| 7 | 14/ 7/25 11:29:06 | | 55 | 0 | 22 | 6 | PARTIAL |
| 8 | 14/ 7/25 11:36:22 | | 55 | 0 | 22 | 6 | PARTIAL |
| 9 | 14/ 7/25 11:41:22 | PROD NO | 55 | 0 | 22 | 6 | PARTIAL |
| 10 | 14/ 7/25 11:46:30 | PROD NO | 55 | 0 | 22 | 6 | PARTIAL |
| 11 | 14/ 7/25 11:51:49 | PROD NO | 55 | 108475.2 | 22 | 6 | PARTIAL |
| 12 | 14/ 7/25 11:52:39 | PROD NO | 55 | 108475.2 | 22 | 6 | PARTIAL |
| 13 | 14/ 7/25 11:55:11 | PROD NO | 55 | 108475.2 | 22 | 6 | PARTIAL |
| 14 | 14/ 7/25 12:04:45 | PROD NO | 12345 | 108475.2 | 22 | 6 | PARTIAL |
| 15 | 14/ 7/25 12:06:17 | PROD NO | 55 | 108475.2 | 22 | 6 | PARTIAL |
| 16 | 14/ 7/25 12:06:39 | PROD NO | 55 | 108012.1 | 22 | 6 | PARTIAL |

Figure 3- 23

SMP0004.CSV Production Time Log – records the length of time the machine has been in production and gives details on the length of time the machine has been in the modes listed below. (See Figure 3- 24) The data recorded in each column is as follows:

- A. Date & Time—records the date and time the mode was switched.
- B. Power On time—the length of time the power has been turned on.
- C. Auxiliary mode time—the length of time the machine has been in Aux Mode.
- D. Auto mode time—the length of time the machine has been in Auto Mode.
- E. Manual mode time—the length of time the machine has been in Manual Mode.
- F. Stop time—the length of time the machine has been in Stop Mode.
- G. Setup time—the length of time the machine has been in Setup Mode.
- H. Power On total cycles—the number of cycles made since the machine has been powered on.
- I. Auxiliary mode cycles—the number of cycles made since the machine has been in Auxiliary Mode.
- J. Auto cycles—the number of cycles made since the machine has been in Auto Mode.
- K. Manual cycles—the number of cycles made since the machine has been in Manual Mode.
- L. Setup cycles—the number of cycles made since the machine has been in Setup Mode.

| | A | B | C | D | E | F | G | H | I | J | K | L |
|----|-------------------|-------|---|---|------|-------|------|---|---|---|---|---|
| 1 | No.004 | | | | | | | | | | | |
| 2 | 13/ 9/ 6 14:20:30 | 14645 | 0 | 0 | 1252 | 12049 | 1344 | 0 | 0 | 0 | 0 | 0 |
| 3 | 13/ 9/ 6 14:20:35 | 14650 | 0 | 0 | 1252 | 12049 | 1349 | 0 | 0 | 0 | 0 | 0 |
| 4 | 13/ 9/ 6 14:20:46 | 14661 | 0 | 0 | 1258 | 12049 | 1354 | 0 | 0 | 0 | 0 | 0 |
| 5 | 13/ 9/ 6 14:20:49 | 14664 | 0 | 0 | 1261 | 12049 | 1354 | 0 | 0 | 0 | 0 | 0 |
| 6 | 13/ 9/ 6 15:01:52 | 2449 | 0 | 0 | 0 | 2449 | 0 | 0 | 0 | 0 | 0 | 0 |
| 7 | 13/ 9/ 6 15:01:55 | 2453 | 0 | 0 | 0 | 2453 | 0 | 0 | 0 | 0 | 0 | 0 |
| 8 | 13/ 9/ 6 15:08:04 | 2822 | 0 | 0 | 0 | 2822 | 0 | 0 | 0 | 0 | 0 | 0 |
| 9 | 13/ 9/ 6 15:08:07 | 2825 | 0 | 0 | 0 | 2825 | 0 | 0 | 0 | 0 | 0 | 0 |
| 10 | 13/ 9/ 6 15:08:10 | 2828 | 0 | 0 | 0 | 2828 | 0 | 0 | 0 | 0 | 0 | 0 |

Figure 3- 24

SMP0005.CSV, SMP0006.CSV and SPM0007.CSV Event Logs – records every Bagger fault event during operation, (See Figure 3- 25). The data recorded in each column is as follows:

- A. Fault description—the name of the error that has occurred.
- B. Occurrence time—the initial time the occurrence happened.
- C. Clear time—the time the error was acknowledged / reset. *Note: Dashes (---) or asterisks (***) in a field on the spreadsheet indicate no data was recorded for that error.*

Note: There is a Backup Period on 1st of the month at midnight a new backup file with the event list is created. Then old data is cleared from the buffer to start new month.

| Microsoft Excel - Home Insert Page Layout Formulas Data | | | |
|---|-------------------|-------------------|-------------------|
| Clipboard: Cut, Copy, Paste, Format Painter | | | |
| Font: Calibri, 11, Bold, Italic, Underline, Paragraph, Styles | | | |
| Formula Bar: A1, No.005 | | | |
| | A | B | C |
| 1 | No.005 | | |
| 2 | Frame open | 14/ 7/29 13:55:16 | ----- |
| 3 | Waiting for label | 14/ 7/29 13:56:47 | 14/ 7/29 13:57:01 |
| 4 | Frame open | 14/ 7/29 14:33:38 | ----- |
| 5 | Frame open | 14/ 7/29 14:43:38 | ----- |
| 6 | Frame open | 14/ 7/29 14:46:27 | ----- |
| 7 | Frame open | 14/ 7/29 14:51:00 | ----- |
| 8 | Frame open | 14/ 7/29 14:55:01 | ----- |
| 9 | Frame open | 14/ 7/29 15:03:28 | ----- |
| 10 | Frame open | 14/ 7/29 15:17:12 | ----- |

Figure 3- 25

Manual Backup: Data is recorded and saved automatically as described above. It can also be done manually using buttons on Log screens:

- **'Write'** - overwrite (save) the same file
- **'Backup'** - create new file (save as)
- **'Record'** - add a new record
- **'Reset'** - clear buffer.

3.19 Production Screen

Press the **Production Graph** button on the **Main Menu** screen to display the **Production Graph Screen** (Figure 3- 26), which features a graph that shows the batches per minute performed over an eight-hour period.

Press the left arrow key to scroll back one hour at a time to review past production. Press the right arrow key to check more recent production information.

Press the **Reset** button once to reset the production time and twice to reset the graph.



Figure 3- 26

3.20 Counter Auxiliary Options Screen

The UCS-2400 is equipped to operate within a system for fully automatic parts counting. From the **Auxiliary Options Screen**, the type of communications that match the equipment you are running the counter with can be set up. See Figure 3- 27.

Out Delay: This timer delays the output of the counter to allow the parts to settle once they have been dropped from the accumulating funnel of the counter. Increase this delay timer if the bagger is cycling before the parts are in the bag, for instance.

Aux Out: When **Aux Out** displays READY, the counter is prepared to drop parts to the auxiliary equipment. When **Aux Out** displays HOLD, the counter is still cycling. When **Aux Out** displays OFF, no auxiliary equipment is present.

Aux In: When **Aux In** displays READY, the auxiliary equipment (i.e. bagger) is prepared to operate. When **Aux In** displays HOLD, the auxiliary equipment is still cycling. **Aux In** displays OFF when no auxiliary equipment is present.

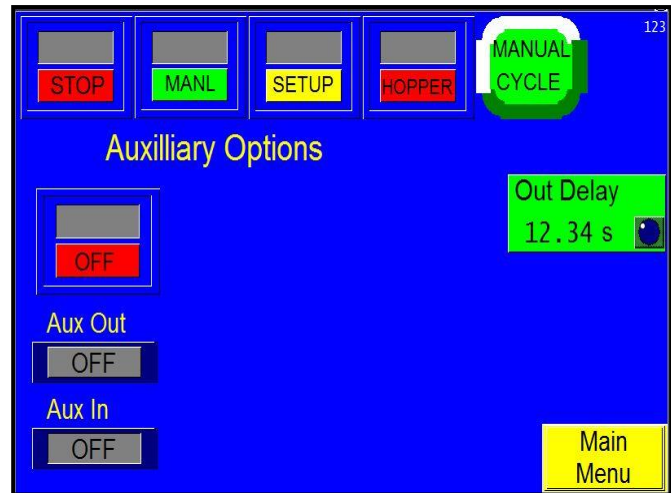


Figure 3- 27

3.21 Technical Assistance Screen

The **Technical Assistance Screen** (Figure 3- 28) provides for operator information, factory settings adjustments, functions testing and troubleshooting. The screen is protected from access with a Level 1 password. The password is set by default (from the factory) to 1001. This code can and should be changed when the system is put into operation.

The **Technical Assistance Screen** displays the current touch screen (TS) program version and Programmable Logic Controller (PLC) versions. This information should be shared with an APPI service technician when requesting technical assistance. Contact information is also provided to receive technical service via phone or mail.



Figure 3- 28

3.22 Password Setup Screen

Advanced Poly-Packaging, Inc. (APPI) has included a pass code function in all touch screen equipment to prevent operators from changing settings. There are two pass code levels described as follows:

1. Level 1: This is the highest-level pass code which prevents operators from accessing the Technical Assistance functions of the machine. The default pass code, when shipped from the factory, is 1001. See Figure 3- 29
2. Level 2: This level pass code, when the pass code function is enabled, prevents the operator from accessing settings screens that affect the operation of the equipment. See Figure 3- 30.



Figure 3- 29

Pass codes prevent unauthorized individuals from tampering with settings. When equipment is shipped, APPI uses the following codes which should be changed prior to putting the T-1000 into operation. Factory Set Pass Codes:

- Level 1 pass code: 1001
- Level 2 pass code: 1002

To enable the pass code function, press the **Technical Assistance** button from the **Main Menu**. Type in the Level 1 pass code (1001 by default from APPI). Press **Pass Word Setup**, then press ON to toggle the pass code function ON. See Figure 3- 32. Once the pass code function is enabled, the operator will have a programmed amount of time (time- out time) to make changes. Once this time has elapsed, the **Operation Screen** will automatically be displayed.



Figure 3- 30

This time can be changed by accessing the **Pass Word Setup Screen**, pressing **PW Timeout**, and entering the new value on the green numeric keypad. Press **Enter** to confirm, **CLR** to clear the value and **Exit** to cancel. To Change the password Press either **Level 1 PW** or **Level 2 PW** depending on which code you would like to change. This will access a green numeric keypad where the current pass code will be displayed in the box to the right. Type in the new pass code and press **ENT** to confirm.

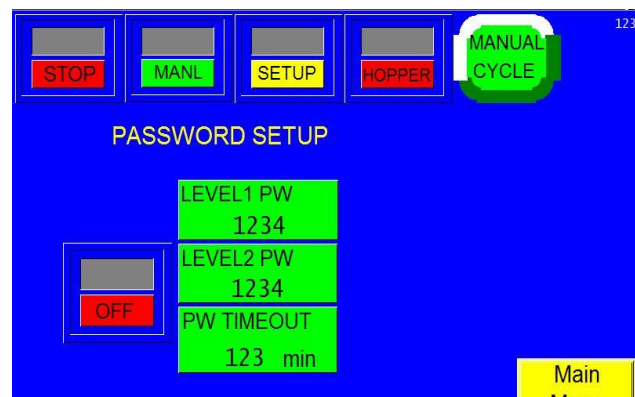


Figure 3- 31

Note: If you change the pass codes, ensure that these codes are written down.

If you misplace or forget the pass codes, contact the APPI Service Department for assistance. APPI will provide a “factory code” so that the current pass codes can be displayed. Once you receive the factory code, ensure all top buttons are set in off mode (STOP-MANL-SETUP) then press MANUAL CYCLE three times, to show the Enter Level 2 Password screen. Enter the factory code APPI provided.

3.23 PLC I/O Status Screen

The UCS-2400 inputs and outputs are illustrated on the I/O Status Screens. These screens assist in the troubleshooting of the equipment and assist APPI service technicians in helping operators or maintenance personnel. See Figure 3- 32, Figure 3- 33, and Figure 3- 34. During the cycle operation of the UCS-2400, the input and output conditions are illustrated with LEDs. To determine what each LED indicates, press the row of LEDs. A short description is provided.

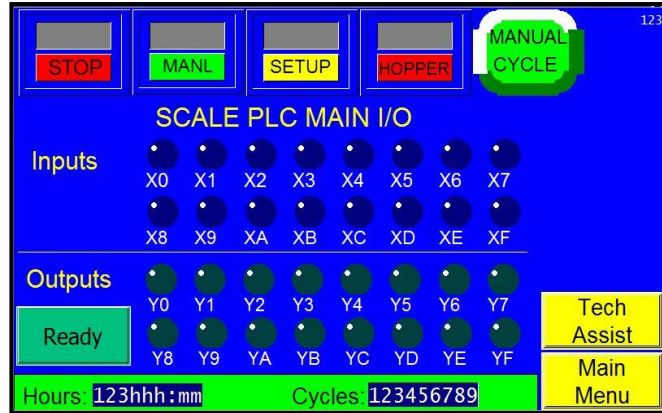


Figure 3- 32

The PLC I/O descriptions list the current configurations of the PLC Inputs and Outputs.

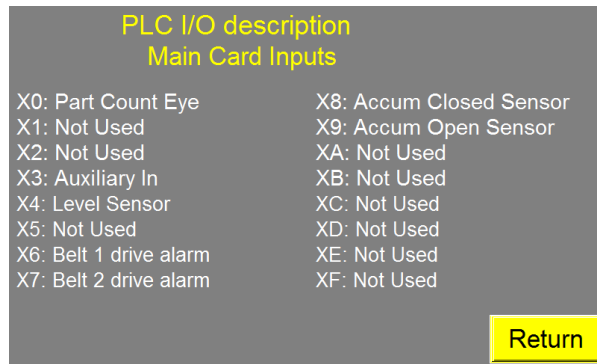


Figure 3- 33

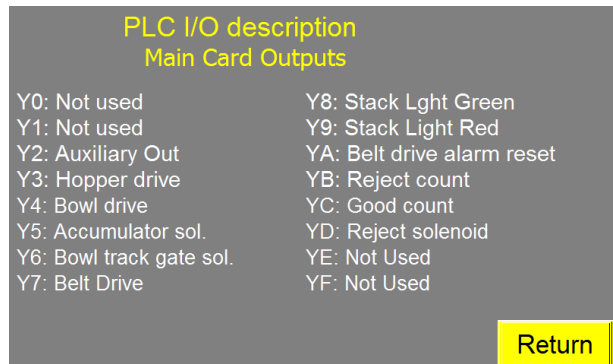


Figure 3- 34

3.24 APPI Factory Screen

The settings on this screen are additional settings that should only be set by qualified technicians or by the factory. See Figure 3-35.

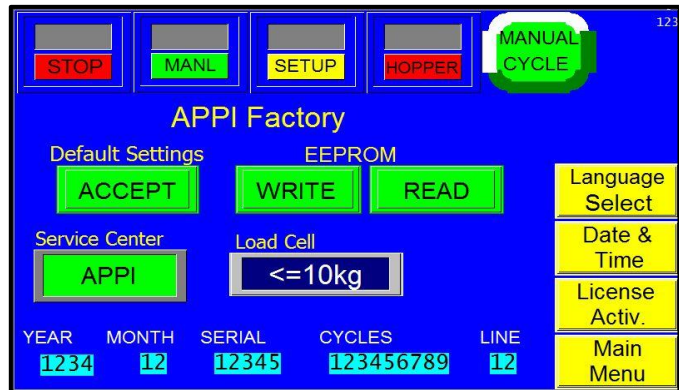


Figure 3-35

3.25 Factory Settings

The Factory Settings screen displays additional counter settings that should only be set by qualified technicians or by the factory. See Figure 3-36.

Operation Mode: The UCS-2400 can operate in three different modes; Counter, Check-Weigh, and Scale. This button changes the mode.

User ID: This toggle button will turn the User ID option ON / OFF.

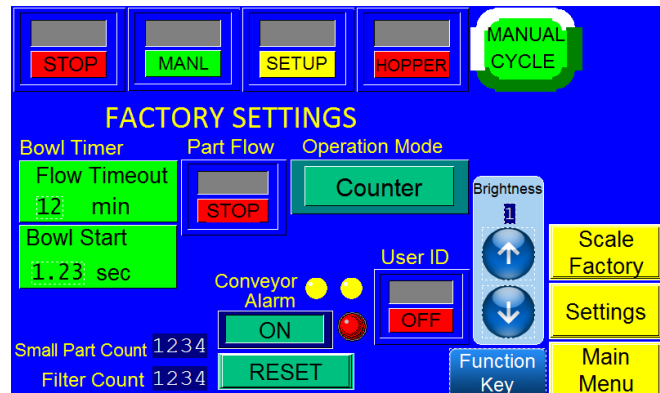


Figure 3-36

Bowl Off: This timer will turn the bowl off after a specified number of minutes that the eye does not detect any parts passing through it. This setting can be adjusted by pressing the **Bowl Off** button and entering a value into the numeric keypad.

Bowl Start: The Bowl Start Timer will start the bowl vibration. This setting can be adjusted by pressing the Bowl Start button and entering a value into the numeric keypad.

Conveyor Alarm: Toggle this button to the ON position to monitor the frequency of warning signals.

Small Parts Count: Displays the number of parts processed when the counter is set to Small Parts Function.

Filter Count: Displays the number of parts processed when the counter is set to Filter Count Function.

3.26 Scale Factory Settings

The **Scale Factory Settings Screen** is considered an additional settings screen, and should only be accessed by qualified service personnel. See Figure 3- 37.

The **Calibration Screen** (Figure 3- 38) for the scale (also called a Load Cell) can be accessed from the **Scale Factory Settings Screen**. The following step-by-step procedure must be followed closely to properly calibrate the scale.

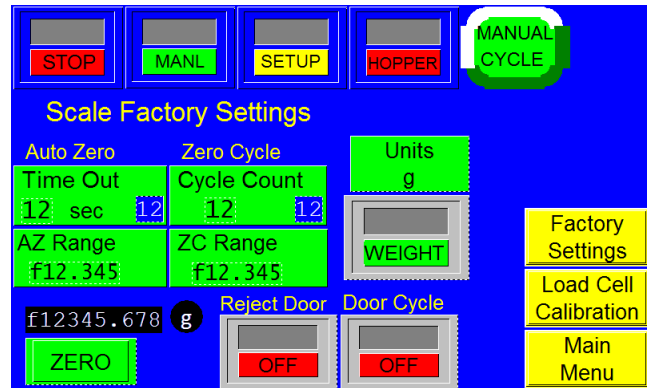


Figure 3- 37

A known metric calibration weight (in grams) must be used to properly calibrate the scale. The actual weight may vary, but it should be at least 1000 grams. This weight may vary depending on the magnitude of the load cell. Contact APPI Tech Support to discuss the calibration weight used during this procedure. This weight may also be purchased from APPI.

Calibration Procedure:

1. From the **Main Menu**, press the **Technical Assistance** button.
2. On the **Technical Assistance** screen, press the **Scale Factory** button.
3. On the **Scale Factory Settings Screen**, press the **Load Cell Calibration** button.
4. Follow the instructions displayed in the yellow prompt bar.
5. Press the **START CAL** button located near center left of the screen.
6. Wait for the prompt message **New Zero**. When the **New Zero** message appears, press the **ENTER** button.
7. Wait for the **Cal Weight** prompt.
8. Place the sample weight on the scale. The weight must be between 1000 and 9000 grams and must weigh exactly what will be entered in the next step.
9. Press the **Calibration Weight** button located under the **ENTER** button.
10. Enter the exact **Calibration Weight** that was placed on the scale in the previous step and press the **ENTER** button.
11. When the prompt message “**Cal OK**” appears, press the **ENTER** button.
12. When the prompt message “**Save?**” appears, press the **ENTER** button.
13. When prompt message “**Exit Setup?**” appears, press the **ENTER** button.
14. Once the weight displays the same as the sample weight, press the **END CAL** button located on the right center of the screen.

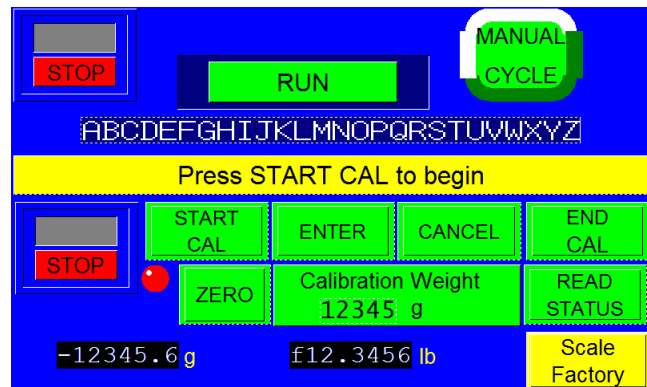


Figure 3- 38

This ends the calibration procedure. **RUN** should now be displayed in the top center of the screen. The scale can now be run with a known weight for testing in operation mode.

3.27 Production Logs

Pressing the **Log Menu** button on the **Main Menu** screen takes the operator to the Log Menu (Figure 3- 39). From that menu, proceed to the **Production Log Screen** (Figure 3- 40), which displays the time and frequency of a particular operation. Alarm Status and Alarm Data can also be viewed from this screen.

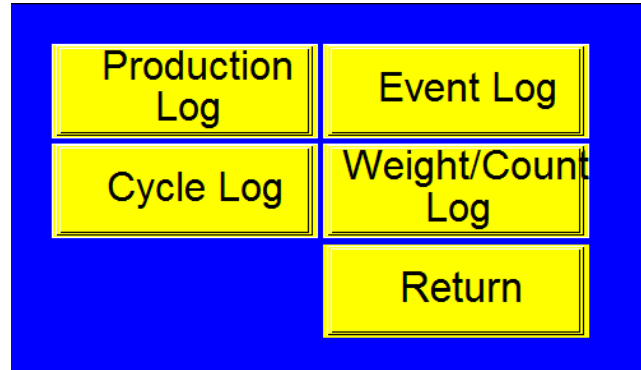


Figure 3- 39

The Production Log Screen displays times for:

- Power On
- Auto Operation/Aux On
- Auto Operation/Aux Off
- Manual Operation
- Stop
- Setup

The **Production Log Screen** provides direct access to the **Alarm Status** screen.

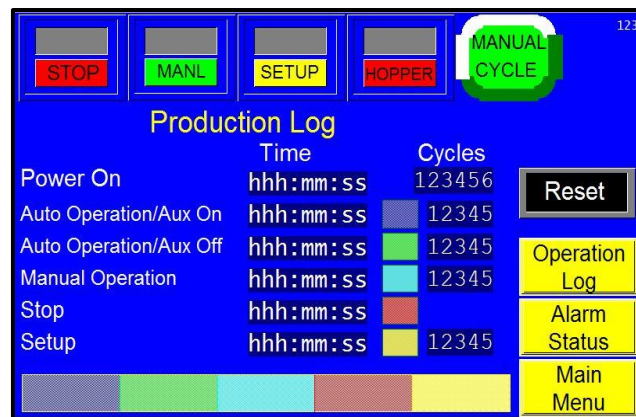


Figure 3- 40

The **Alarm Status Screen** (see Figure 3- 41) will give the status of a particular warning signal. The Alarm Data screens keep track of how long and how often a particular warning message has been signaled.



Figure 3- 41

The **Log Menu** also allows access to additional logs, including the **Production Time Log**, **Cycle Log**, **Weigh Log**, and **Count Log** (see Figure 3- 42 through Figure 3- 45).

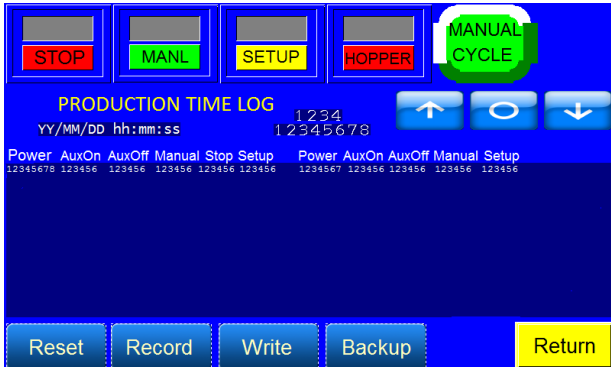


Figure 3- 42

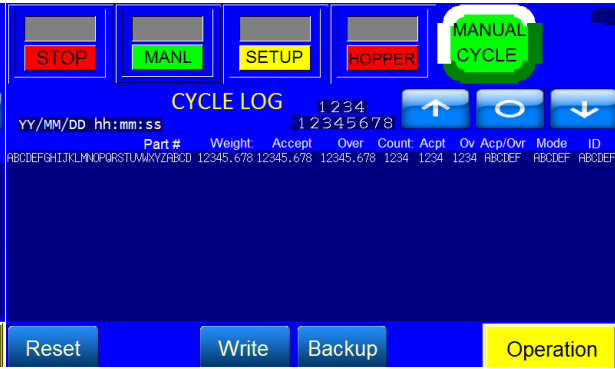


Figure 3- 43

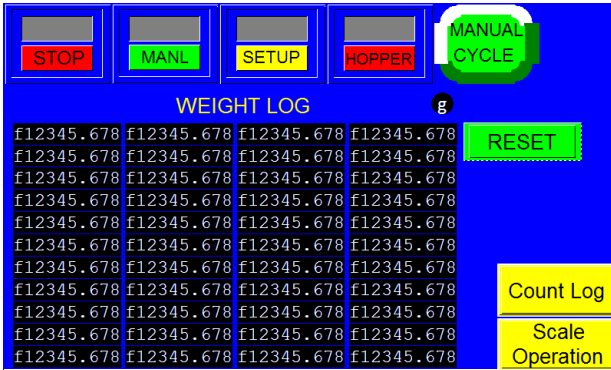


Figure 3- 44

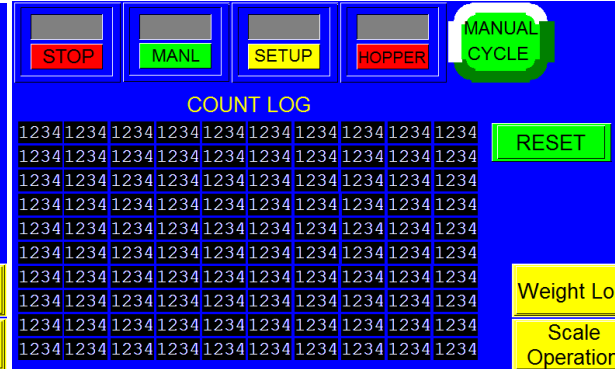


Figure 3- 45

3.28 License Activation

The **License Activation Screen** (Figure 3- 46) controls access to Advanced Poly-Packaging’s proprietary software for controlling the UCS-2400, and must be activated in order to operate the machine. When shipped from the factory, a 60-day trial activation is included. After full payment for the software is received, a full software license will be granted.

The License activation screen features several LEDs that indicate the status of the license and trial period and illuminate and change during various stages of operation. This screen should only be accessed by a qualified technician.

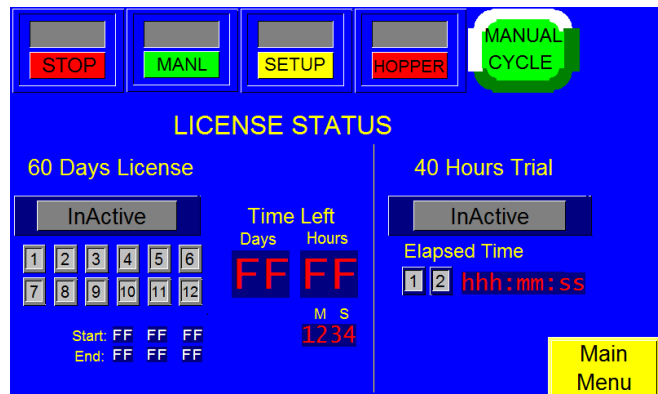


Figure 3- 46

As shown in Figure 3- 46, the License portion of the screen will display “Inactive” in grey if the License has not been activated yet, ‘In Progress” in green if the trial is in progress, and “Expired” in red if the License has expired.

Prior to expiration of the trial period, several warning screens may be displayed. An example can be seen in Figure 3- 51 .

When the license is expired, the bagger will stop and all outputs are disabled and the machine is locked in a safe condition with the temperature shut down until a new activation code is entered.

The **Time Left** will be displayed in days, hours, minutes and seconds.

- Start: Displays when the license period has begun.
- End: Displays when the License period will end.

3.29 Information Screens

The UCS-2400 program provides for many informational screens that display descriptions of functions or screens. See Figure 3- 47 through Figure 3- 52 for examples of messages that indicate the status of the counter. Some screens provide functional messages that describe errors or the status of equipment, and some provide instructions for operators to follow to bring the bagger back online.

To reset a message screen, clear the condition first (if required) and then touch the screen.

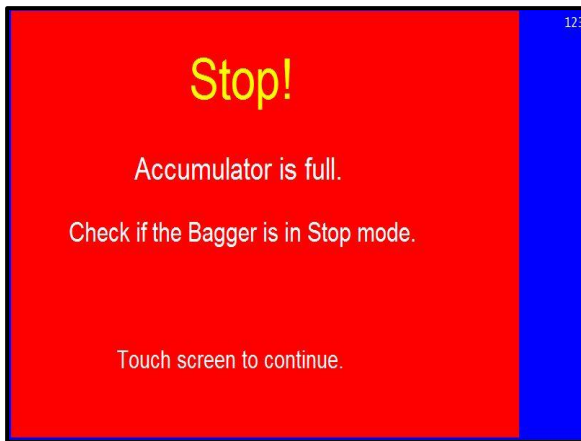


Figure 3- 47

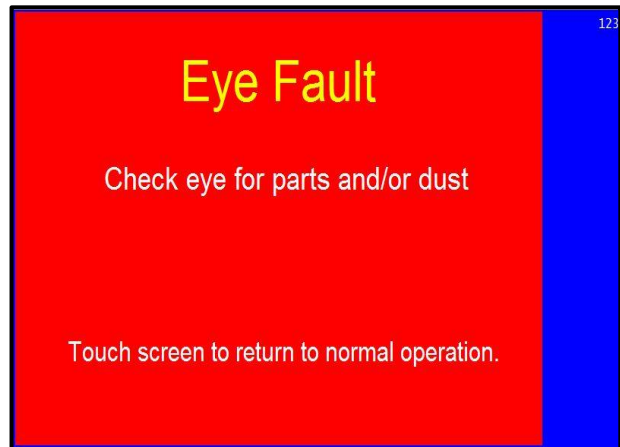


Figure 3- 48

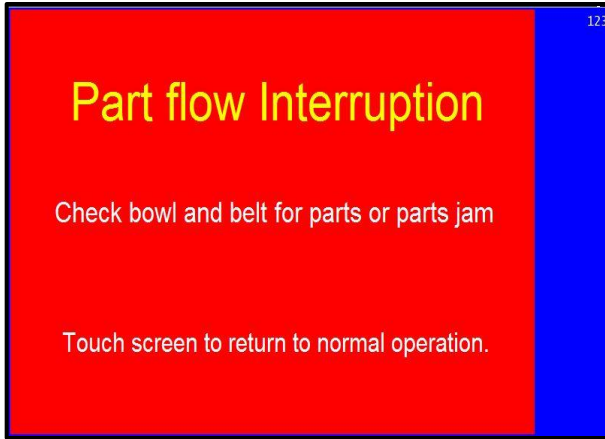


Figure 3- 49



Figure 3- 50



Figure 3- 51

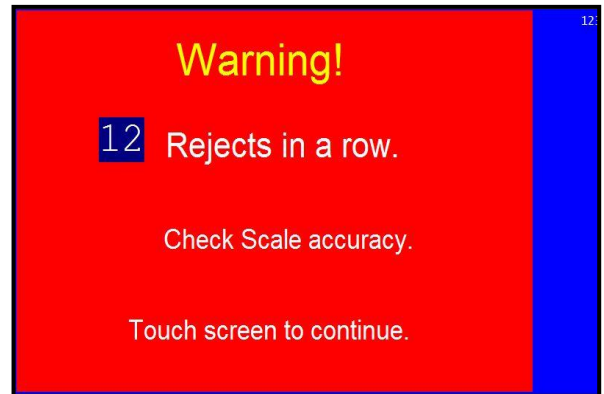


Figure 3- 52

This page intentionally left blank.

Chapter 4: Adjustments, Maintenance, Troubleshooting

Bowl Discharge Position

Skivers

Drop Gate

Level Switch

Bowl Drive

Erratic Feeding of the Bowl

Dead Spots in the Bowl

Adjustment of the Coil Gap

Spring “Tuning”

Belt Tracking

Accumulator Funnel Adjustment

Optical Frame Pot Settings

Setting the Vibra-Drive Potentiometer

Troubleshooting Checklist (Ultra Counter-Scale 2400)

Troubleshooting: Base / Bowl Drive Unit

Troubleshooting Checklist (Conveyor Feed Problems)

PLC IO Listing

UCS-2400 Spare Parts Kit

4.1 Bowl Discharge Position

Position the bowl so that it feeds onto the center of the belt drive and as close to the belt as possible. Loosen the bowl by loosening the bolts that hold the base drive to the bottom ring of the bowl and turn the bowl to the desired position. A clamp collar holds the V-track belt in position. Loosen the clamp collar to turn, raise or lower the V-track assembly.

Note: It may be necessary to adjust the feet on the bowl drive to accomplish proper bowl position. On some models, the V-track conveyor assembly can be positioned without moving the bowl for proper feeding of parts from the bowl to the conveyor.

4.2 Skivers

Adjust skivers so that parts flow in a consistent, steady, inline pace. Skivers are designed to orient the part to assist with parts separation. Use the skivers to brush off components stacked on top of other components. Use skivers to decrease the volume of parts on a track by pushing the product off the track and back into the bowl.

4.3 Drop Gate

The drop gate should be opened just far enough to allow a single part to pass over without dropping off. A second drop gate is provided to decrease the volume of parts to the final drop gate. Loosen the drop gate slide screws and push the gate in or out.

4.4 Level Switch/Sensor

Vibratory bowls should be consistently fed with parts for best operation. Bowls that are full run slower than empty bowls, and inconsistent levels may cause incorrect counts. To maintain a consistent level of parts in the bowl, hoppers or a conveyor should be used to feed the bowl. A parts **Level Switch** or **Level Sensor** is used to detect the level of parts in the bowl and to cause hoppers, conveyor, alarms, and stack lights to turn on. Hoppers and conveyors can feed more material into the bowls as they become low.

Note: Hoppers only feed when the bowl is in a fast feed mode.

Several types of **Level Switches** or **Level Sensors** may be supplied, depending upon the bowl size and types of parts. If parts are not heavy enough to cause a leveling arm to move, then other types of sensors must be used, which include ultrasonic sensors or photo optic sensors.


Leveling Arm / Switch Adjustment: With a leveling arm, the switch should turn **ON** when the “paddle” portion of the arm is approximately ½" from the floor of the bowl and should remain **ON** from zero to ½". Adjust the arm by either resetting the position of the arm on the shaft or by turning an adjustment screw located on the side of the switch.

Some switches also have an LED that, when **ON**, indicates that the switch is **ON**. The LED should come **ON** when the paddle is approximately ½" above the surface of the bowl. Turn the adjustment screw counterclockwise to raise the paddle before the LED comes on. In other words, turn the screw counterclockwise to allow more parts to feed in the bowl before the hopper turns off.


If by turning the screw, the LED does not turn **ON** at a different paddle position, then the leveling arm must be repositioned. Loosen the screw that holds the shaft of the leveling arm in position and turn the shaft coming out of the sensor block until the LED remains **ON** when the paddle is touching the bowl up to ½" above the bowl. Retighten the screw.

Ultrasonic or Photo Optic: The sensor will be setup and calibrated from the factory according to customer specifications. This sensor is on when the equipment is on and is always operating when the equipment is operating. The sensor will need to be adjusted over time due to the vibrations from the Vibra-Drive system and when the material being bagged changes.

When detecting a specular (mirror-like) object, such as aluminum or other reflective surface, or an object having a glossy surface or coating, the object may not be seen by the sensor due to a small change in angle or wrinkles on the objects surface. When a specular object is present below the sensor, tilting the sensor slightly upwards will increase its ability to see the object.

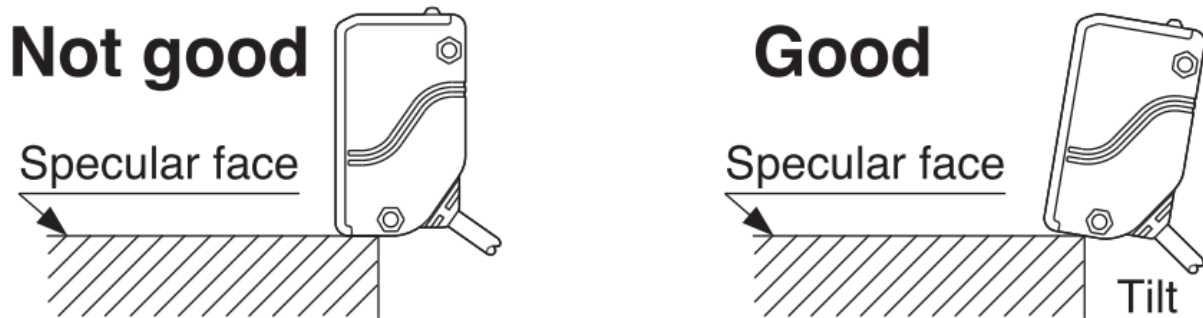

Adjusting Procedure: Use the diagrams for adjusting the sensor. Turning adjustments screws with excessive force will cause damage to the adjuster. The sensor operates in a industrial environment and is likely to accumalte dust on the sensorary lens. Be sure to clean the lens when performing other maintainace to the system.

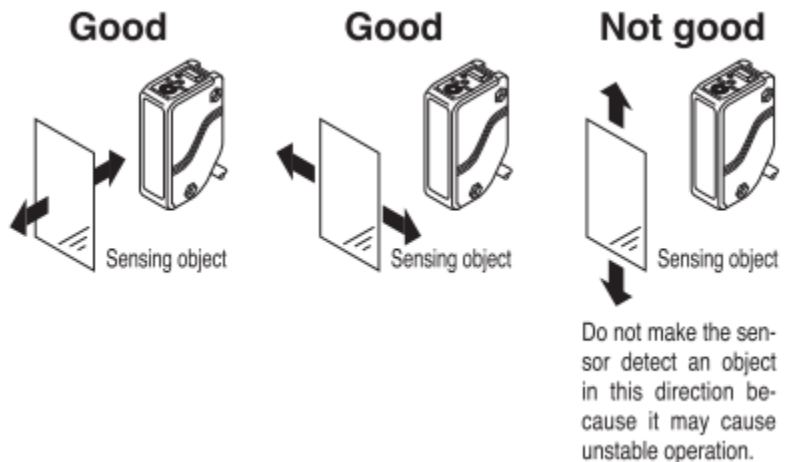


Note: *Overfilling the bowl will prevent the parts from moving smoothly or may cause the parts to stop flowing.*

A green LED is located on a box to the rear of the hopper (or on the conveyor if a hopper conveyor system is supplied). The LED indicates that the hopper should be feeding. The hopper will only feed if the bowl is in fast feed mode. If the leveling switch turns ON and the bowl is in fast mode, the hopper will start to vibrate. The hopper will vibrate for at least five seconds even if the switch turned on for only a moment.

To increase the vibration level of the hopper, turn the potentiometer clockwise. To decrease the vibration level of the hopper, turn the potentiometer counterclockwise.

● Top-view

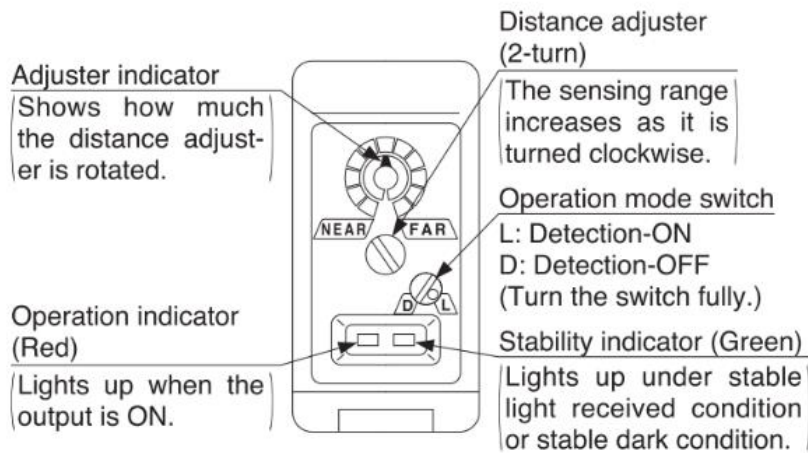

● Adjusting procedure

| Step | Description | Distance adjuster |
|------|--|-------------------|
| ① | Turn the distance adjuster fully counterclockwise to the minimum sensing range position of 0.2m approx. | Turn fully |
| ② | Place an object at the required distance from the sensor, turn the distance adjuster gradually clockwise, and find out point ㉠ where the sensor changes to the light received condition. | |
| ③ | Remove the object, turn the distance adjuster further counterclockwise, and find out point ㉡ where the sensor changes to the light received condition again with only the background. When the sensor does not go to the light received condition even if the adjuster is fully turned clockwise, point ㉡ is this extreme point in the range. | |
| ④ | The optimum position to stably detect objects is the center point between ㉠ and ㉡. | |

4.5 Bowl Drive

The drive has several adjustment points to allow for high production parts flow. However, do not advance the drive setting (fast or slow speed) to a higher feed rate than necessary as excessive vibration may decrease the useful output of the feeder. Do not mount external tracks or extensions to the feeder bowl without the manufacturer's approval. Such additions may create dead spots in the feeder bowl or may harm the power unit or decrease the feed rate. Additionally, maintain a gap between the feeder bowl discharge and the V-track so the bowl is not vibrating against components of the V-track or housing components.

4.6 Erratic Feeding of the Bowl

When erratic feeding is observed, ensure that the feeder bowl is securely mounted on the drive unit. All mounting screws must be tight. Check the bowl track to be sure there are no physical obstructions causing interruptions in the feed, such as parts stuck under wipers or parts wedged together and jammed between tracks. Check also to see if coatings on the parts, such as mold release compound, oil, dirt, or some other foreign matter, may have made the track slippery or sticky, thus preventing the parts from properly driving up the track. A broken spring in any of the spring banks will cause the feed rate to diminish or stop. A broken spring screw will have the same effect. Removal and assembly of each spring bank, *one at a time*, will permit examination of springs. A cracked spring will make a dead sound when struck against a hard surface. A broken screw will be self-evident. All drive units are tuned before shipping. Tuning is accomplished by adding springs to the unit until a resonance is established between the driving coils and the mass being driven. A broken spring, or a broken or loose spring screw, destroys this resonance and the feeding ability diminishes or stops.

4.7 Dead Spots in the Bowl

Dead spots may occur in either the fabricated or cast bowls and are usually the result of an unequal distribution of mass in the bowl construction caused by tooling. They may also occur when one section of the bowl is not securely fastened to the drive unit, when a weld has broken or when part of the bowl track has loosened. This may be determined by removing the bowl from the drive unit and rotating it 90° from its original position. If the dead spot remains at the same point in the bowl, it can be assumed that the problem is in the bowl. Dead spots, caused by an unequal mass distribution in the bowl, are generally corrected by adding weight to a selected spot or spots on the outer periphery of the bowl, usually 180° from the dead spot.

4.8 Adjustment of the Coil Gap

The XL Series drive units are equipped with two adjustable coils mounted on the base casting and two fixed armatures mounted on the top plate. The air gap between each armature and coil is adjusted at the factory and under normal operation should not require any further adjustment. Should a continuous metallic rapping sound develop during feeder operation or when the power control knob is turned to maximum, it will indicate that the armature is striking the coil and damage to the feeder unit will occur if not corrected. To adjust the coil for a larger air gap, first back off the two ½" socket head cap screws whose centers form a vertical line in the four-screw pattern, an approximately 1/8" turn. Then tighten the two ½" socket head cap screws whose centers form a horizontal line in the four-screw pattern, an approximately 1/8" turn. This will draw the coil back away from the armature about an additional 0.009" and should eliminate the metallic rapping sound. Care should be taken to loosen both vertical screws the same amount and tighten the two horizontal screws the same amount so that the surface of the coil remains parallel to the surface of the armature. Normal air gaps run from 0.025" to 0.040". Some units could have as little as a 0.015" gap or as much as a 0.075" gap. To adjust the coil for less air gap, back off the two horizontal screws and tighten the two vertical screws, the same amount each. Make sure all four screws are tight after making the adjustment.

4.9 Spring "Tuning"

The XL Series drive units employ four spring banks for tuning the drive unit. These spring banks usually contain the same number and thickness of springs; however, sometimes due to bowl construction or bowl tooling, it is necessary to vary the number and thickness of the springs in each bank. When springs of different thickness are used in a spring bank, the thickest spring should always be placed so that it is next to the base and top plate castings and the thinner springs toward the screw heads. A smaller diameter and lighter weight bowl will require less or thinner springs than a larger diameter and heavier bowl.

The XL Series drive units are powered by alternating 60-cycle current, which energizes the coil at a rate of 120 pulses per second. These pulses cause the coils to magnetize and draw the armature toward them, thereby flexing the springs. The combined spring force must be sufficient to return the armatures to their original or neutral position at the same rate of 120 reactions per second. When this happens, the unit is properly tuned for 60-cycle current. If the power source is 50-cycle, as used in some European countries, the drive unit must be re-tuned by reducing the number or thickness of springs. If the power source is other than 110/120 Volt, then different coils must be used (240-volt AC coils are available from stock).

4.10 Belt Tracking

The V-track belt is constructed of two small conveyors at 90 degrees to each other. Each belt has a drive roller and a tracking roller. The tracking roller is located at the discharge end of the belt where all adjustment points are located.

To adjust the belt tracking, first remove the accumulator/eye assembly. Bolts holding the accumulator to the V-track assembly are located beneath the belt, to the rear of the accumulating funnel.

With the accumulator removed, the adjustment screw and slot can be seen to adjust the position / alignment of the rollers.

Adjust the roller up or down to correct the belt alignment. When properly adjusted there should be a very small (1/16") gap between the belts as they are running.

4.11 Accumulator Funnel Adjustment

The accumulator funnel mounts to the V-track conveyor assembly. The optical frame slides into the accumulator funnel. The optical frame must be positioned at the end of the V-track so that parts discharging from the belt completely pass through the photo array. If parts only partially pass through the eye (beneath the eye), miscounts can occur. Larger / longer parts may require the optical frame to be positioned further away from the end of the conveyor to avoid parts blocking the photo array when hanging from a stopped belt. To adjust the accumulator funnel, loosen the bolts positioned beneath and to the rear of the accumulator.

4.12 Optical Frame Pot Settings

The optical frame (four-sided frame) has four potentiometers that control the functionality of the outputs to the PLC. Factory settings provide for a static output (output is ON while the detection area is blocked or parts are present). Additionally, the sensitivity is set to the highest possible setting.

Factory settings are described while holding the frame so that you are looking at the pots with the cable extending out from the eye, to the LEFT of the pots.


You will see that there are four pots with covers over the two center pots. Remove these covers to change settings.

POT 1 (left most pot): OUTPUT DURATION: Set at the factory to the most CCW position. This pot is used only when the optical frame is set to Dynamic functionality. Since the optical frame is set at the factory to Static (not Dynamic), you only need to adjust this pot if you have changed POT 2 to the Dynamic position. Again, POT 2 is set at the factory to the most CCW position. If you do reset POT 2 to Dynamic, use a small flat head screw driver and turn the pot clockwise to increase the output duration.

POT 2 (second from the left): STATIC / DYNAMIC: Set at the factory to STATIC, the most CW position. Static functionality means that when the eye is blocked, the output is ON. To test the eye, you can place your finger in the eye field and you will notice that the LED at the base of the cable is ON continually while the eye is blocked. To change to the DYNAMIC functionality, turn the pot using a small flathead screwdriver to the most CCW position. Dynamic functionality means that the output to the PLC will be a fixed time, regardless of the length of the part. If you change to the DYNAMIC functionality, you may need to change the output duration (POT1) to achieve the correct counting function. Be careful not to set the duration too long or two parts may be passing through the optical frame while only one output is given to the PLC.

POT3 (third from the left): DARK/LIGHT mode: Set at factory to DARK, the most CCW position. Do not reset this POT or the output to the PLC will not be in the proper sequence.

POT4 (right most pot): SENSITIVITY adjustment: Set at the factory to the most sensitive position, which is the most CW position. The eye is set to the most sensitive setting so that even the smallest parts can be detected in the field. To cause the detection to be less sensitive (to not see scrap, for instance), turn the pot CCW until the scrap is not detected (may not work properly for parts that are too large).

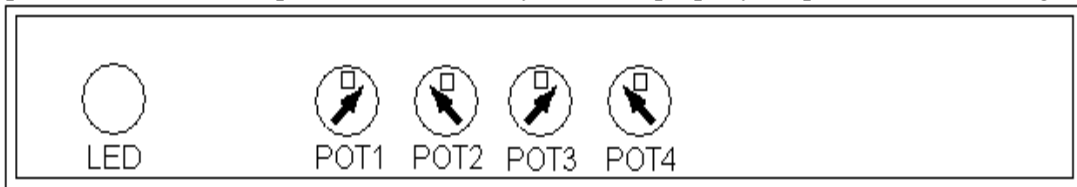

Note: Illustration of factory settings/pots.

4.13 Setting the Vibra-Drive Potentiometer

These instructions may be used to set the POTs on each of the Vibra-Drives inside the Module, the Bowl and Hopper (if your machine includes a Hopper). Each Vibra-Drive should be labeled accordingly. If your machine is not labeled, please call Service at 1(800)754-4403 for assistance in identifying your Drives.

The Vibra-Drive has three potentiometers (POTs) that control the speed at which the bowl or hopper vibrates; Maximum Output, Minimum Output, and Soft-Start. These potentiometers are set at the factory but may require adjustment over time. A small flat-head screw-driver should be used for these setting changes once the electrical panel has been removed. Power must be disconnected by turning the yellow and red lockout switch located on the module to OFF. To remove the cover of the module, unscrew the four socket head screws located on the corners. The POTs will need to be adjusted with the power on. While the cover is removed, use a lockout power key to turn on power to the module.

CAUTION: These settings should be performed by qualified maintenance personnel since power may need to be applied when making setting adjustments. Screw-driver must be long enough to extend outside of the electrical panel. Additionally, the screwdriver handle should be produced from non-conductive materials and no contact should be made with any metal portion of the screw-driver.

Note: Adjusting the Pots will cause vibration changes, so touch screen settings will also need to be changed. All recipes will need to be recalled and for each “job”, settings will need to be changed and saved.

Note: POT adjustments are conditional to the type of product and the fullness in the bowl.

Initial Adjustment Empty Bowl

Adjustment: First, to make all initial POT adjustments, ensure the bowl is empty and the machine is in <Stop / Manual / Setup>. Adjust the POTs in order of MAXIMUM OUTPUT (POT 3), then MINIMUM OUTPUT (POT 2), and finally, SOFT-START (POT 1). Each POT is labeled on the driver board, see Figure 4-1.

POT 3 (furthest right pot):

MAXIMUM OUTPUT: Set Maximum Output first. This pot is set to control the maximum level of vibration when the main control dial is turned up all the way. The Pulse Setting is set at the factory 120 pulse setting (Pulses per Minute).

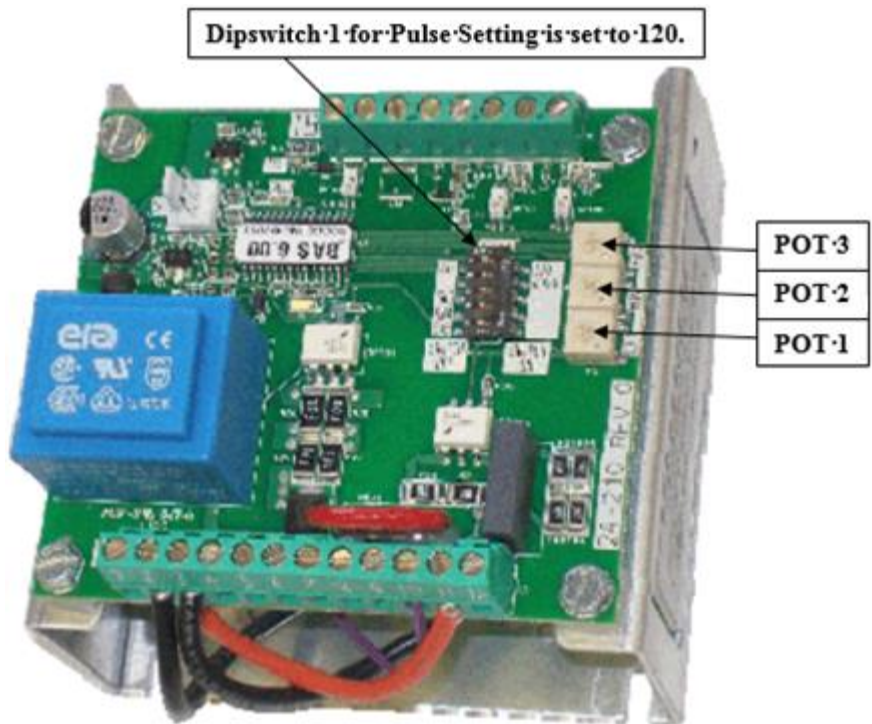


Figure 4-1

Steps:

1. While in <Stop> Mode, turn the POT 3 counter-clockwise to turn the minimum to zero.
2. Using the Touch Screen, access the Settings Screen and set Bowl Fast Speed to 99 (maximum speed).
3. Put machine in <Start / Manual / Setup>.
4. Turn the POT slowly clockwise, until the desired maximum speed is reached. Turn approximately $\frac{1}{2}$ to $\frac{3}{4}$ turns, typically for an empty bowl. **CAUTION:** The maximum speed should be set to a value which causes the bowl not to over-vibrate. Over-vibrating bowls will be excessively loud and may cause damage to the bowl drive. If over-vibration does occur, press <Stop> on the touch screen and turn the POT back to zero. Press <Start> and resume adjustment.
5. Once the desired maximum speed is reached, put the machine in <Stop> to proceed to the next POT adjustment.

POT 2 (middle pot): MINIMUM OUTPUT: Set Minimum Output second. To adjust the Minimum Output, set Slow Bowl speed to one on the Settings Screen and adjust POT 2 to just below the slowest setting that allows for the feed rate to still maintain accuracy.

Steps:

1. While in <Stop> Mode, turn POT 2 counter-clockwise to turn the minimum to zero.
2. Using the Touch Screen, access the Settings Screen and set Bowl Slow Speed to one.
3. Put the machine in <Start / Manual / Setup>.
4. Turn POT 2 slowly clockwise, until the bowl just barely starts to vibrate.
5. Put the machine in <Stop> to proceed to the next POT adjustment.

POT 1 (furthest left pot): SOFT-START: Bowl vibration may be ramped up instead of time being applied fully when starting the bowl. Set Soft-Start after Min and Max Outputs have been adjusted.

1. With the machine in <Stop> Mode, turn POT 1 clockwise to zero. This will set the Soft-Start to the longest ramp-up of six seconds.
2. Using the Touch Screen, access the Settings Screen and set Bowl Fast Speed to 70.
3. Turn the Soft-Start POT counter-clockwise gradually, $\frac{1}{4}$ of a turn. Adjustments are conditional to the product in the bowl. A $\frac{1}{2}$ to $\frac{3}{4}$ turn is typical.
4. Put the machine in <Start> Mode and observe how the machine starts. If the ramp up time is still too long, follow these steps: Put the machine in <Stop> Mode. Turn the Soft-Start POT counter-clockwise another $\frac{1}{4}$ turn. Put the machine in <Start> Mode. Observe how the machine starts. Continue this process until the bowl starts at the desired vibration without ramp up.
5. Save the Settings to a Recipe / Job Save.
6. Put the machine in <Stop> and move on to the Final Adjustment.

Reminder: Repeat for the Hopper Vibra-Drive if necessary.

After the POTs have been set turn off the power to the machine.

1. Remove the lockout power key. Ensure the red and yellow lockout knob on the front cover of the module is turned to OFF.
2. Place the cover on the module and screw in socket head screws.
3. Turn the yellow and red lockout switch ON.

Final Adjustment: The power will now be ON and the machine will be ready to adjust the touch screen settings. Adjust the touch screen settings with product in the bowl. Place product in the bowl so it reaches

1” to 1 ½” above the bottom of the bowl and access the Settings Screen to set the Bowl Fast and Bowl Slow speeds.

Setting the Bowl Fast speed:

1. Put the machine in <Start / Manual / Setup>.
2. Adjust the Fast bowl speed on the Settings Screen of the touch screen to the proper settings to achieve proper counts or weights, a typical setting is between 50 and 70. *Note: Speed will vary depending on product weight and fullness of the bowl.*
3. Save the Settings to a Recipe / Job Save.
4. Put the machine in <Stop> and move on to set the Bowl Slow Speed.

Setting the Bowl Slow speed:

1. Put the machine in <Start / Manual / Setup>.
2. Adjust the Slow bowl speed on the Settings Screen of the touch screen to the proper settings to achieve proper counts or weights, a typical setting is 30. *Note: Speed will vary depending on product weight and fullness of the bowl.*
3. Save the Settings to a Recipe / Job Save.

Setting the Hopper Speed:

1. Put the machine in <Start / Manual / Setup>.
2. Adjust the Hopper Speed to the proper settings to achieve proper counts or weights, a typical setting is 70. *Note: Speed will vary depending on product weight and fullness of the bowl.*
3. Save the Settings to a Recipe / Job Save.

Note: The Hopper Speed will be located in the Hopper Setting Screen if you are working on a UCS-2400 (section 3.15 in the manual) or a UC-2400 / UC-3000 (section 3.13). For the US-9000 the Hopper Speed can be found on the Bagger Settings Screen, section 3.10 in the manual.

4.14 Height Adjustment

The UCS-2400, when sold individually, mounts to a single column telescoping stand. The height can be adjusted, but due to the weight of the unit, a lift truck or other similar device must be used. Position the forks of the lift truck beneath the mounting plate of the bowl. Slightly lift the forks and tilt back the forks so that the weight is off the stand and so that if the unit slides, it will slide toward the lift truck. Loosen the screws from the side with two others holding the unit in position. Raise or lower the unit with the lift truck and tighten the screws.

CAUTION: Extreme safety must be used due to the weight of the unit to avoid severe injury. Only trained and licensed lift truck operators should perform these tasks.

4.15 Troubleshooting Checklist (Ultra Counter-Scale 2400)

| PROBLEM | POSSIBLE CAUSE | CORRECTIVE ACTION |
|---|--|---|
| Touch screen does not display | <ol style="list-style-type: none"> 1. Power off 2. Main fuse blown 3. Breaker tripped 4. IOP cables loose/damaged 5. Contrast out of adjustment | <ol style="list-style-type: none"> 1. Check main/individual power switch; Plug in power cord 2. Replace fuse #1 on the module 3. Check breaker in main power box. 4. Check cables behind IOP cover 5. Adjust screen contrast |
| No main power LED | <ol style="list-style-type: none"> 1. Power off 2. Main fuse blown 3. Breaker tripped 4. IOP cables loose/damaged 5. LED burned out | <ol style="list-style-type: none"> 1. Check main/individual power switch; Plug in power cord 2. Replace fuse #1 on the module 3. Check breaker in main power box 4. Check cables behind IOP cover 5. Replacement not possible |
| No run LED | <ol style="list-style-type: none"> 1. IOP in program mode 2. LED burned out | <ol style="list-style-type: none"> 1. Press “System” key then “F1” key 2. Replacement not possible |
| Accumulating funnel not functioning correctly or not at all | <ol style="list-style-type: none"> 1. No/low air pressure 2. Leaking hoses or air cylinders 3. Accumulator in “open” mode 4. “Batch toggle switch” is “off” 5. <i>Belt drive</i> cable loose/damaged | <ol style="list-style-type: none"> 1. Check main and individual regulators; Check for kinked air hoses 2. Check all air hoses and cylinders 3. Check mode on “Operation Screen” 4. Check switch on “Operation Screen” 5. Check <i>belt drive</i> cable |
| Part sensor (eye) not functioning | <ol style="list-style-type: none"> 1. Part dust in eye 2. Eye cables loose/damaged | <ol style="list-style-type: none"> 1. Wipe inside of eye 2. Check eye cables |
| Bowl not driving well or not at all | <ol style="list-style-type: none"> 1. Bowl overfilled 2. “Bowl Fast” and/or “Bowl Slow” values set too low 3. Bowl drive cable loose/damaged | <ol style="list-style-type: none"> 1. Empty bowl 2. Check values on “Settings Screen” 3. Check bowl drive cable |
| Hopper does not run | <ol style="list-style-type: none"> 1. “Hopper toggle switch” is “off” 2. Counter running in “Bowl Slow” mode 3. Part level in bowl too high 4. Hopper cable loose/damaged 5. Level sensor cable loose/damaged 6. Hopper fuse blown | <ol style="list-style-type: none"> 1. Check switch on “Operation Screen” 2. Check the “Slow indicator” on “Operation Screen”- adjust “Slow Count” on “Counter Settings Screen” 3. Move parts so level arm can touch the bottom of the bowl 4. Check hopper cable 5. Check level sensor cable 6. Replace fuse #2 on the module |
| Bowl overfills | <ol style="list-style-type: none"> 1. Gate on hopper raised too high 2. Ramp on front of hopper sloped down too far 3. Hopper running after bowl is full 4. Level sensor cable damaged | <ol style="list-style-type: none"> 1. Lower gate 2. Raise ramp 3. Adjust part level sensor 4. Check level sensor cable |
| Belt does not move | <ol style="list-style-type: none"> 1. Part(s) jamming belt 2. “Belt Speed” set too low 3. Belt drive cable loose/damaged | <ol style="list-style-type: none"> 1. Check belt housing for loose parts 2. Check “Belt Speed” value on “Counter Settings Screen” 3. Check belt drive cable |

4.16 Troubleshooting: Base / Bowl Drive Unit

Should your bowl stop completely (i.e., no vibration or humming sound at all), the reason will be an *electrical* failure. Carefully check the following to be certain that:

1. The power cord is plugged into a live outlet. For troubleshooting purposes, unplug the power during remaining electrical checks.
2. The fuse on the controller is good.
3. The auxiliary contacts inside the controller are properly shorted or jumpered together.
4. The input and output power connections inside the controller are good and sound.
5. The coil wires are properly connected to the controller output wires.
6. The coils themselves show continuity with the controller disconnected. If there is still no output, then the controller should be returned to the factory. If the failure is not our responsibility, APPI will advise you of repair costs.

If your bowl feeder does not stop feeding completely, or starts feeding slowly or erratically (i.e., fast then slow), and you can hear the unit humming, then the problem is *mechanical*. Carefully check the following to be certain that:

1. Parts are not jammed under track wipers or wedged between tracks.
2. The feeder bowl mounting screws are tight.
3. The rubber mounting feet are not cut and are securely tightened to the feeder base.
4. The rubber mounting feet are not tight in the foot locators (if used).
5. The armatures and coils have an air gap between them.
6. There is no loose tooling in the feeder bowl.
7. Parts are not slipping or sticking on the track due to oily air contamination, mold release compound from parts, etc.
8. There are no broken welds, especially track welds, on the fabricated bowls. A broken track weld could cause a dead spot, erratic feeding, or a metallic rattle.
9. Other equipment is not restricting the bowl from vibrating freely.
10. There are no cracked or broken springs in any of the spring banks.
11. There are no broken spring mounting screws.

If, after checking all the above, the feeder still does not feed properly, then get a 13/16" box wrench and check both the upper and the lower spring mounting screws for tightness. If the screws seem excessively tight, try loosening each set of four screws about 1/8" of a turn each. (The amplitude control knob should be set at the maximum feed position while doing this.)

If the screws are loose, the feed rate will slow down to a point where feeding will stop entirely. Progressively tighten the four upper spring screws, and then tighten the four lower screws.

As you tighten the screws, the feed rate should immediately pick up. You will know by the sound of the feeder when you have attained the proper torque on the screws. Attempt to tighten all screws to the same torque.

4.17 Troubleshooting Checklist (Conveyor Feed Problems)

| PROBLEM | POSSIBLE CAUSE | CORRECTIVE ACTION |
|-------------------------------|--|---|
| Conveyor feeds more than once | <ol style="list-style-type: none"> 1. Conveyor is in “continuous” mode instead of “auto” 2. Conveyor’s part sensors are dirty or out of alignment 3. Cleat sensor under the conveyor is dirty, has been moved or needs adjusted 4. Cable connecting the counters, conveyor, bagger loose/damaged 5. Cleat sensor cable damaged 6. Part sensor cables loose/damaged | <ol style="list-style-type: none"> 1. Change mode on the conveyor control panel 2. Wipe the part sensors/check that the eyes are in line 3. Wipe sensor, tilt sensor bracket, turn sensitivity adjustment 4. Check the cables connecting the counters, conveyor, and bagger 5. Check cleat sensor cable 6. Check conveyor’s part sensor cables |
| Conveyor does not feed | <ol style="list-style-type: none"> 1. Conveyor is unplugged 2. Conveyor switch on back of panel is off 3. Main power switch is off 4. Cable connecting the counters, conveyor, bagger loose/damaged 5. Conveyor motor breaker tripped 6. Damaged conveyor motor relay 7. Conveyor not in “run” mode 8. Bagger not ready 9. A counter has auxiliary “on” and is not in “run” mode 10. Parts jam at an individual counter 11. Counter eye problem | <ol style="list-style-type: none"> 1. Plug in conveyor 2. Switch conveyor on 3. Throw main power switch 4. Check the cables connecting the counters, conveyor, and bagger 5. Check main power box for tripped breaker 6. Check main power box for bad relay 7. Change mode on the conveyor control panel 8. Confirm bagger is in auto mode, is not paused, has a properly threaded supply of bags, has a supply of heat transfer film, etc. 9. Check all counters. Auxiliary should be “on” if counter is being run. 10. Check all counters for “Part Flow Interruption Screen” 11. Check for a counter that cannot “see” parts - wipe the inside of the eye |

4.18 PLC IO Listing

The Main PLC IO (Inputs and Outputs) Listing is provided to assist in troubleshooting the UCS-2400.

| Card: | Address | | Description | Normal State |
|----------|---------|----|---------------------------|--------------|
| Inputs | | | | |
| Main PLC | X | 0 | Part counting eye | off |
| Main PLC | X | 1 | Not Used - Reserved | |
| Main PLC | X | 2 | Not Used - Reserved | |
| Main PLC | X | 3 | Auxiliary In | off |
| Main PLC | X | 4 | Level sensor | select |
| Main PLC | X | 5 | Not Used - Available | |
| Main PLC | X | 6 | BeltDrive 1 Alarm | on |
| Main PLC | X | 7 | BeltDrive 2 Alarm | on |
| Main PLC | X | 8 | Accumulator closed sensor | on |
| Main PLC | X | 9 | Accumulator open sensor | off |
| Main PLC | X | A | Not Used - Available | |
| Main PLC | X | B | Not Used - Available | |
| Main PLC | X | C | Not Used - Available | |
| Main PLC | X | D | Not Used - Available | |
| Main PLC | X | E | E-STOP | off |
| Main PLC | X | F | Not Used - Available | |
| Main PLC | X | 10 | Not Used - Not Available | |
| Main PLC | X | 11 | Not Used - Not Available | |
| Main PLC | X | 12 | Not Used - Not Available | |
| Main PLC | X | 13 | Not Used - Not Available | |
| Main PLC | X | 14 | Not Used - Not Available | |
| Main PLC | X | 15 | Not Used - Not Available | |
| Main PLC | X | 16 | Not Used - Not Available | |
| Main PLC | X | 17 | Not Used - Not Available | |
| Main PLC | X | 18 | Not Used - Not Available | |
| Main PLC | X | 19 | Not Used - Not Available | |
| Main PLC | X | 1A | Not Used - Not Available | |
| Main PLC | X | 1B | Not Used - Not Available | |
| Main PLC | X | 1C | Not Used - Not Available | |
| Main PLC | X | 1D | Not Used - Not Available | |
| Main PLC | X | 1E | Not Used - Not Available | |
| Main PLC | X | 1F | Not Used - Not Available | |
| Outputs | | | | |
| Card: | Address | | Description | Normal State |
| Main PLC | Y | 0 | Not Used - Available | |
| Main PLC | Y | 1 | Not Used - Available | |
| Main PLC | Y | 2 | Auxiliary Out | |
| Main PLC | Y | 3 | Hopper drive | |
| Main PLC | Y | 4 | Bowl drive | |
| Main PLC | Y | 5 | Accumulator door | |
| Main PLC | Y | 6 | Bowl track gate | |
| Main PLC | Y | 7 | Belt drive | |
| Main PLC | Y | 8 | Stack Light Green | |
| Main PLC | Y | 9 | Stack Light Red | |

| | | | | |
|----------|----|-----|---------------------------------|--|
| Main PLC | Y | A | Belt drive Alarm reset | |
| Main PLC | Y | B | Reject count | |
| Main PLC | Y | C | Good count | |
| Main PLC | Y | D | Reject funnel solenoid | |
| Main PLC | Y | E | Not Used - Available | |
| Main PLC | Y | F | Not Used - Available | |
| Main PLC | Y | 10 | Not Used - Not Available | |
| Main PLC | Y | 11 | Not Used - Not Available | |
| Main PLC | Y | 12 | Not Used - Not Available | |
| Main PLC | Y | 13 | Not Used - Not Available | |
| Main PLC | Y | 14 | Not Used - Not Available | |
| Main PLC | Y | 15 | Not Used - Not Available | |
| Main PLC | Y | 16 | Not Used - Not Available | |
| Main PLC | Y | 17 | Not Used - Not Available | |
| Main PLC | Y | 18 | Not Used - Not Available | |
| Main PLC | Y | 19 | Not Used - Not Available | |
| Main PLC | Y | 1A | Not Used - Not Available | |
| Main PLC | Y | 1B | Not Used - Not Available | |
| Main PLC | Y | 1C | Not Used - Not Available | |
| Main PLC | Y | 1D | Not Used - Not Available | |
| Main PLC | Y | 1E | Not Used - Not Available | |
| Main PLC | Y | 1F | Not Used - Not Available | |
| | | | | |
| PLC Exp1 | WY | 2_1 | Bowl Speed Analog Output (V0) | |
| PLC Exp1 | WY | 3_1 | Belt Speed Analog Output (V1) | |
| PLC Exp1 | WY | 2_2 | Hopper Speed Analog Output (V2) | |
| PLC Exp1 | WY | 3_2 | Not Used - Available (V3) | |

4.19 UCS-2400 Spare Parts Kit

| Part No. | Description | QTY. |
|-------------|---|------|
| TP-207344 | FUSE, 12 AMP, TIME DELAY | 2 |
| TP-213427 | POWER SUPPLY, DC 24 VOLT, 54 AMP | 1 |
| TP-501173 | DC GEARMOTOR W/CONTROLLER | 1 |
| TP-503102 | BELT, BRAKE (BELT SIZE 130XL | 2 |
| TP-402255 | VALVE W/CONNECTOR SY3120-5MNZ- | 1 |
| TP-503105 | CONVEYOR BELT, 2.125" X 33.75" | 1 |
| TP-503106 | CONVEYOR BELT, 2.125 X 41.25 (STANDARD & CE), | 1 |
| TP-224005 | VIBRA DRIVE, UC / US HOPPER DRIVE | 1 |
| TP-403142 | CYLINDER, NCDMB075-0300C-B64S | 1 |
| TP-403517 | CYLINDER, NCDME075-0100C | 1 |
| TP-750102 | PCB, SCALE CONTROLLER, M460 MA | 1 |
| TP-7500052 | LOAD CELL, 10KG | 1 |
| TP-107340 | Bearing Thrust 1/2 ID x 3/4 OD x 1 | 2 |
| TP-403141 | Cylinder, Autoswitch, D-B64 | 1 |
| TP-224001 | PCB, UC / US Supply Hopper Control | 1 |
| TP-219455-1 | UC-2400 AUX RELAY (COMPLETE | 1 |

Note: For machines with 220V power supply the DC 24 Volt Power Supply part number changes to TP-213426 and the PCB, UC / US Supply Hopper Control (TP-224001) changes to the PCB, UC / US 220V Hopper / Bowl Control (TP-224009).

Chapter 5: Parts and Drawings


Ultra Counter-Scale 2400
Electronics Assembly
Cable Assemblies
V-Track Assembly, Long
Long Belt Guide Assembly
Belt Drive Housing Assembly
Belt Drive Assembly
Touch Screen Assembly
Accumulator Funnel Assembly
Optical Eye Assembly
Supply Hopper Assembly
CCW Vibratory Bowl Assembly
Prox Sensor Assembly
Ultra Counter-Scale Stand
110 VAC Electrical Drawing
FPG I/O Electrical Drawing
Analog Control Electrical Drawing
DB9 Electrical Drawing
DB25 Electrical Drawing
Aux Interface Electrical Drawing

5.1 Ultra Counter-Scale 2400


| ITEM NO. | QTY | PART NO. | DESCRIPTION | PAGE NO. |
|----------|-----|---------------|-----------------------------|----------|
| 1 | 1 | TA-UC1000-DC | ELECTRONICS ASSEMBLY | 67 |
| 2 | 1 | TA-UC2000-DC | CABLE ASSEMBLIES | 69 |
| 3 | 1 | TA-UC2400-LDC | V-TRACK ASSEMBLY, LONG | 71 |
| 4 | 1 | TA-UC3000 | TOUCH SCREEN ASSEMBLY | 79 |
| 5 | 1 | TA-UC5000 | ACCUMULATOR FUNNEL ASSEMBLY | 81 |
| 6 | 1 | TA-UC5560 | OPTICAL EYE ASSEMBLY | 83 |
| 7 | 1 | TA-UC6500 | SUPPLY HOPPER ASSEMBLY | 85 |
| 8 | 1 | TA-UC7000 | CCW VIBRATORY BOWL ASSEMBLY | 87 |
| 9 | 1 | TA-UC8000 | PROX SENSOR ASSEMBLY | 89 |
| 10 | 1 | TA-UCSTAND | ULTRA COUNTER-SCALE STAND | 91 |

*NOTE 1: If you purchased the UCS-2400 with the **Short V-Track configuration**, your part numbers are the same as those listed above, with the following exception: Item 3 is replaced with TA-UC2400-SDC.*

*NOTE 2: If you purchased the UCS-2400 with the **Clockwise Bowl configuration**, your part numbers are the same as those listed above, with the following exception: Item 8 is replaced with TA-UC7000-1.*

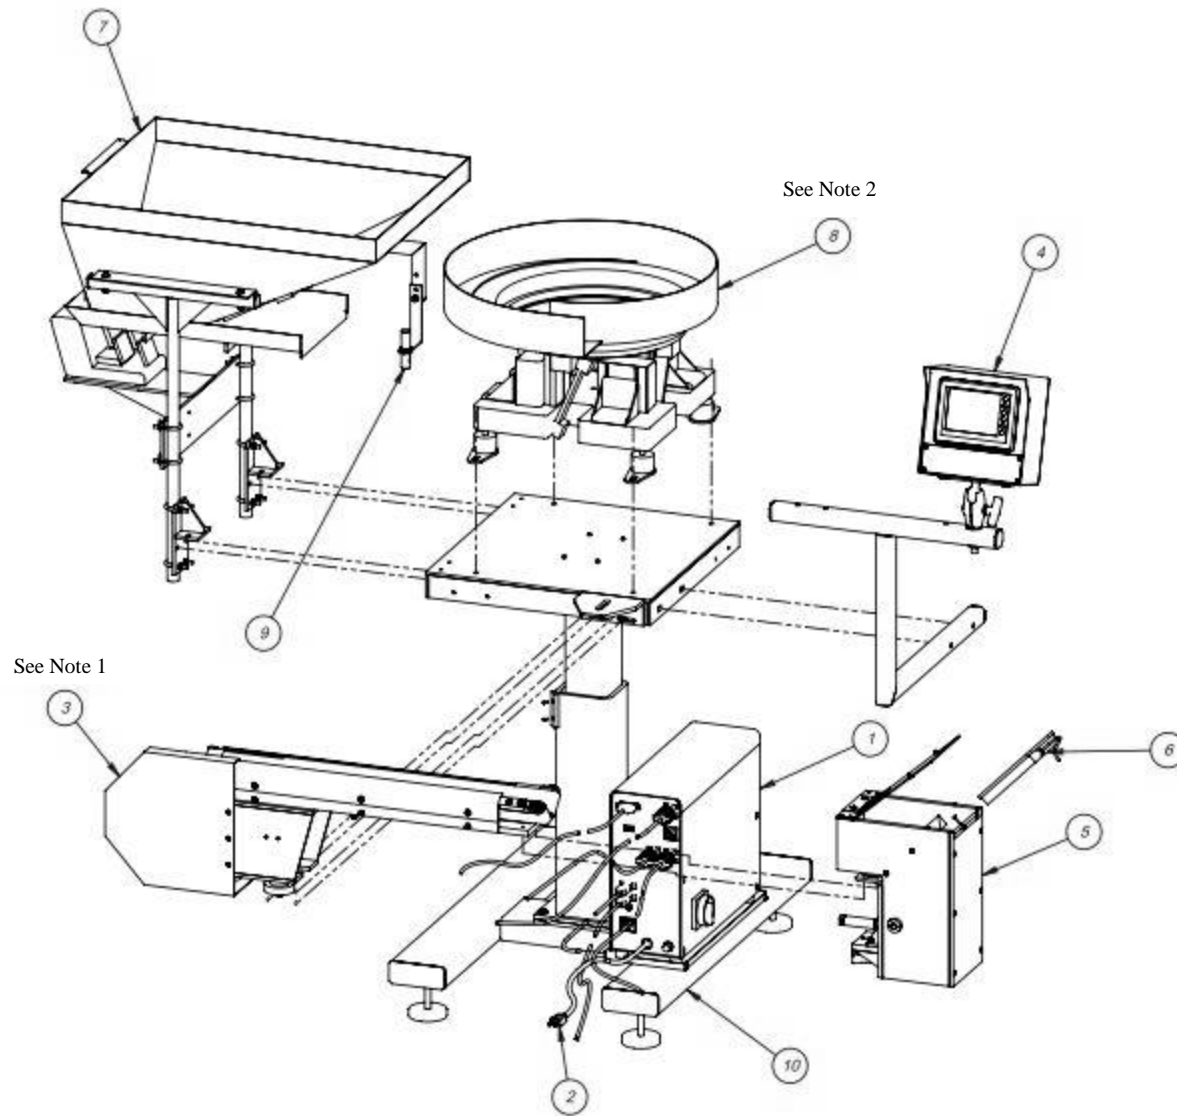

Standard UCS-2400 Model

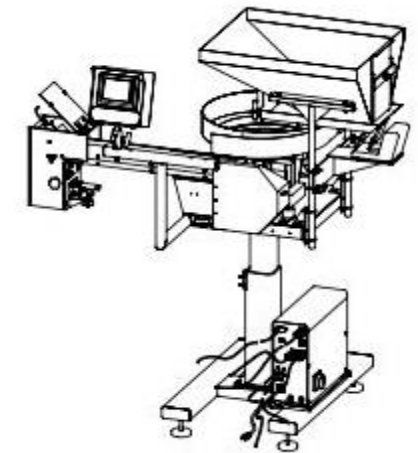


Optional Clockwise Bowl Model

5.2 Electronics Assembly

PN: TA-UC1000-DC


| ITEM NO. | QTY | PART NO. | DESCRIPTION |
|----------|-----|---------------------------------|---|
| 1 | 1 | TP-MM1-0001 | ELECTRONICS BACK PANEL |
| 2 | 1 | TP-MM1-0002 | ELECTRONICS PANEL |
| 3 | 1 | TP-MM1-0003 | BACK COVER |
| 4 | 1 | TP-MM1-0004 | FRONT COVER |
| 5 | 2 | TP-MM1-0005 | STAND-OFF |
| 6 | 1 | TP-205108 | EMI FILTER, CORCOM |
| 7 | 1 | TP-219455-1 | AUXILIARY RELAY |
| 8 | 2 | TP-224001 | PCB, SUPPLY HOPPER CONTROLLER |
| 9 | 2 | TP-112240 | POWER CORD STRAIN RELIEF |
| 10 | 1 | TP-212410 | AC OUTLET |
| 11 | 1 | TP-212248 | CONNECTOR, MULTIPOLE RECTANGULAR |
| 12 | 1 | TP-207216, TP-207344 | FUSE HOLDER AND FUSE |
| 13 | 1 | TP-212160 | 5 POS MINI DIM |
| 14 | 3 | TP-212247 | CONNECTOR, MULTIPOLE RECTANGULAR |
| 15 | 1 | TP-212167 | 6-PIN FEMALE |
| 16 | 1 | TP-212229 | 7-PIN AMPHENOL MALE |
| 17 | 2 | TP-212333 | 3-PIN FEMALE AMPHENOL |
| 18 | 1 | TP-215005 | SWITCH |
| 19 | 1 | TP-215004 | SWITCH KNOB |
| 20 | 1 | TP-213361 | 24 VDC, 3 AMP POWER SUPPLY |
| 21 | 4 | TP-110766 | 1 INCH DIA. RUBBER FOOT – 1/4-20 X 0.375 STUD |
| 22 | 1 | TP-T10MM1006 | OVERLAY |
| 23 | 1 | TP-220515 | PLC ANALOG |
| 24 | 1 | TP-213426 (US), 213427 (NON-US) | 24 VOLT POWER SUPPLY |
| 25 | 1 | TP-218020 | DIN RAIL |
| 26 | 1 | TP-220511 | PLC, FPG-C32T2H GREY |
| 27 | 2 | TP-501173-3 | DC MOTOR DRIVE |
| 28 | 4 | TP-214275 | 3/4" LONG 6-32 STANDOFF |
| 29 | 2 | TP-218021 | DIN RAIL |
| 30 | 4 | TP-214285 | STANDOFF 1-1/2"LONG 6-32 |
| 31 | 6 | TP-208141 | SMALL TERMINAL BLOCK |
| 32 | 13 | TP-208142 | LARGE TERMINAL BLOCK |

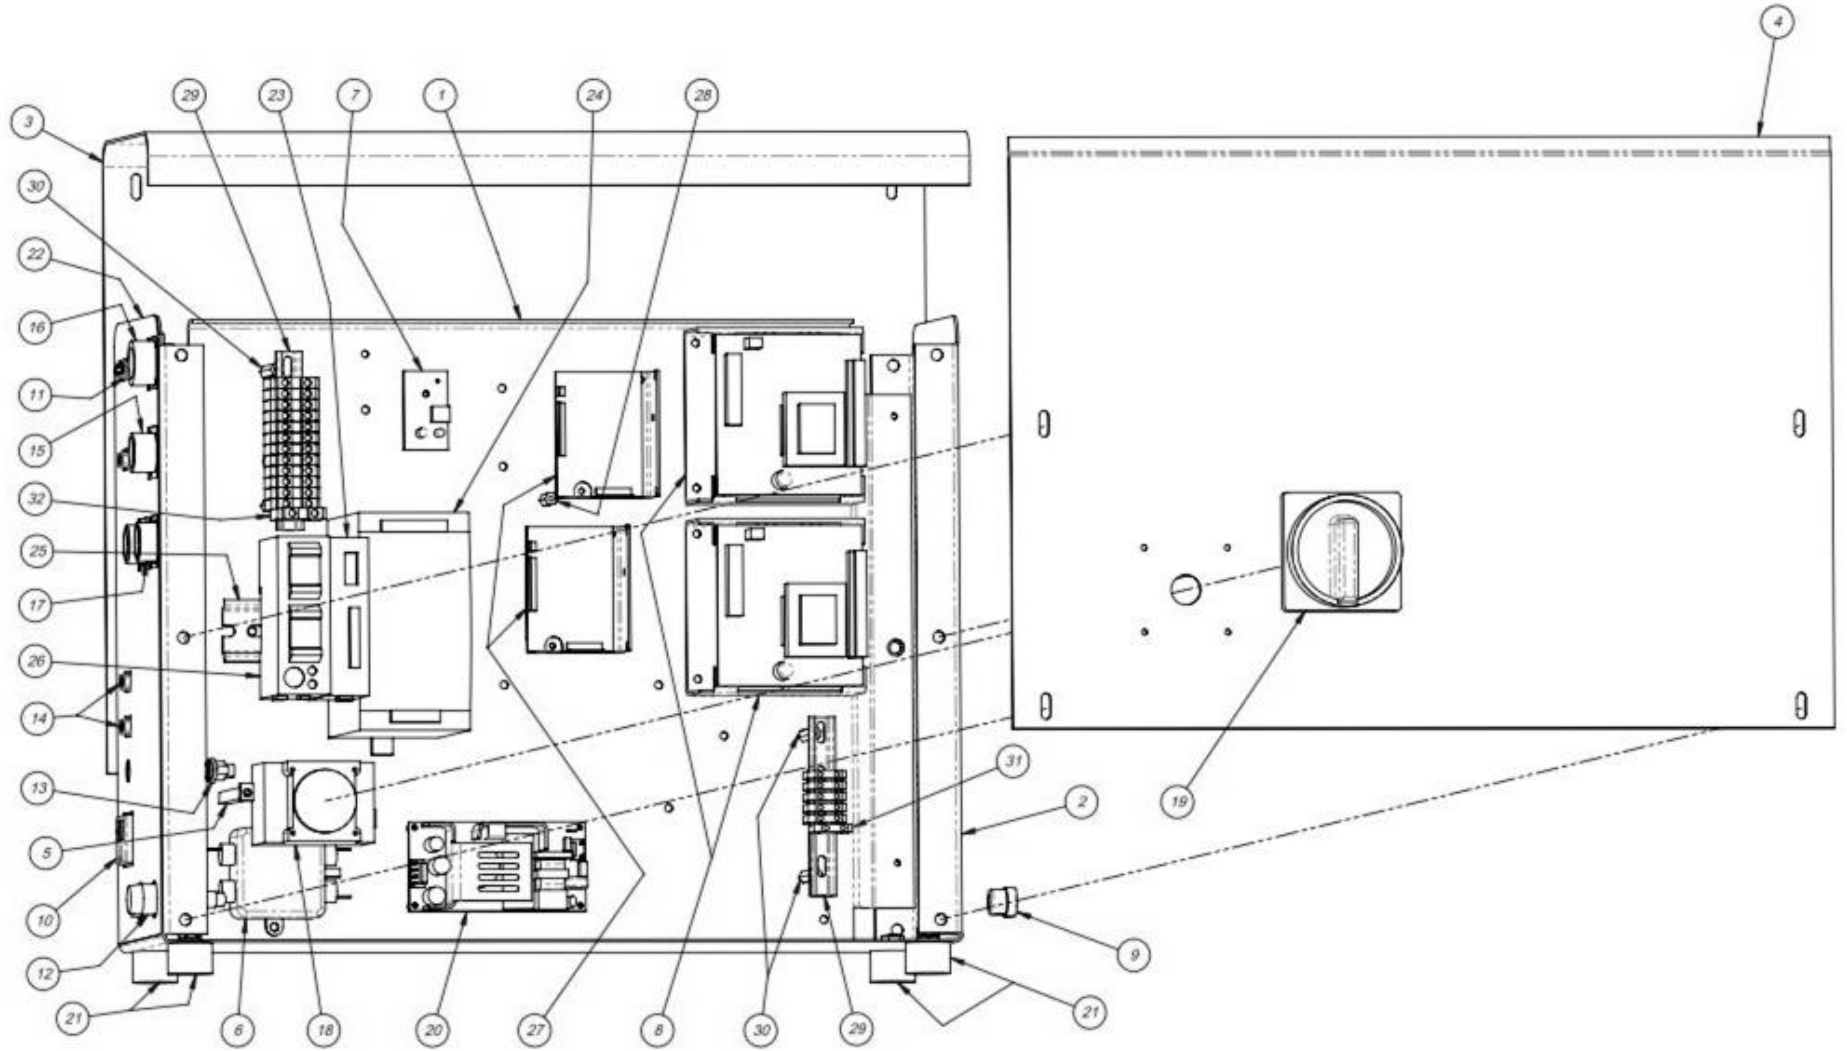

5.3 Cable Assemblies

PN: TA-UC2000-DC

| ITEM NO. | QTY | PART NO. | DESCRIPTION |
|----------|-----|-----------|------------------------|
| 1 | 1 | TA-UC2020 | POWER CABLE |
| 2 | 1 | TA-UC2011 | EYE CABLE |
| 3 | 1 | TA-UC2030 | AUX IN / OUT CABLE |
| 4 | 1 | TA-UC2040 | HOPPER CABLE |
| 5 | 1 | TA-UC2061 | DC DRIVE V-TRACK CABLE |
| 6 | 1 | TA-UC2070 | BOWL DRIVE CABLE |

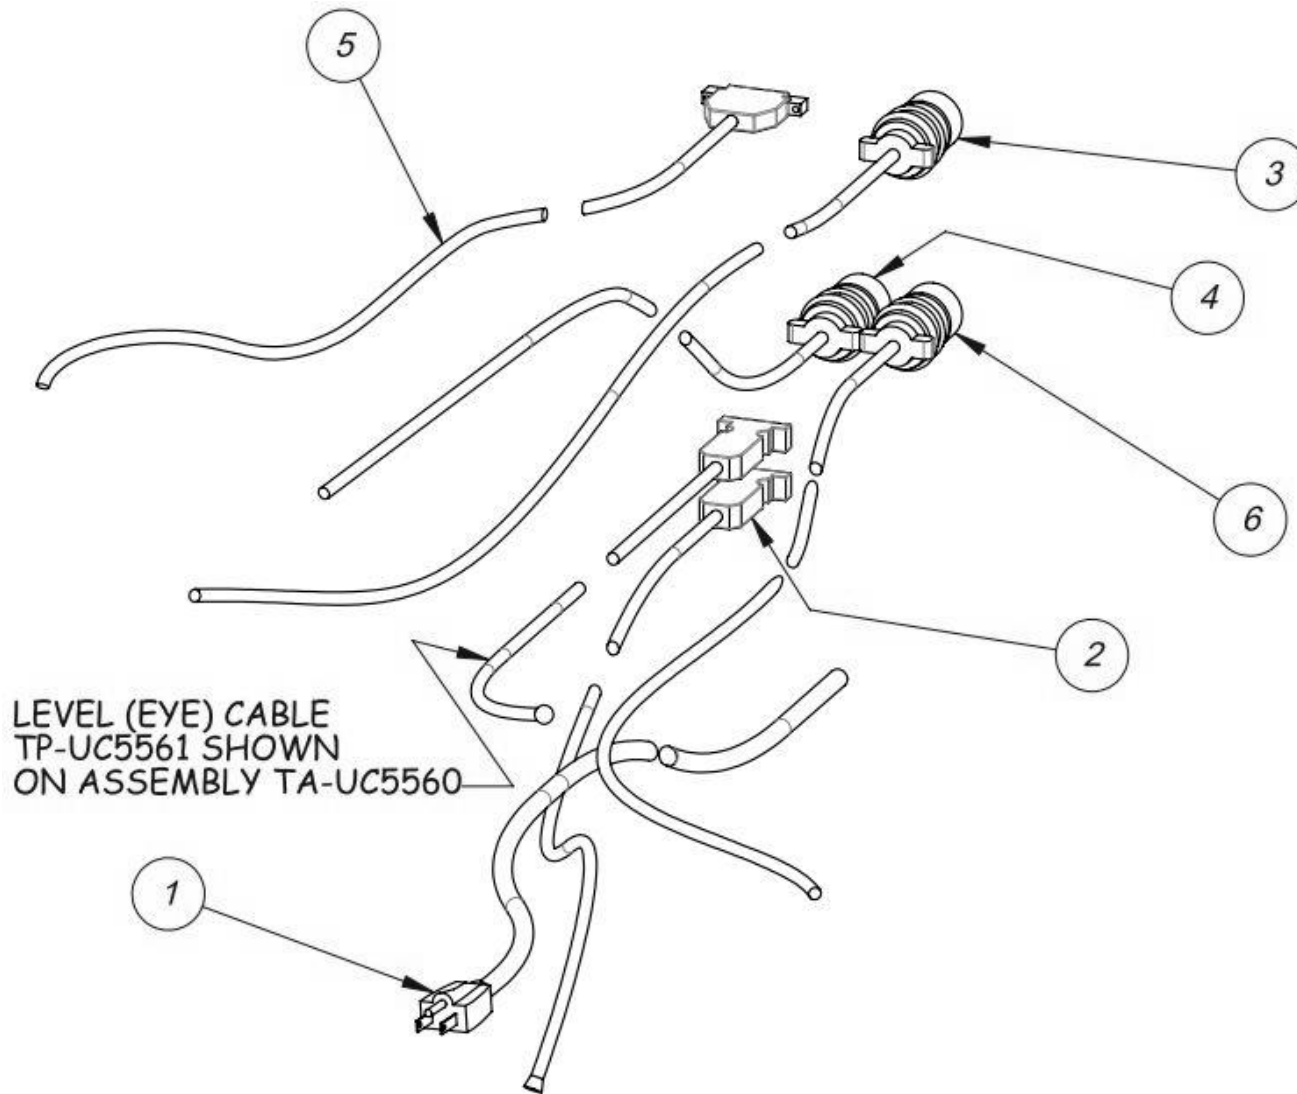


5.4 V-Track Assembly, Long

PN: TA-UC2400-LDC

| ITEM NO. | QTY | PART NO. | DESCRIPTION |
|----------|-----|----------------|-----------------------------|
| 1 | 1 | TA-UC2400-LDC1 | LONG BELT GUIDE ASSEMBLY |
| 2 | 1 | TA-UC2400-DC2 | BELT DRIVE HOUSING ASSEMBLY |
| 3 | 1 | TP-T10MA8022 | CCW CASE |
| 4 | 1 | TP-503103 | CONVEYOR BELT |
| 5 | 1 | TP-503104 | CONVEYOR BELT |

*Note: If you purchased the UCS-2400 with the **Short V-Track configuration**, your part numbers for the V-track assembly are the same as those listed above, with the following exceptions: Item 1 is replaced with TA-UC2400-SDC1, Item 4 is replaced with TP-503105, and Item 5 is replaced with TP-503106.*

*Note: If you purchased the UCS-2400 with the **Clockwise Bowl configuration**, your part numbers for the V-track assembly are the same as those listed above, with the following exception: Item 3 is replaced with TP-T10MA8033.*

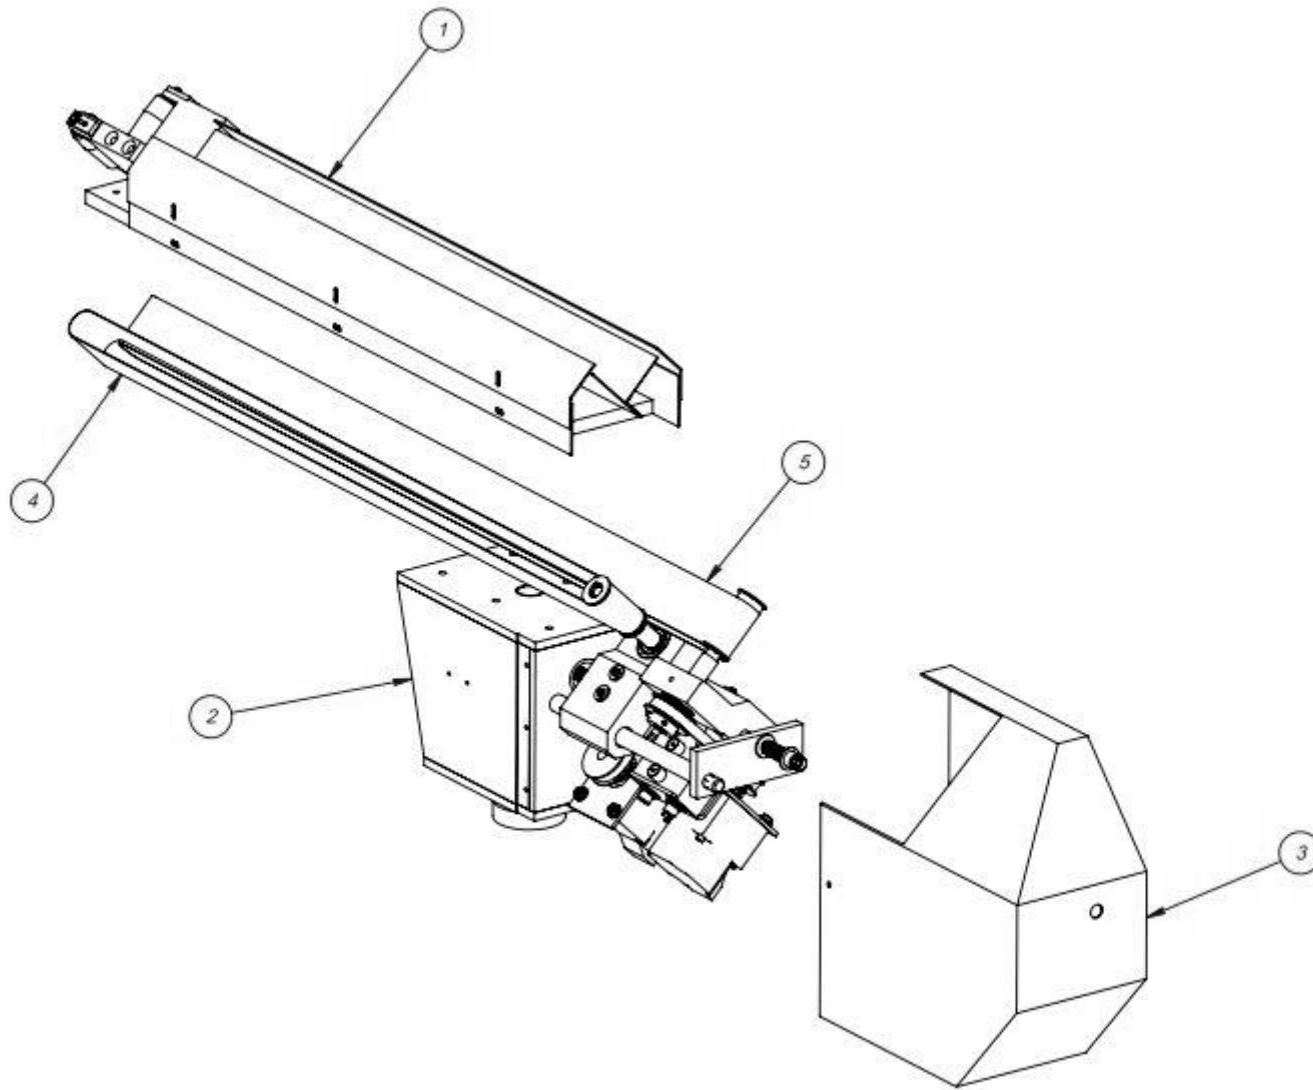


V-TRACK ASSEMBLY, LONG
PN: TA-UC2400-LDC

5.5 Long Belt Guide Assembly

PN: TA-UC2400-LDC1

| ITEM NO. | QTY | PART NO. | DESCRIPTION |
|----------|-----|----------------|--------------------|
| 1 | 1 | TP-T10MA8011 | CONVEYOR PLATE |
| 2 | 1 | TP-T10MA8014 | ANGLE MOUNT |
| 3 | 1 | TP-T10MA8012RH | ROLLER BLOCK |
| 4 | 1 | TP-T10MA8012LH | ROLLER BLOCK |
| 5 | 2 | TP-T10MA8013 | IDLER ROLLER |
| 6 | 1 | TP-T10MA8018LH | UPPER GUARD |
| 7 | 1 | TP-T10MA8017LH | LOWER GUARD |
| 8 | 1 | TP-T10MA8018RH | UPPER GUARD |
| 9 | 1 | TP-T10MA8017RH | LOWER GUARD |
| 10 | 1 | TP-T10MA8023 | BELT SUPPORT ANGLE |
| 11 | 1 | TP-T10MA8024 | BELT SUPPORT FLAT |
| 12 | 2 | TP-T10MA8025 | BELT SUPPORT BLOCK |
| 13 | 2 | TP-T10MA8015 | ADJUSTER |
| 14 | 2 | TP-T10MA8016 | ROLLER SHAFT |
| 15 | 4 | TP-504104 | BEARING |

*Note: If you purchased the UCS-2400 with the **Short V-Track** configuration, your part numbers for the Belt Guide Assembly are the same as those listed above, with the following exceptions: Item 1 is replaced with TP-T10MA8011-S, Item 8 is replaced with TP-T10MA8017LHS, Item 9 is replaced with TP-T10MA8017RHS, Item 10 is replaced with TP-T10MA8018LHS, Item 11 is replaced with TP-T10MA8018RHS, Item 12 is replaced with TP-T10MA8023-S, and Item 13 is replaced with TP-T10MA8024-S.*

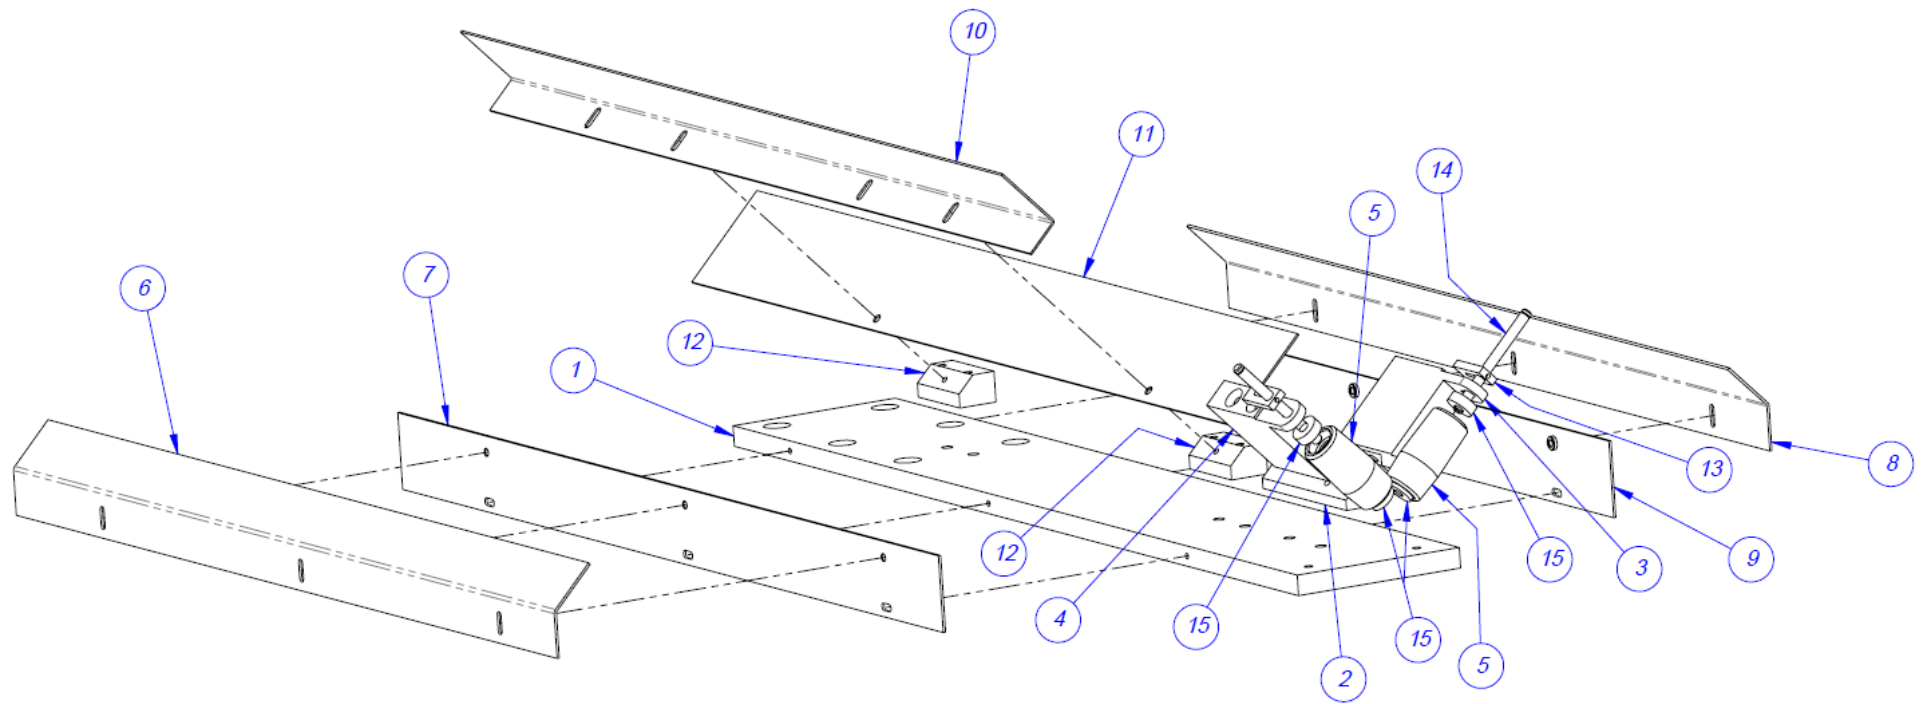


LONG BELT GUIDE ASSEMBLY
PN: TA-UC2400-LDC1

5.6 Belt Drive Housing Assembly

PN: TA-UC2400-DC2

| ITEM NO. | QTY | PART NO. | DESCRIPTION |
|----------|-----|---------------|---------------------------|
| 1 | 2 | TA-UC2400-DC3 | BELT DRIVE ASSEMBLY |
| 2 | 1 | TP-T10MA8007 | FRAME BLOCK |
| 3 | 1 | TP-T10MA8008 | TIE PLATE |
| 4 | 2 | TP-T10MA8009 | TIE ROD |
| 5 | 1 | TP-T10MA8010 | SPRING CUP |
| 6 | 1 | TP-T10MA8019 | VERTICAL SUPPORT ROD |
| 7 | 1 | TP-T10MA8020 | SUPPORT COLUMN |
| 8 | 1 | TP-402175 | BRACKET |
| 9 | 1 | TP-402255 | VALVE |
| 10 | 1 | TP-401277 | ELBOW, 1/4" TUBE x #10-32 |
| 11 | 2 | TP-404263 | MUFFLER |
| 12 | 3 | TP-102144 | 3/8 FLAT WASHER |
| 13 | 2 | TP-108124 | COMPRESSION SPRING |
| 14 | 1 | TP-103547-3 | SCREW, SET 3/8-16 x1 |
| 15 | 1 | TP-103254 | SCREW, SHCS 3/8-16 x3-1/2 |

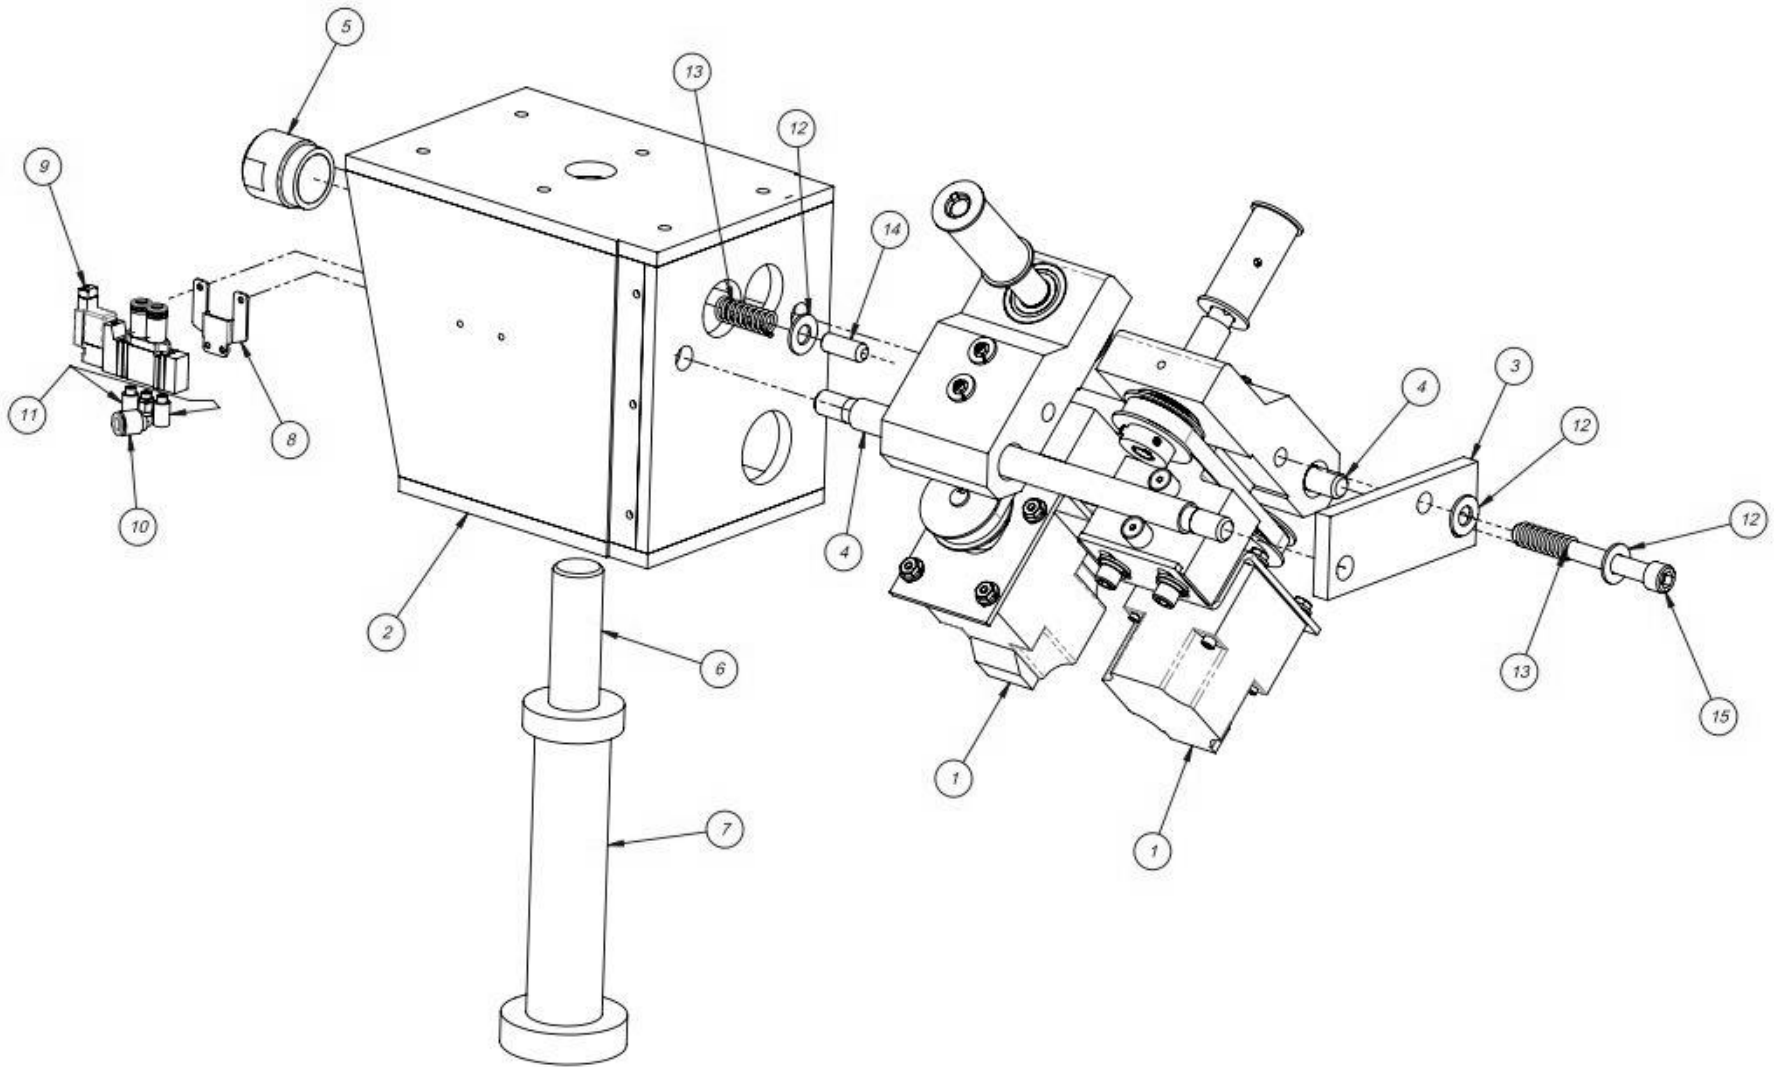


BELT DRIVE HOUSING ASSEMBLY
PN: TA-UC2400-DC2

5.7 Belt Drive Assembly

PN: TA-UC2400-DC3

| ITEM NO. | QTY | PART NO. | DESCRIPTION |
|----------|-----|----------------|---------------------|
| 1 | 1 | TP-T10MA8002 | SLIDE BLOCK |
| 2 | 1 | TP-T10MA8003 | STAND-OFF |
| 3 | 1 | TP-T10MA8004 | MOTOR BRACKET |
| 4 | 1 | TP-T10MA8005-1 | DRIVEN ROLLER SHAFT |
| 5 | 1 | TP-T10MA8006 | DRIVEN ROLLER |
| 6 | 1 | TP-T10MA8026 | BELT DRIVE PULLEY |
| 7 | 1 | TP-T10MA8031DC | MOTOR PULLEY |
| 8 | 2 | TP-504115 | BALL BEARING |
| 9 | 1 | TP-107343 | THRUST BEARING |
| 10 | 2 | TP-504133 | CAM FOLLOWER |
| 11 | 3 | TP-308398 | 0.125 SQ. KEYSTOCK |
| 12 | 1 | TP-501173 | DC MOTOR |
| 13 | 1 | TP-503102 | DRIVE BELT |

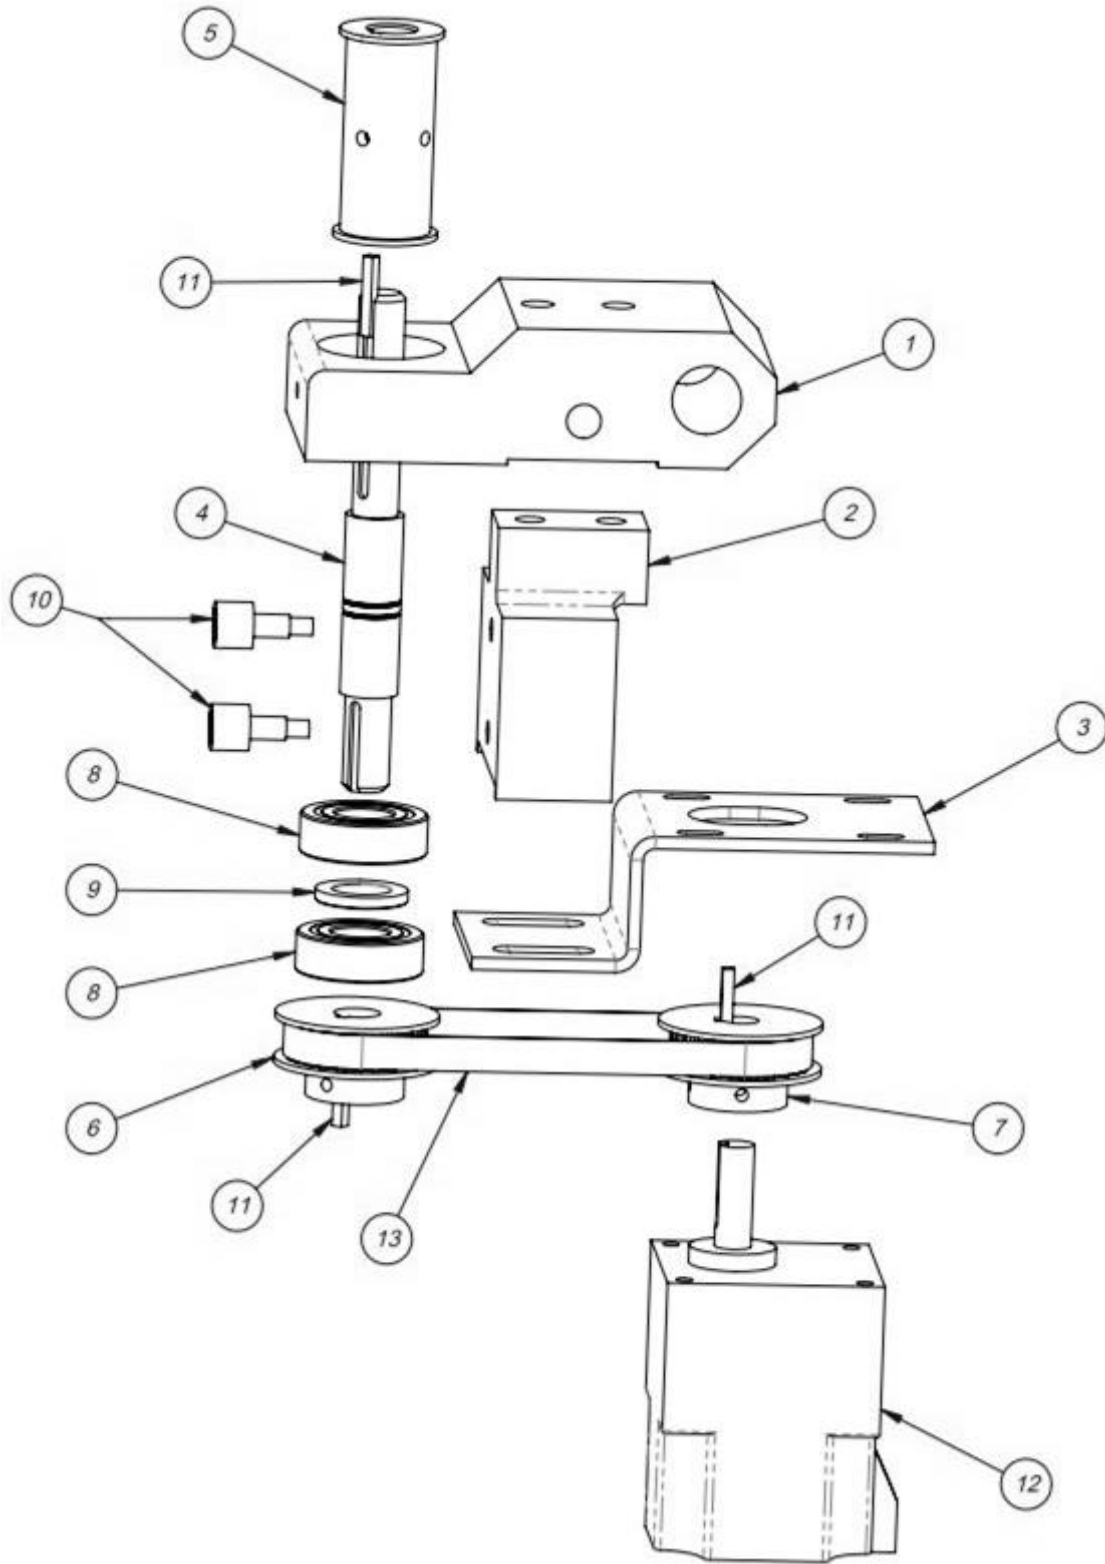

BELT DRIVE ASSEMBLY
PN: TA-UC2400-DC3


5.8 Touch Screen Assembly

PN: TA-UC3000

| ITEM NO. | QTY. | PART NO | DESCRIPTION |
|----------|------|---------------|----------------------------|
| 1 | 1 | TP-T10MA0214 | IOP FRAME |
| 2 | 2 | TA-T10240-IOP | SEVEN INCH TOUCH SCREEN |
| 3 | 2 | TP-103070 | SCREW, SHCS 3/8-16 x 2-1/4 |
| 4 | 2 | TP-102144 | WASHER, 3/8 FLAT |
| 5 | 2 | TP-102157 | WASHER, 3/8 LOCK |
| 6 | 2 | TP-101114 | NUT, 3/8-16 HEX |

Note: The UCS-2400 can be equipped with either one touch screen or with two touch screens. The quantities listed above apply to the two-touch screen model. If the UCS-2400 only has one touch screen, halve the above quantities, except for Item 1, the IOP frame.


Note: For multiple UCS-2400s, each module may have its own mounting bracket.

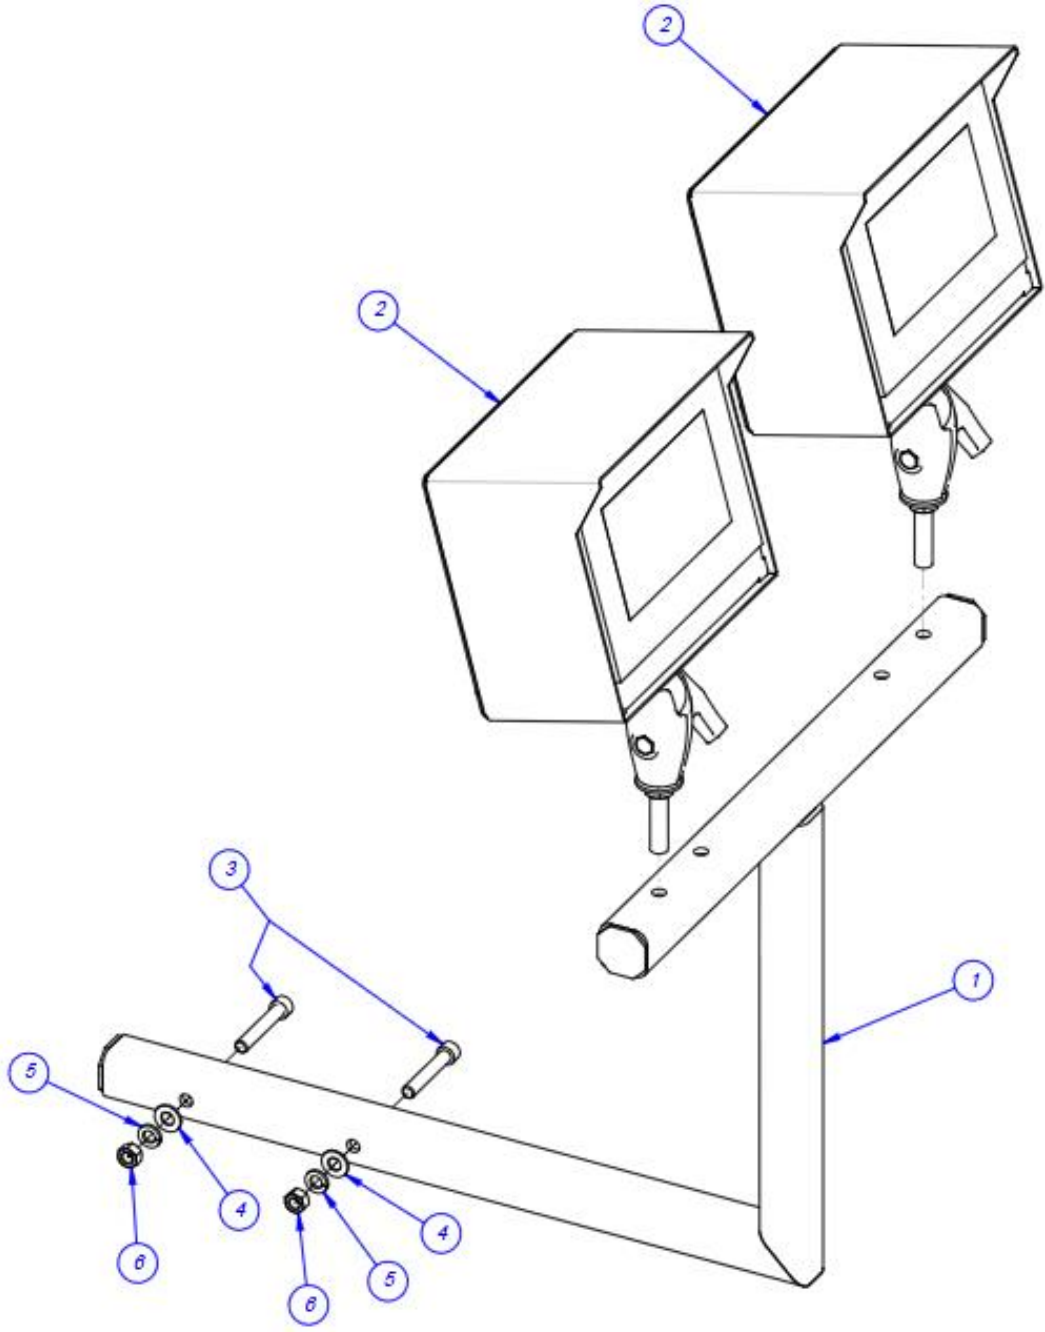

5.9 Accumulator Funnel Assembly

PN: TA-UC5000

| ITEM NO. | QTY | PART NO. | DESCRIPTION |
|----------|-----|--------------|------------------------|
| 1 | 1 | TP-T10MA9001 | FRONT PANEL |
| 2 | 1 | TP-T10MA9002 | LEFT SIDE PANEL |
| 3 | 1 | TP-T10MA9004 | REAR PANEL |
| 4 | 1 | TP-T10MA9005 | TOP BRACE |
| 5 | 2 | TP-T10MA9010 | DEFLECTOR BLOCK |
| 6 | 1 | TP-T10MA9013 | CYLINDER BASE |
| 7 | 1 | TP-T10MA9012 | CYLINDER MOUNT |
| 8 | 1 | TP-T10MA9014 | MOUNTING ANGLE |
| 9 | 2 | TP-T10MA9015 | TOP BRACE SPACER |
| 10 | 1 | TP-T10MA9006 | TOP COVER |
| 11 | 1 | TP-T10MA9017 | COVER HINGE |
| 12 | 1 | TP-T10MA9003 | RIGHT SIDE PANEL |
| 13 | 1 | TP-T10MA9011 | DEFLECTOR BLOCK-BOTTOM |
| 14 | 1 | TP-T10MA9016 | PALM GRIP |
| 15 | 1 | TP-109164 | 3-ARM PHENOLIC KNOB |
| 16 | 1 | TP-111102 | CLAMP COLLAR |
| 17 | 1 | TP-109162 | CLAMPING KNOB 1/4-20 |
| 18 | 1 | TP-403269 | TRUNNION BRACKETS |
| 19 | 1 | TP-403267 | CYLINDER 3/4" X 2 |
| 20 | 1 | TP-403268 | PISTON ROD CLEVIS |
| 21 | 1 | SEE ASSEMBLY | GATE ASSEMBLY |
| 22 | 1 | TP-T10MA9009 | FLAP SHAFT |
| 23 | 1 | TP-T10MA9008 | FLAP COVER |
| 24 | 1 | TP-T10MA9007 | FLAP |

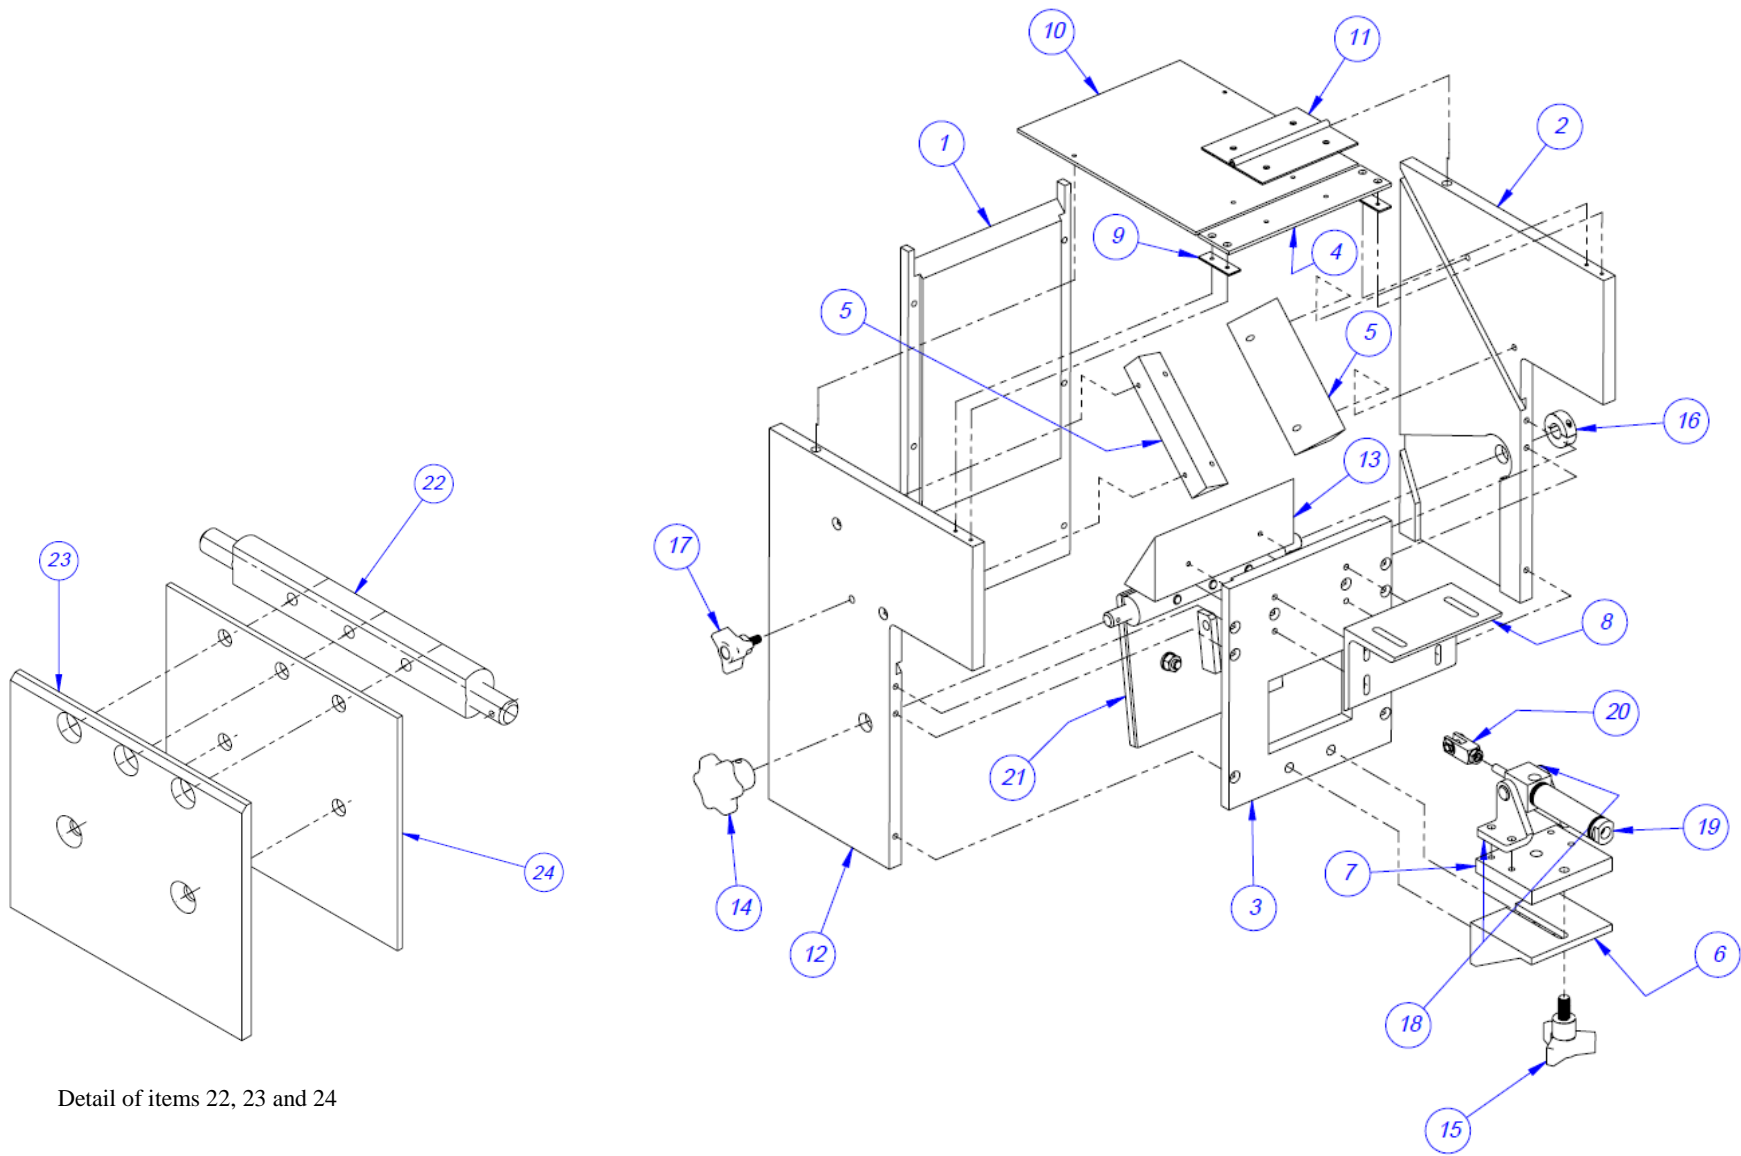


Detail of items 22, 23 and 24

5.10 Optical Eye Assembly

PN: TA-T21-5560

| ITEM NO | QTY | PART NO. | DESCRIPTION |
|---------|-----|---------------|--------------------------------|
| 1 | 1 | D9-151413-205 | EYE BASE |
| 2 | 2 | D9-151413-206 | EYE SIDE |
| 3 | 1 | TP-UC5560 | EYE |
| 4 | 1 | D9-151413-207 | EYE MOUNT BRACKET |
| 5 | 1 | D9-151413-208 | EYE COVER |
| 6 | 1 | TP-UC5561 | EYE CABLE |
| 7 | 1 | TP- 109206 | THREADED KNOB, #10-32, 1" LONG |

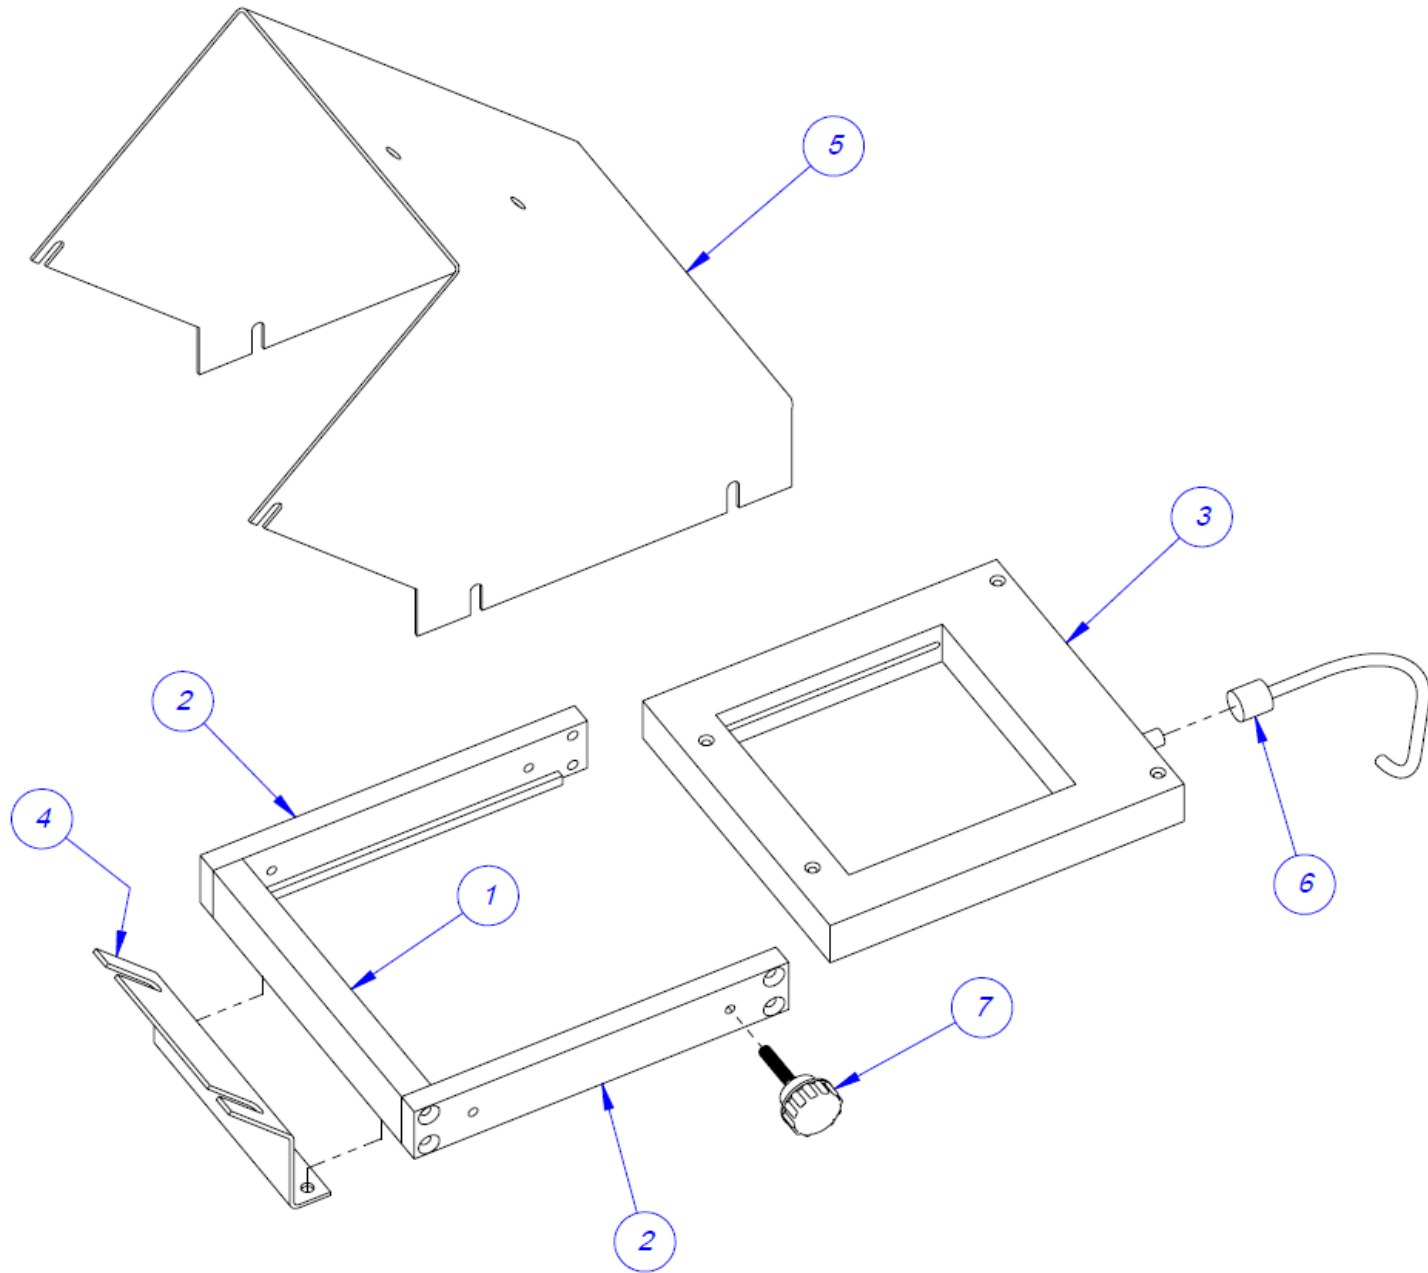


OPTICAL EYE ASSEMBLY

PN: TA-UC5560

5.11 Supply Hopper Assembly

PN: TA-UC6500

| ITEM NO | QTY | PART NO. | DESCRIPTION |
|---------|-----|---------------------------|----------------------------|
| 1 | 1 | TP-T10MA6504 | VIBRATORY SHELF |
| 2 | 1 | TP-T10MA6503 | VERTICAL SUPPORT TUBE |
| 3 | 1 | TP-T10MA6508 | VERTICAL SUPPORT TUBE |
| 4 | 1 | TP-T10MA6501 | HOPPER |
| 5 | 2 | TP-T10MA6506 | HOPPER GATE |
| 6 | 1 | TP-T10MA6505 | PAN VIBRATORY TRAY |
| 7 | 2 | TP-T10MA6502 | ANGLE MOUNT |
| 8 | 8 | TP-120150 | U-BOLT 1/4 - 20 |
| 9 | 1 | TP-224005 + (4) TP-110761 | VIBRATORY DRIVE AND MOUNTS |
| 10 | 2 | TP-109105 | NYLON PAD |
| 11 | 2 | TP-109104 | THUMB SCREW KNOB |
| 12 | 1 | TA-UC8000 | PROX SENSOR ASSEMBLY |

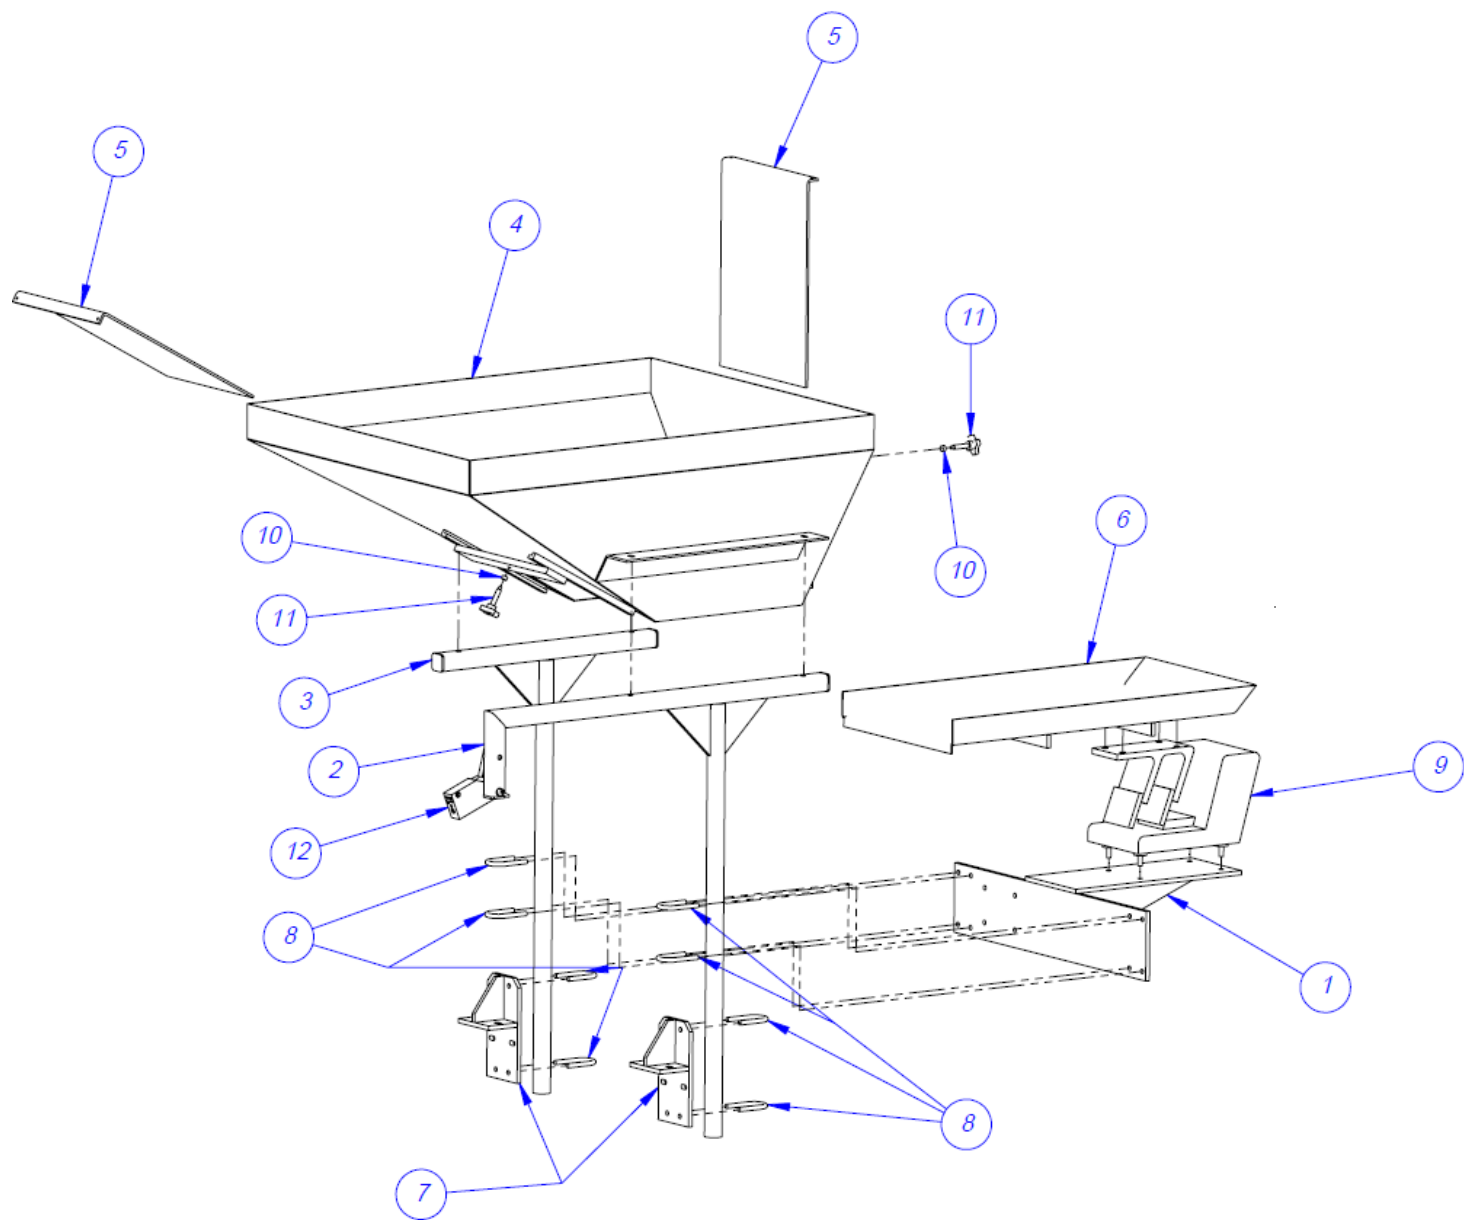


SUPPLY HOPPER ASSEMBLY
PN: TA-UC6500

5.12 CCW Vibratory Bowl Assembly

PN: TA-UC7000

| ITEM NO | QTY | PART NO. | DESCRIPTION |
|---------|-----|--------------|--------------------|
| 1 | 1 | TP-720122 | 24" BOWL AND DRIVE |
| 2 | 1 | TP-T10MA0043 | CCW SKIVER |
| 3 | 1 | TP-109161 | CLAMPING KNOB |


*Note: If you purchased the UCS-2400 with the **Clockwise Bowl Configuration**, Item 1 is replaced with TP-720122-1 and Item 2 is replaced with TP-T10MA0043-1. Item 3 is the same for both configurations.*

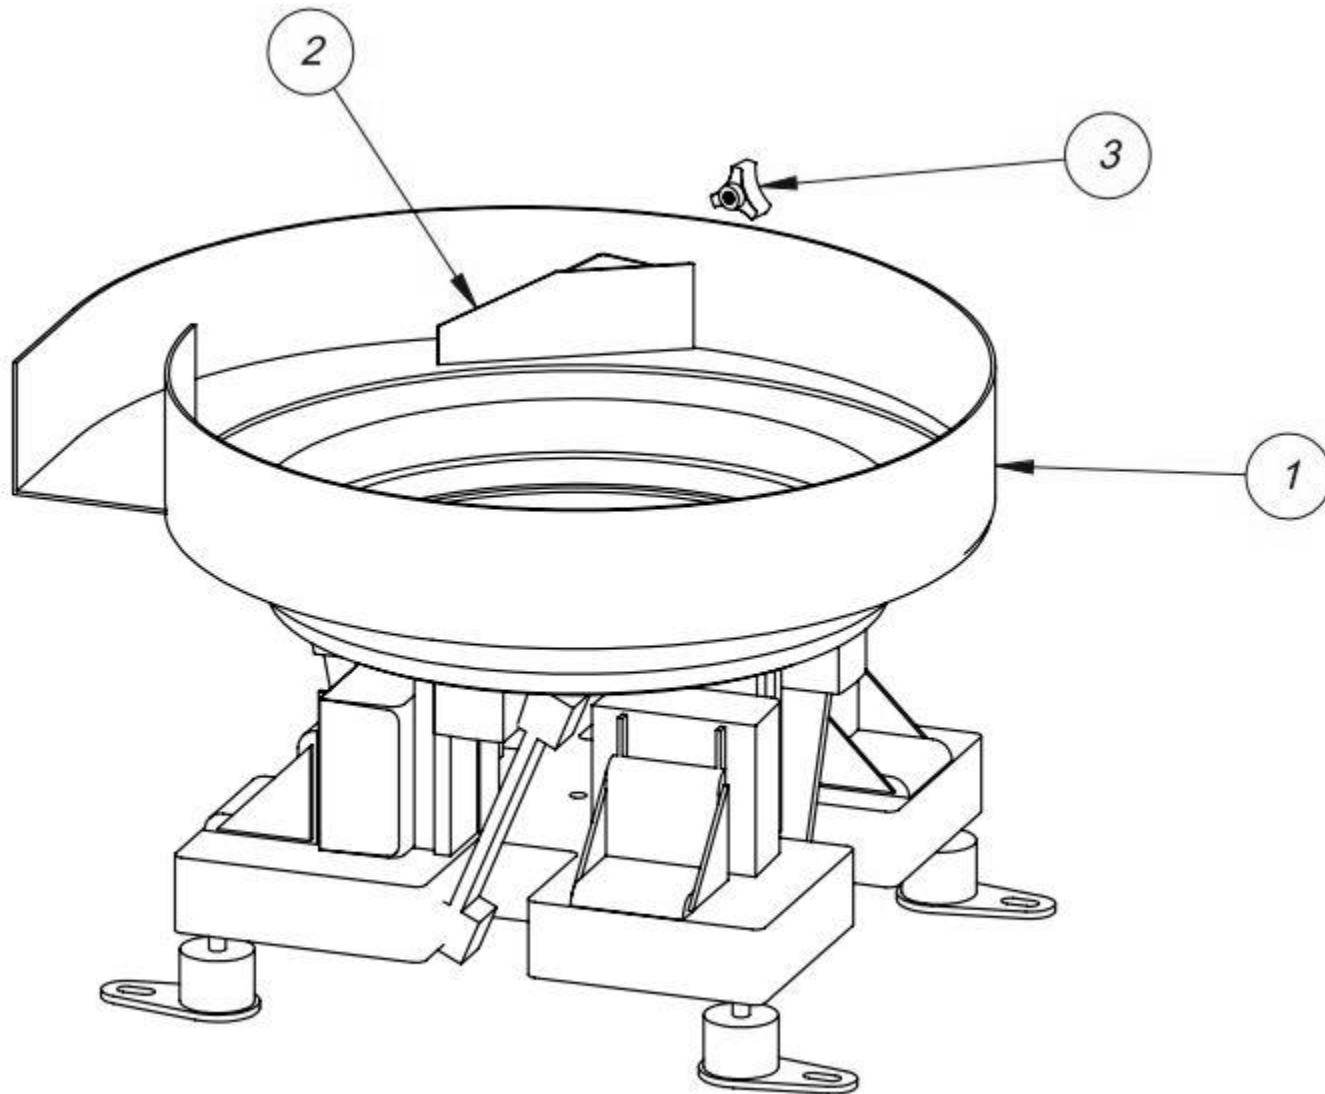

5.13 Prox Sensor Assembly

PN: TA-UC8000

| ITEM NO | QTY | PART NO. | DESCRIPTION |
|---------|-----|-----------|----------------------|
| 1 | 1 | TP-216144 | PROXIMITY SENSOR |
| 2 | 1 | TP-103053 | SCREW, SHCS 8-32 X 2 |
| 3 | 1 | TP-102133 | WASHER, #8 FLAT |
| 4 | 1 | TP-102153 | WASHER, #8 LOCK |
| 5 | 1 | TP-101129 | #8-32 WING NUT |

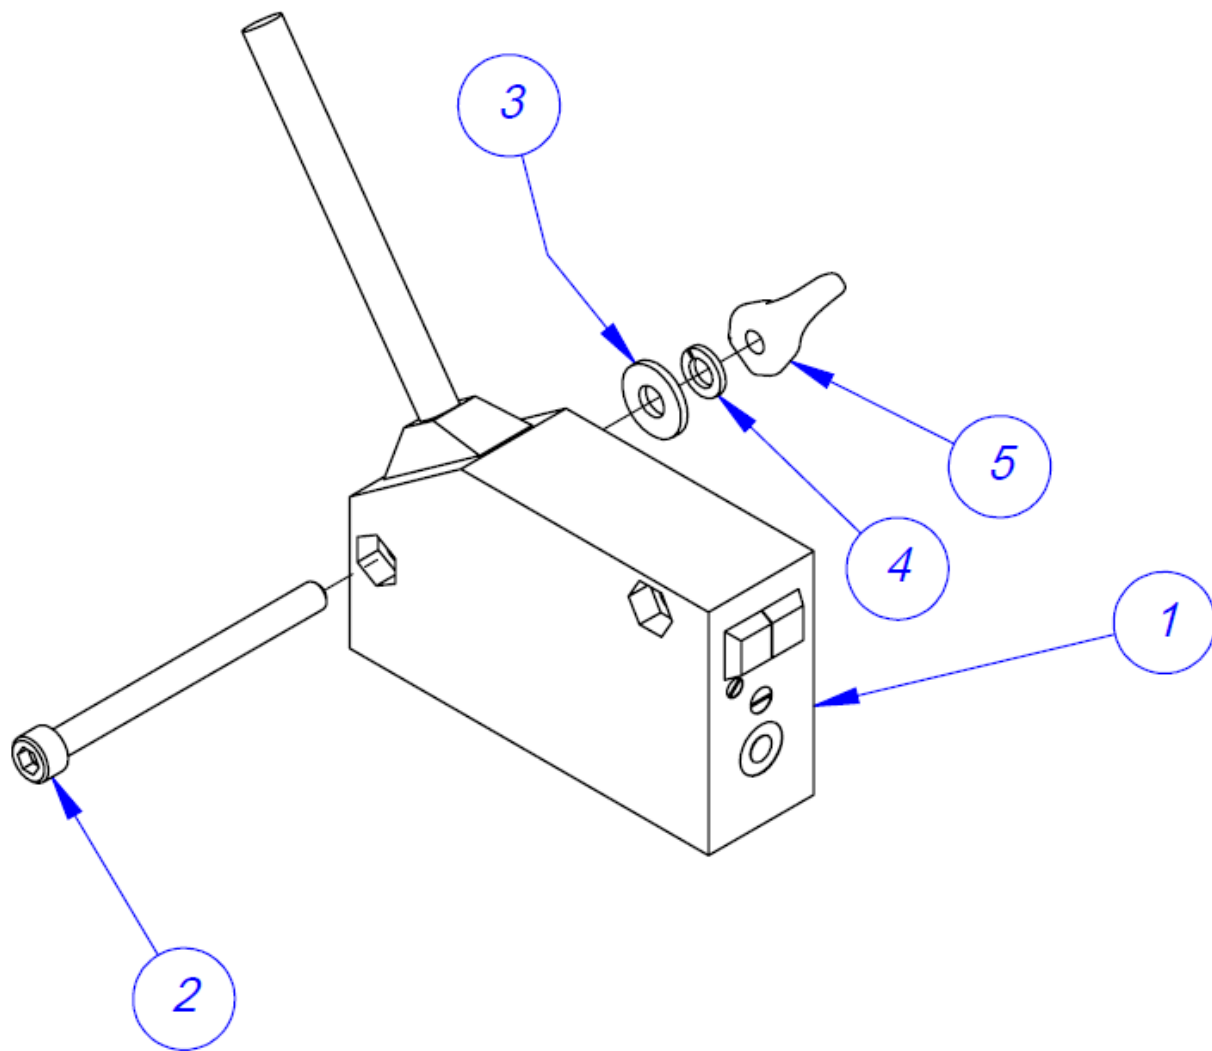


5.14 Ultra Counter-Scale Stand

PN: TA-UCSTAND


| ITEM NO | QTY | PART NO. | DESCRIPTION |
|---------|-----|---------------|----------------------------|
| 1 | 1 | D9-151413-201 | BASE WELD |
| 2 | 1 | TP-T10MA0203 | UPPER COLUMN |
| 3 | 1 | TP-T10MA0204 | LOWER COLUMN |
| 4 | 4 | TP-110764 | LEVELING MOUNT |
| 5 | 1 | TP-T10MA8021 | SUPPORT ANGLE |
| 6 | 1 | TP-T10MA8027 | BASE FOR 24" BOWL WELDMENT |
| 7 | 1 | TP-T10MA8032 | SUPPORT SHELF |

Note: Stand is optional on multiple UCS-2400 systems.


Rektangulär

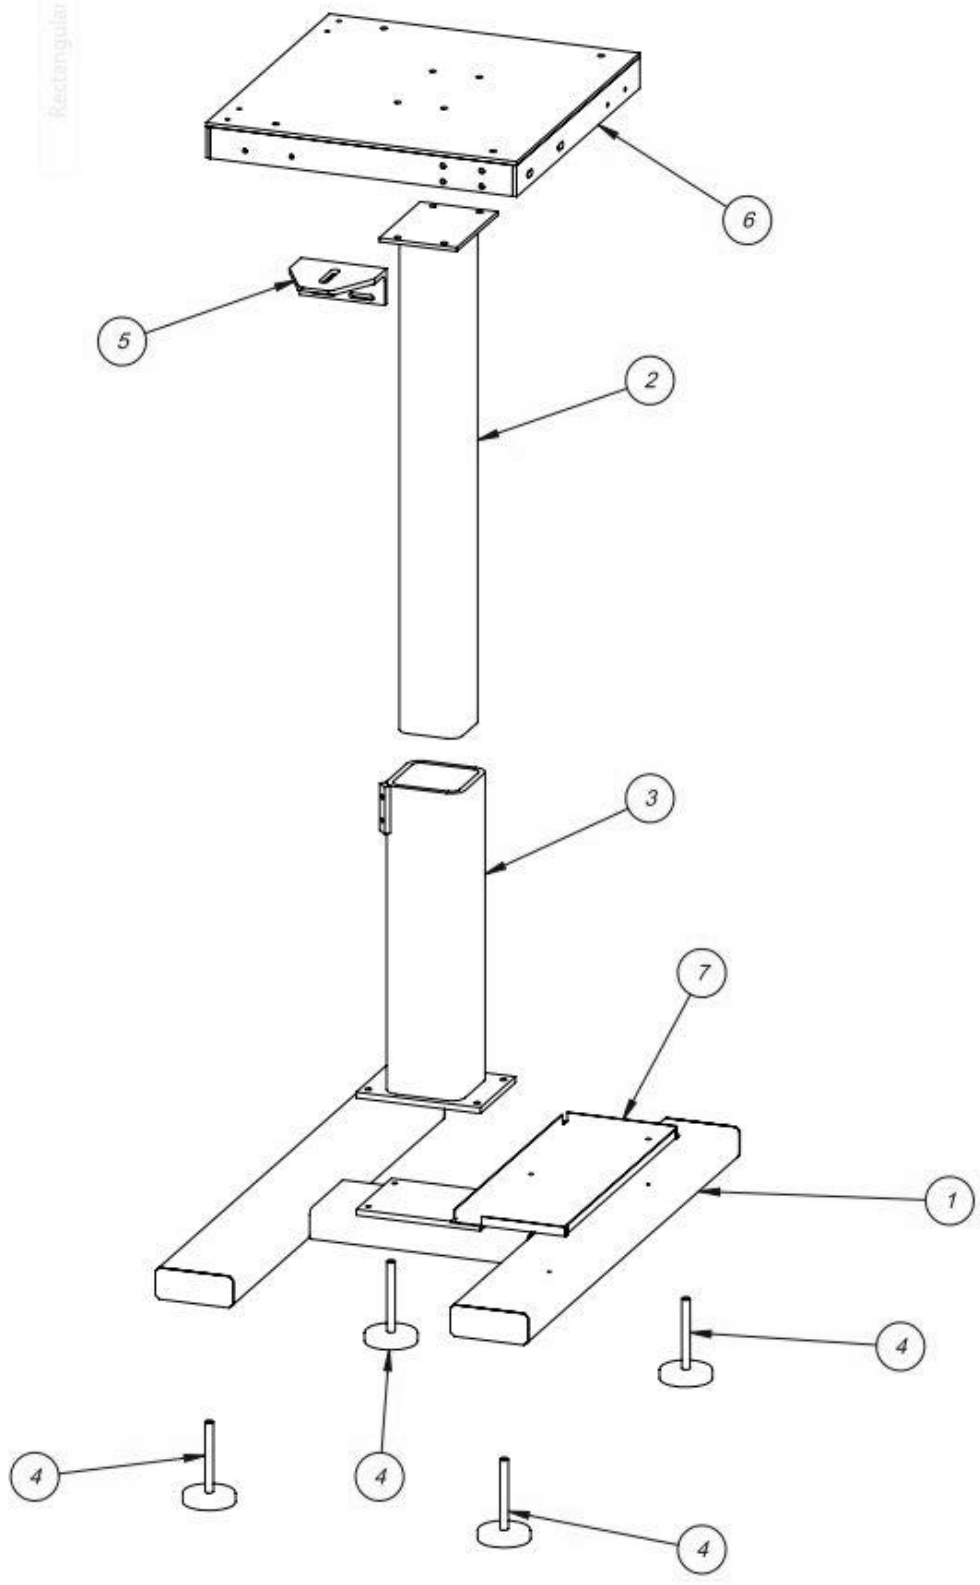

5.15 110 VAC Electrical Drawing

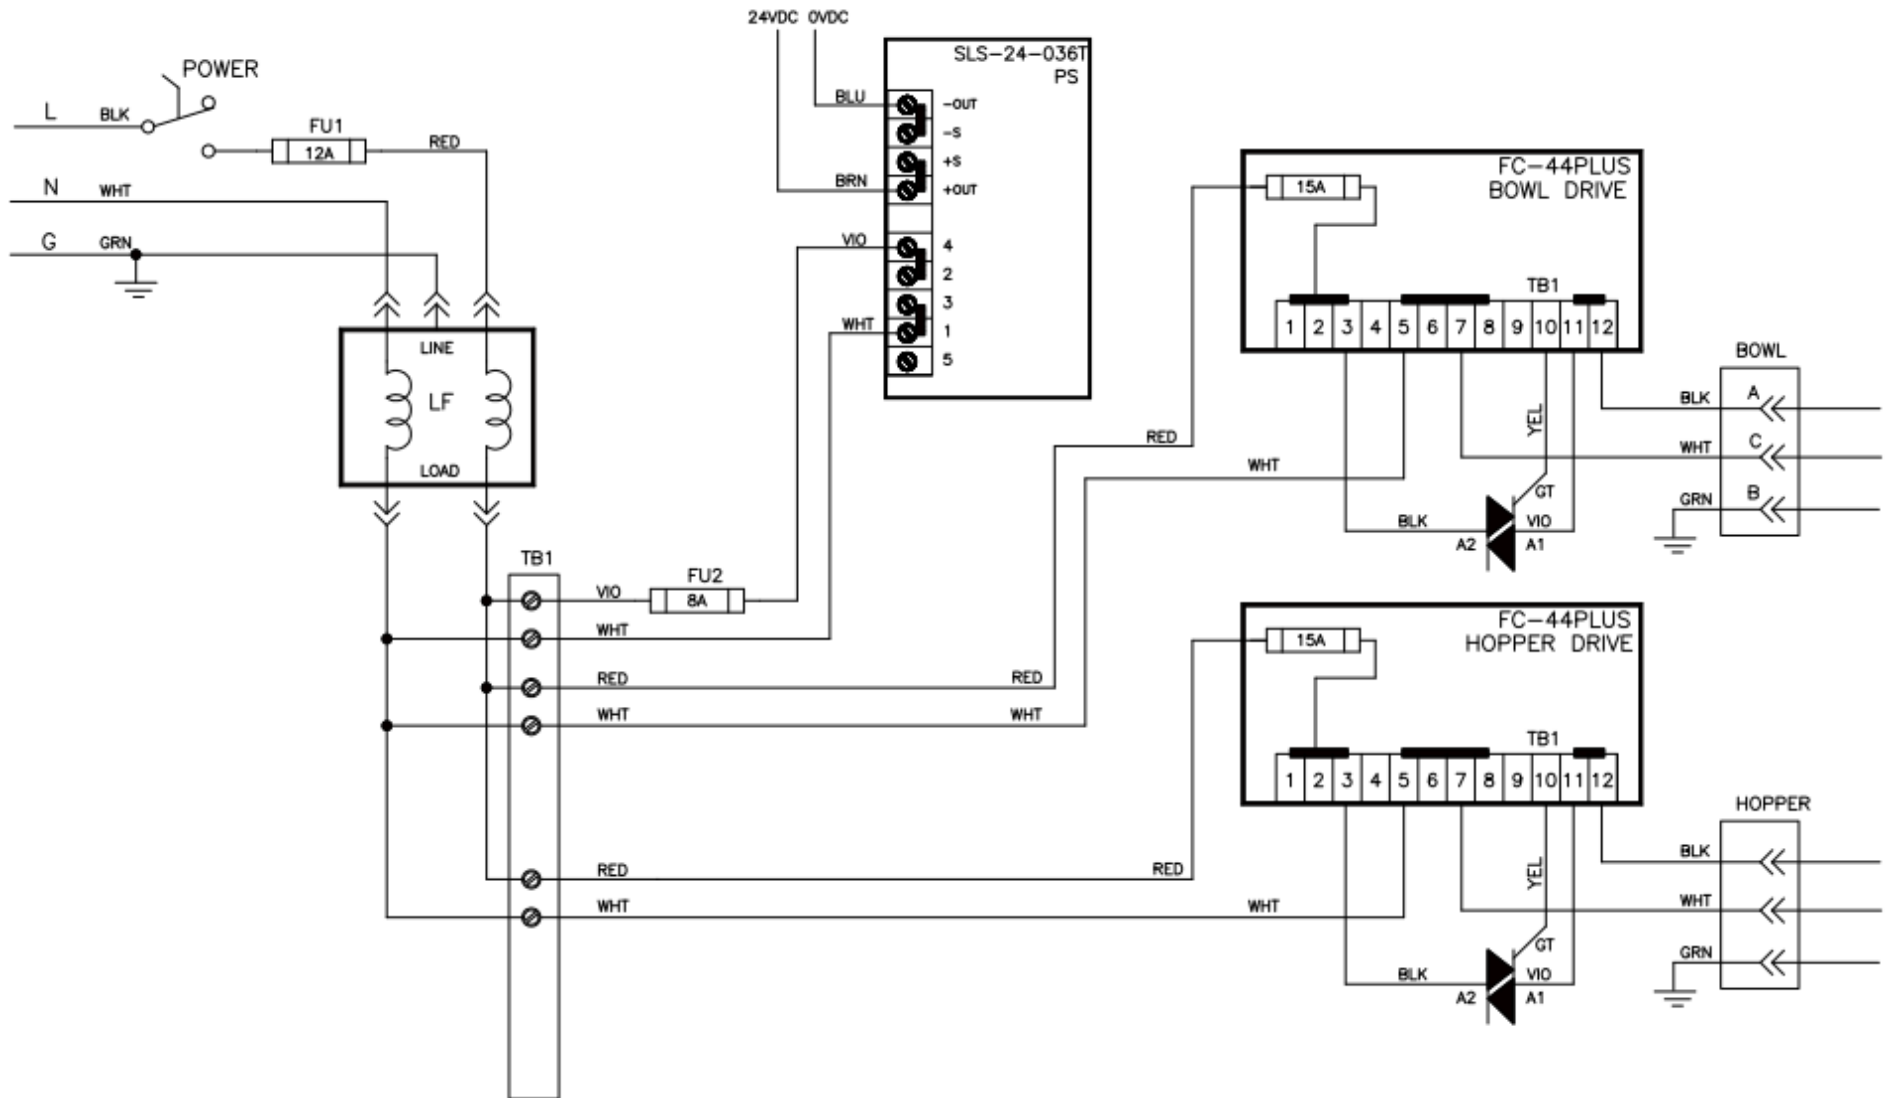


5.16 FPG I/O Electrical Drawing

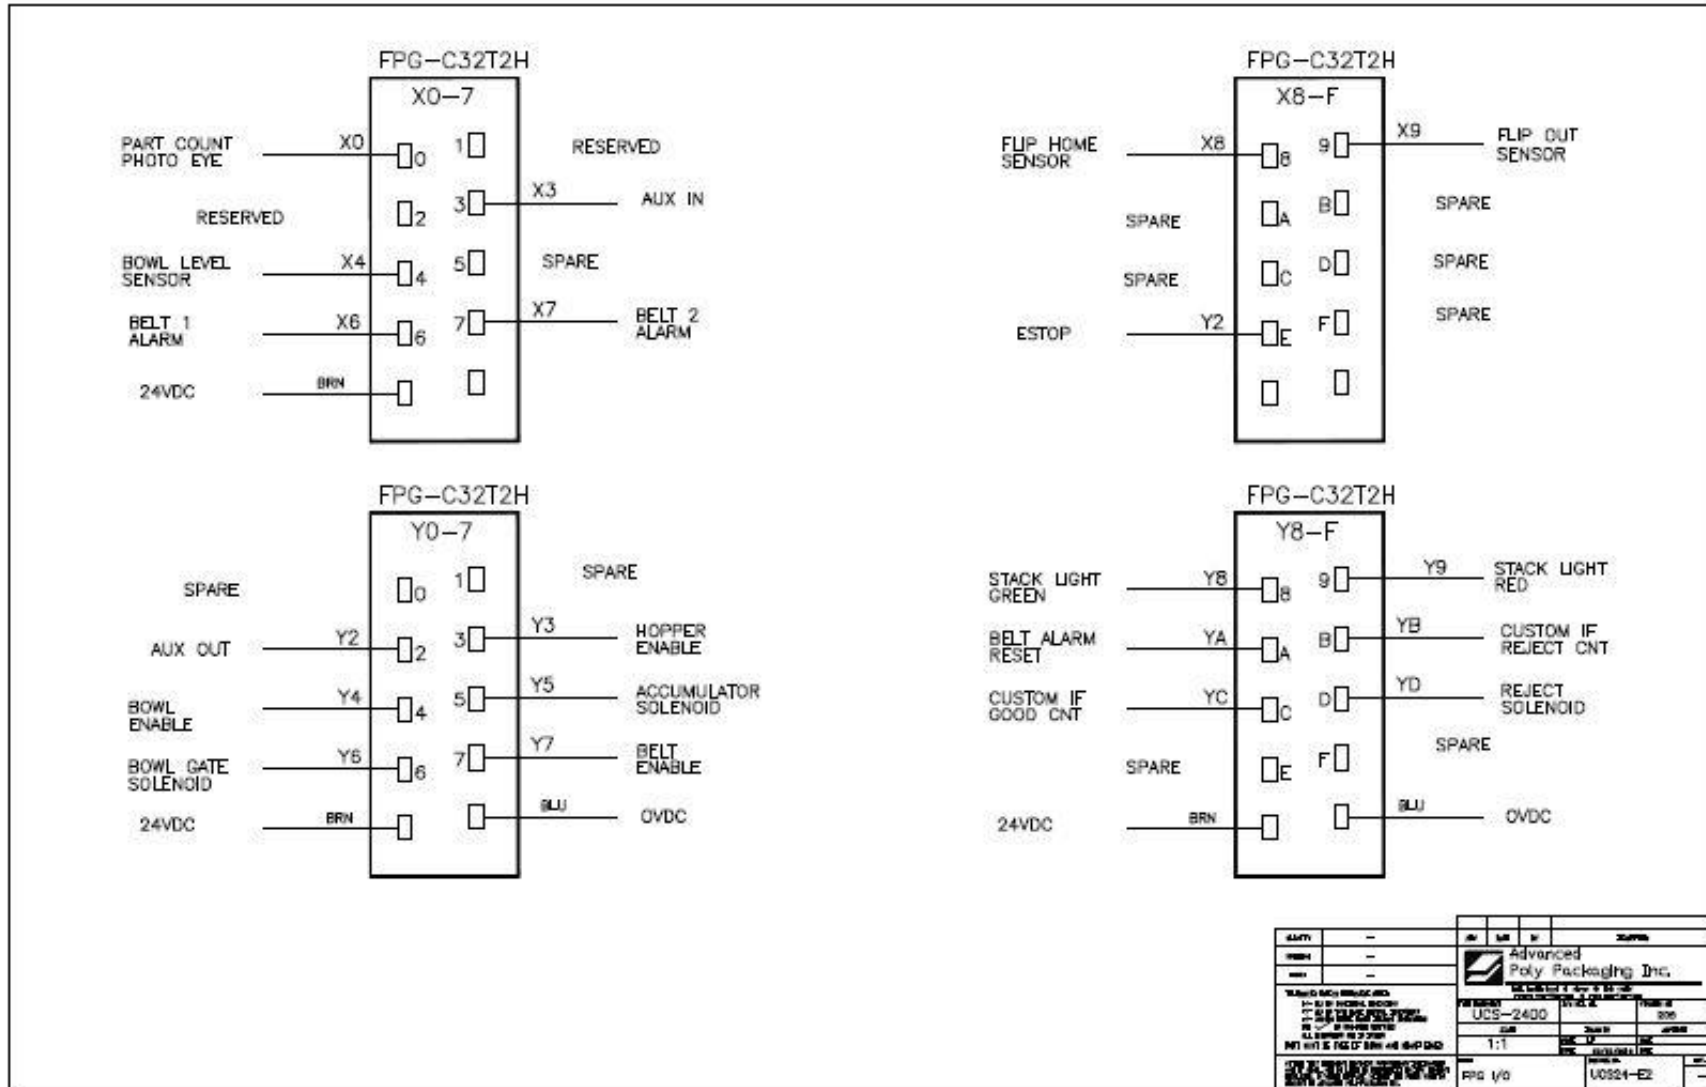


| | | | | | | | |
|---|-----|------|-----|---------------------|-----|------|-----|
| DATE | --- | REV | --- | BY | --- | CHKD | --- |
| ISSUED | --- | DATE | --- | BY | --- | CHKD | --- |
| REVISED | --- | DATE | --- | BY | --- | CHKD | --- |
| Advanced Poly Packaging Inc. 1400 S. 10th Street Waukegan, IL 60087-1000 Phone: 815-491-1000 Fax: 815-491-1001 Email: sales@poly.com | | | | UCS-2400 2006 | | | |
| SCALE: 1:1 DATE: 10/10/06 DRAWN: [Name] CHECKED: [Name] | | | | FPG I/O UCS24-E2 | | | |


5.17 Analog Control Electrical Drawing

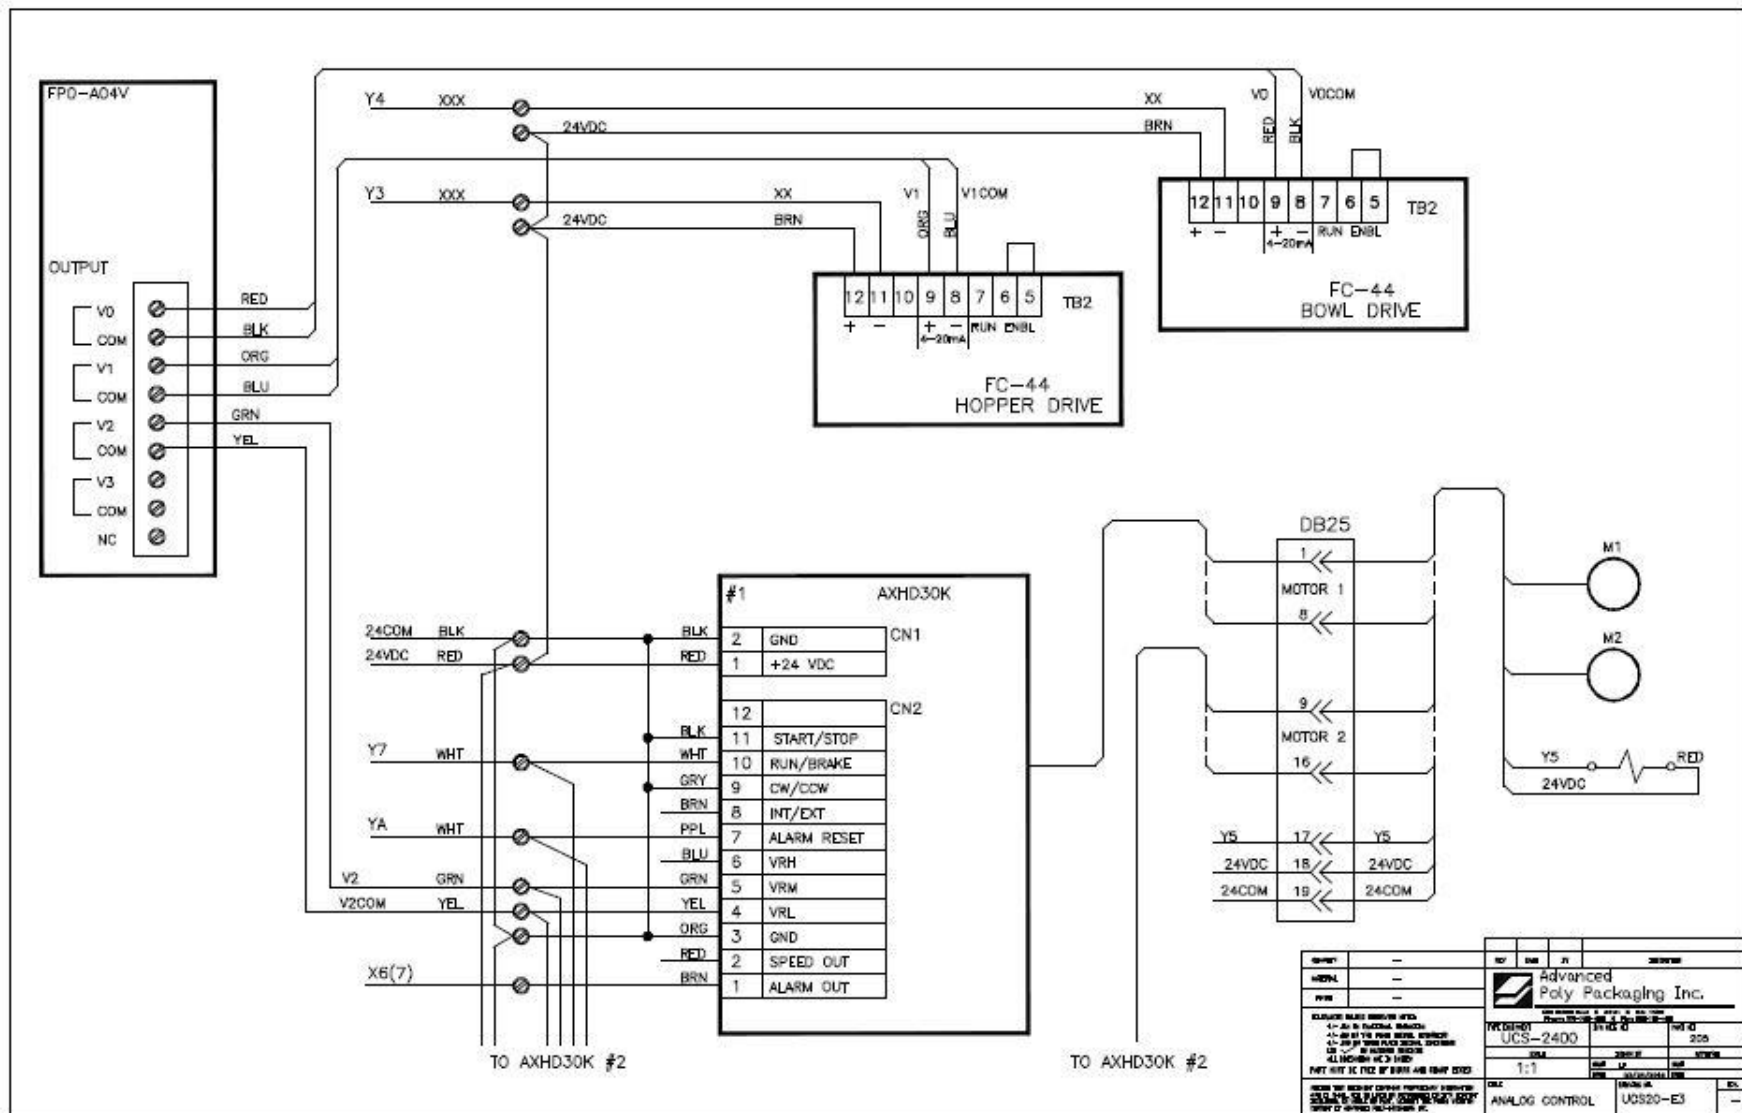




5.18 DB9 Electrical Drawing

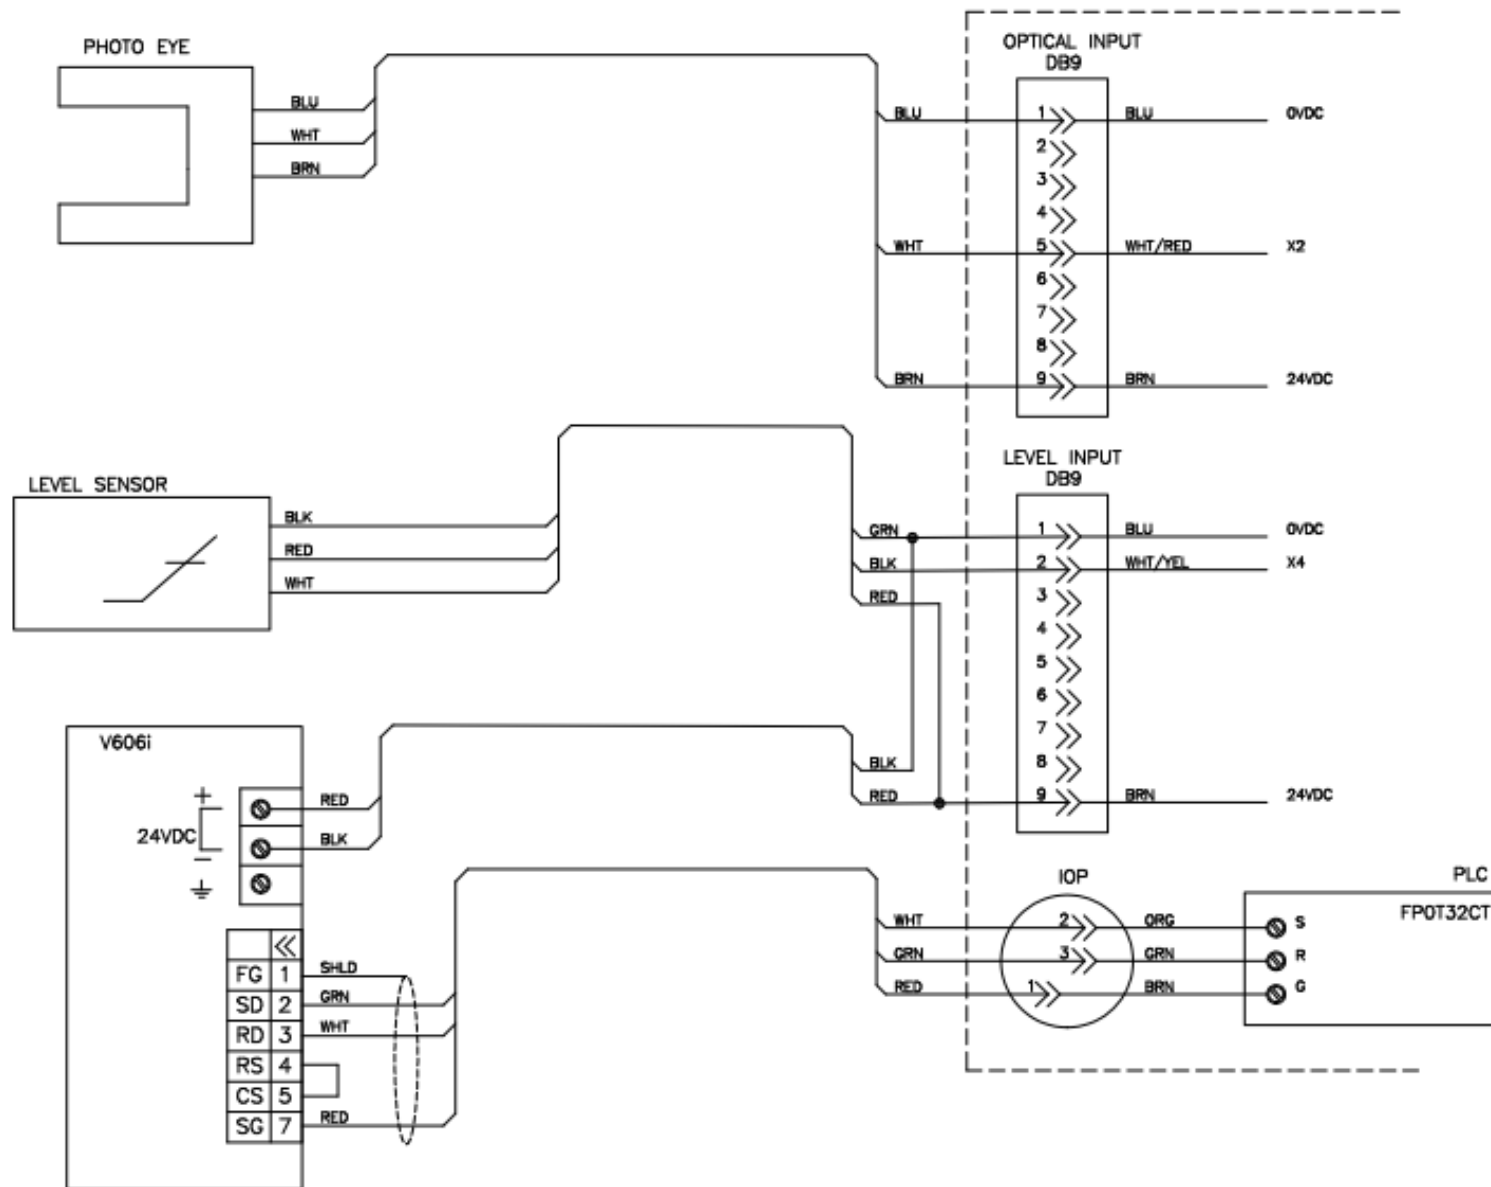

5.19 DB25 Electrical Drawing

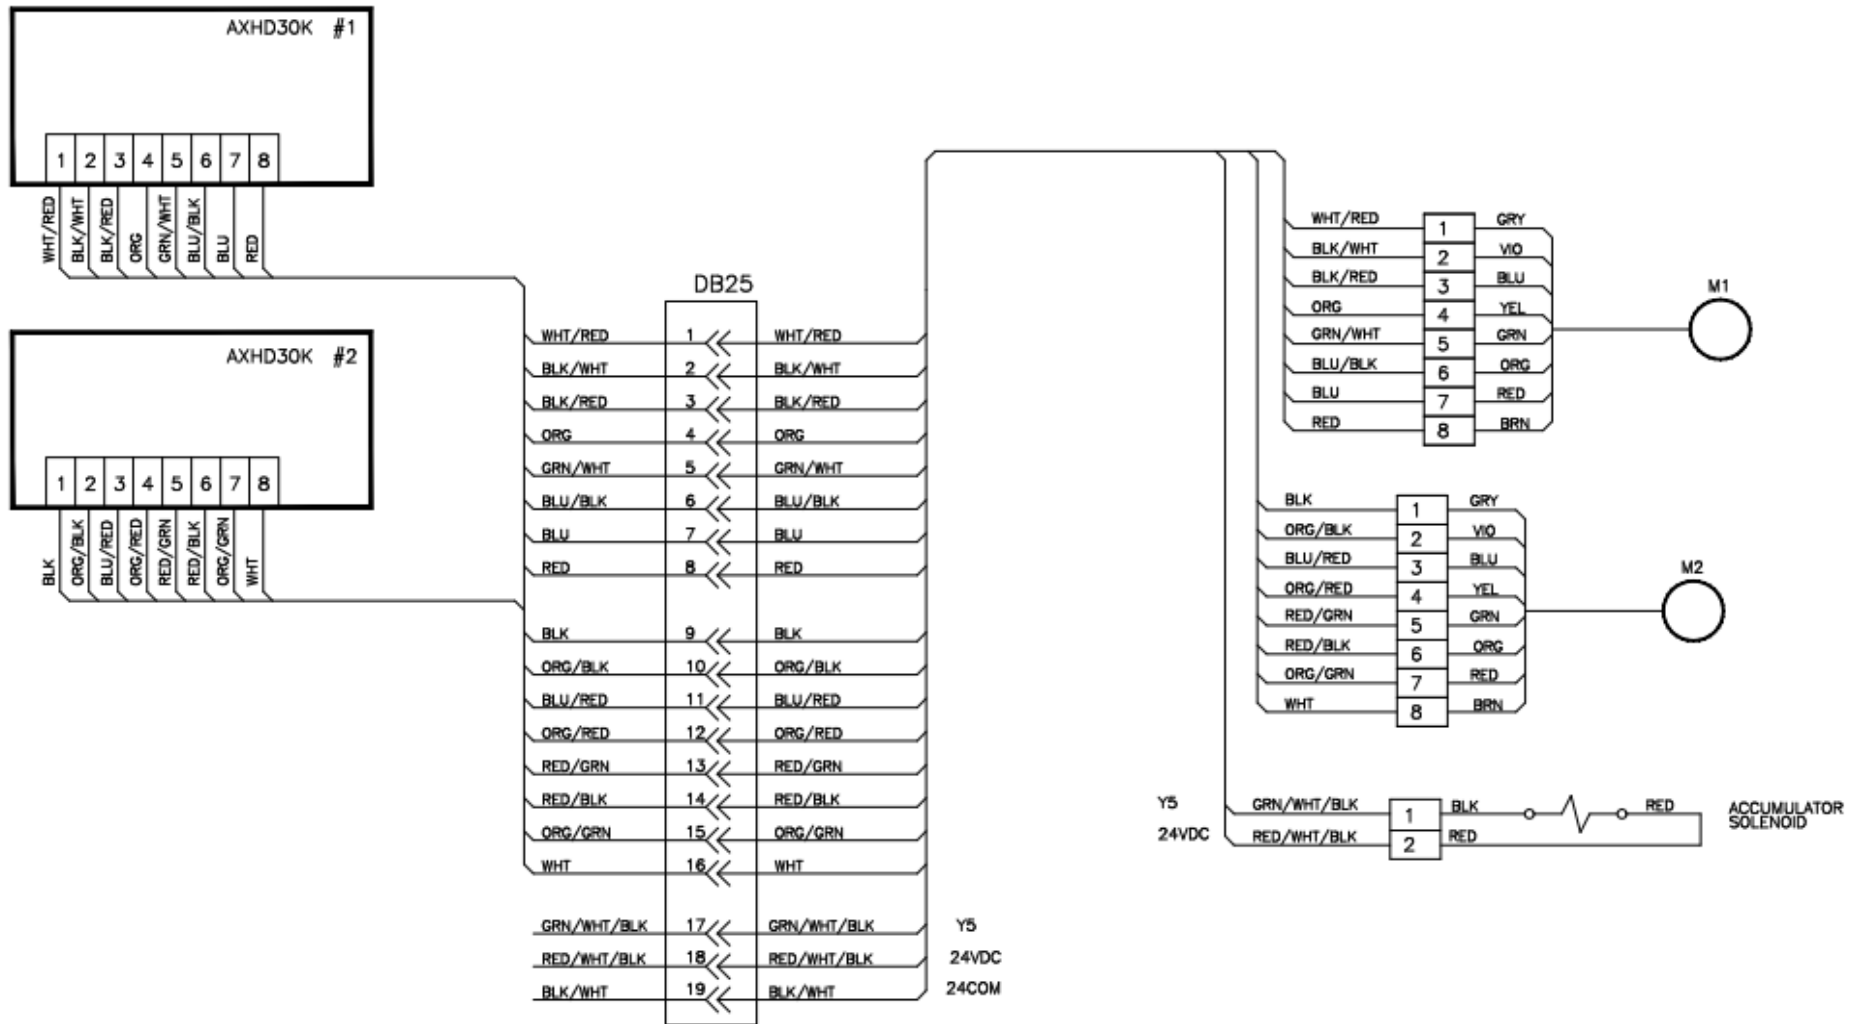

5.20 Aux Interface Electrical Drawing

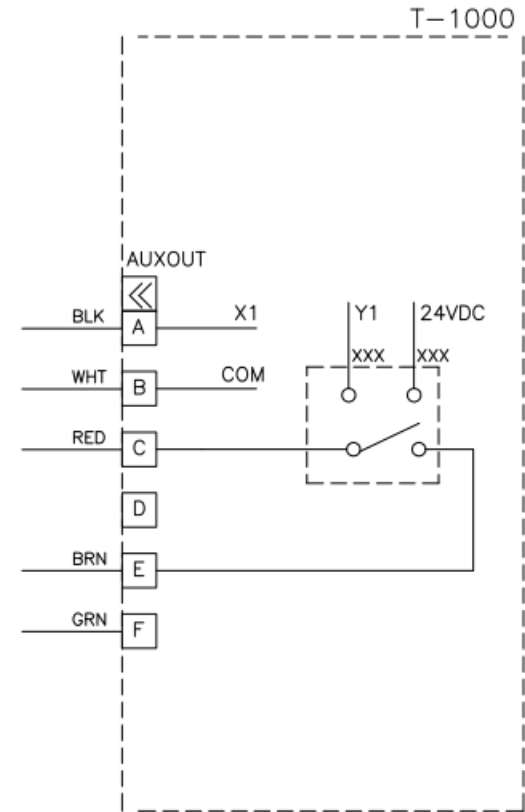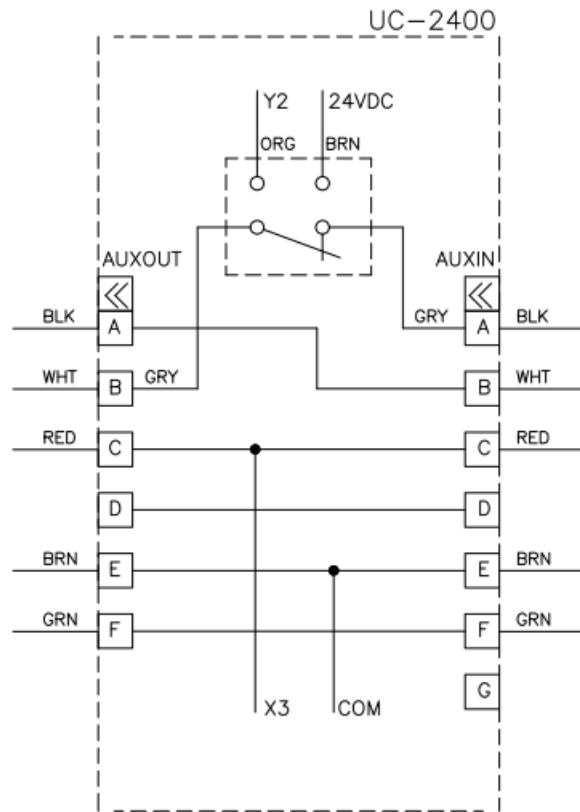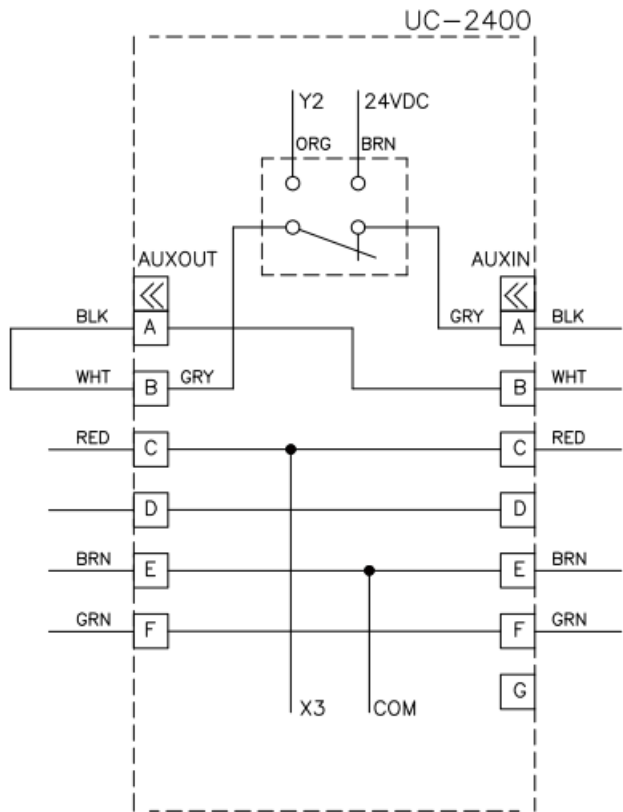

This page intentionally left blank.

Appendix

Detailed Setup Procedure

I. Counter Setup

II. Procedure

III. Troubleshooting Inaccurate Counts

IV. Setup Procedure Summary

A. UCS-2400 Detailed Setup Procedure

The following sections provide detailed, step-by-step instructions on how to set up the UCS-2400, perform parts tests, adjust eye settings, and troubleshoot inaccurate counts.

I. Counter Setup

The setup procedure for the UCS-2400 is a two-part process: 1) **Bowl Setup** and 2) **Eye Setup**.

Bowl Setup refers to mechanical and touch screen settings that cause parts in the bowl to flow properly. More specifically, these settings and adjustments cause the parts to feed so that one part passes through the eye at a time with a consistent separation of parts. Do not proceed to Eye Setup procedures if parts are jamming or multiple parts are passing through the eye with no or insufficient separation.

Eye Setup refers to touch screen and optical frame pot settings that affect the accuracy of counts. The Eye Test Screen allows for testing to ensure accurate counts. Pot settings on the eye will also affect the accuracy of counts.

Due to the highly technical nature of these procedures, more experienced setup personnel may be required. Bowl and Eye Setup processes require sufficient testing, over a period of time, to ensure that each process is accurate.

II. Procedure

Step 1: Ensure proper and consistent level of parts in the bowl.

The correct level of parts in the bowl is the level that allows most of the center cone (floor) to be free of parts. Because of the cone shape, parts will feed to walls of the bowl. The Hopper Settings screen provides for hopper timing and vibration levels. The position of the level sensor in the bowl can also be adjusted to cause the proper level of parts in the bowl.

Note: The level of parts must not be at a high level to prevent parts from falling off the slide drawers.

Step 2: Ensure proper parts separation in the bowl.

The proper parts flow is the flow that allows only one part to fall on the V-track belt at a time as the parts exit the bowl. Wipers are provided to brush off parts that stack and drawers are provided to reduce the width of the bowl track so that only one line of parts goes around the bowl.

Improperly set wipers can also cause parts to jam. This is a delicate setting that requires a lot of testing to prevent jamming and for proper wiping of parts. Additionally, vibration levels in the Settings screen can be adjusted (Fast/Slow bowl speed) to cause separation.

Note: You MUST have good parts flow from the bowl before attempting any setup of the counting eye. The parts must be dropping from the discharge of the bowl onto the V-track belt one at a time, every single time, with a minimum 4" gap on the V-track belt between each part. If this is not done correctly you may experience inaccurate counts. If the parts are overlapping or stacked on top of each other you also may experience inaccurate counts.

Step 3: Ensure the eye is clean.

Use a cotton cloth and a mild glass cleaning agent. Spray the cleaning agent on the cotton cloth, not directly on the eye.

Step 4: Perform single part testing.

Single part testing is used to ensure that for every single part that passes through the eye, a count of one is achieved. The single part test is also performed to assist with determining the Min and Max settings, which are set on the Eye Settings Screen.

Most parts will run fine with a Belt Speed of 99. Any changes to the Belt Speed will change the readings from the eye and will make it necessary to restart the testing procedure. Adjust the belt speed to 99 on the Settings screen to perform this test. Speeds lower than 99 may be required if parts continue to move after the belt stops. APPI recommends as high a belt speed as possible to increase the gap between parts. The eye must be set to the most sensitive pot setting, but output must NOT stay on continually.

From the Main Menu, press the **Settings** menu button, then the **Eye Setting** menu button, then the **Eye Test** menu button. Press the **Start** toggle button to start the belt. At this point, the belt will run, but the bowl will not. When all parts are off the belt, press the **Reset** button. Then drop one part onto the V-track belt while looking at the Eye Test screen. One part must be detected as one part before dropping any further parts. The Eye Test screen will show the test results from the last nine parts dropped. Every time a part is placed on the conveyor, one part must be detected.

Drop one part at a time, but drop them in every possible orientation so the eye has a chance to see them from every angle. Observe the Min and Max readings at the bottom center of the screen. Continue to drop parts (one at a time) onto the V-track belt until you no longer see any change in the Min or Max readings. If the Min or Max values change, continue to drop one part at a time, again, until these two values do not change.

Note: While the Eye Test screen shows you the last nine part readings, there is no limit to the number of parts that can be used while performing the Eye Test.

Note: The purpose of dropping parts by hand ensures that there is no scrap in the parts dropped onto the belt. Additionally, dropping one part at a time ensures that there is proper separation and no overlapping occurs. Overlapping could produce improper Min / Max results.

If no part is detected, or one part is detected as two inputs, then eye pot settings must be adjusted. Normally the pot settings do not need to be changed from MOST SENSITIVE and LEAST DURATION.

Pot Setting – Sensitivity: Sometimes one part is counted as two because the eye is too sensitive. By turning DOWN the sensitivity, any leading or trailing smaller parts may be ignored by the eye. The goal is to have the part detected as one part. You can test for sensitivity of the eye by using an Allen key. Starting with 1/8", with the key on the centerline of the field, perpendicular to the detection field, pass the key the entire length of the eye. At the most sensitive setting, the output should remain ON the entire time the key is in the detection field.

Pot Setting – Duration: Sometimes a small part sends a very short output to the counter PLC which may not be detected by the PLC. The duration pot can increase the length of the output so that the PLC detects in the eye output every time. However, if the output is too long, a second part may not be detected causing an over count.

Step 5: Perform single part testing after eye pot settings adjustments.

After pot settings are adjusted, perform the single part test as described in Step 4. Continue to perform the Single Part Test until you are sure that one part dropped onto the belt is always counted as one part. You will notice that the part length Min / Max values will increase as the duration setting is increased.

Step 6: Perform part gap testing (two parts): A gap test can be performed to ensure that duration pot setting is optimal (not too long a period of time) and to determine how close parts can be on the belt to ensure proper accuracy of counts.

While still on the Eye Test screen, stop the V-track belt, press the **Reset** button and place two parts on the stopped belt with a 1/4" gap between the parts. Start the belt, and then check to make sure the counter saw exactly two parts. If the counter saw the two parts as one part, stop the belt and place the parts further apart. Continue to test, increasing the gap, until the count results are two. Adjust the Duration Pot to increase or reduce the gap, as required.

If the duration output is too high, the output will still be ON when the second part starts to pass through the eye. This will cause over counts since the first pulse being sent from the eye to the PLC overlaps the second pulse, causing it to look like one larger part instead of two smaller parts.

Turn the duration potentiometer down so that a minimal gap between parts is achieved and both parts are counted.

Note: If Eye Pot settings (Sensitivity or Duration) are changed, Step 4 must be repeated.

Step 7: Perform gap testing (five parts).

Perform the same gap test as described in Step 6, but this time with five parts. Carefully place them at the minimum distance determined to ensure the duration setting does not cause parts to be ignored by having too long an output. Then, start the belt and ensure that five parts are detected.

Note: As stated in Step 6, the gap test will determine the minimum gap required between parts to ensure that two parts passing through the eye at the minimum gap will always be counted as two. APPI recommends that the duration pot setting be the minimum required, but sufficient so that the PLC can detect even the shorted inputs from the eye.

Step 8: Adjust Min / Max settings.

Min / Max settings are provided to 1) filter parts and 2) deal with overlapping parts. Access the Eye Settings screen and adjust the Min / Max settings as required.

The Min setting can be used to filter parts such as scrap. However, if the good parts are less than 0.5", then you should not attempt to filter scrap as the part itself may be seen as scrap and thus not counted, causing an over count. If your parts are clean and free from scrap, then the Min value should be set to zero (0). This will allow all parts to be counted; no filtering.

The Max setting can be used to count overlapping parts as two instead of one. However, if your parts are less than 1", then you should not attempt to count parts as two as this will cause undercounts. If your parts flow well and do not overlap, then set the Max setting to the highest value of 9.99 (no adding of counts).

If you wish to add a count whenever the maximum size is exceeded, toggle the **ON / OFF** button on the Eye Settings screen to ON. However, when turned on, the Double Count function may cause an undercount condition if the maximum setting is too low and one part is counted as two parts. To disable the Double Count function, toggle the **ON / OFF** button to OFF. This will set the Double Count setting to zero. However, if the Double Count function is turned off, an over count condition may occur if parts are not properly separating when coming off the belt.

Min/ Max Setting of Zero for SMALL parts: By setting the Min and Max setting both to zero, the PLC will be set to the most sensitive and highest speed possible (Small Parts Function) which will provide the

best programming to accurately count small parts. If your parts are less than 0.5", set the Min and Max settings to zero.

Step 9: Accept the Min / Max Settings on the Eye Test Screen.

As described in Step 3, the Eye Test Screen will also assist in setting the Min / Max settings on the Eye Settings screen. By pressing **Accept** on the Eye Test screen, the Min / Max “suggested” settings are accepted and transferred to the Eye Settings screen. However, the setting may need to be changed based on actual count accuracy testing.

The Min / Max settings as described in Step 8 are override settings that will prevent under/over counts for those instances described in Step 8.

Note: Accepting Min / Max settings may not always cause the system to accurately count your parts. You must test the Min / Max settings to ensure that they provide the level of accuracy you require. The Eye Test screen is available for testing of your parts to assist with the setup of the system, but the Min/Max settings must be thoroughly tested.

Step 10: Perform overlap testing (adds one to the count).

The counter could count overlapping parts as two parts. Disregard this test if your Max Setting is set to zero, or the highest value (9.99).

Note: Due to the margin of error of the PLC Eye Test Function (0.004), if the Max setting is too close to the actual part setting, one part may be counted as two, causing an undercount. Example: If during Single Part Testing the parts typically measure 0.008, but the Max is 0.012, the difference of 0.004 is within the margin of error. This would mean that one part may measure 0.012, but with one part automatically added to the count, an undercount would occur. Therefore, the Max setting must be set at least 0.005 higher than the highest tested part length. Otherwise, an undercount could occur.

On the Eye Settings screen, test for correct counting of overlapping parts by stopping the V-track belt and placing two parts on the belt with them overlapping each other. Start the V-track belt and check the screen to see if the counter saw two parts or one. For the counter to see it as two parts the measurement by the eye must be greater than the Max setting.

Anything measured less than the Max setting will be counted as one part. Anything measured more than the Max setting will be counted as two parts.

Step 11: Perform scrap testing.

The counter can filter parts that are below the Min setting (scrap). Disregard this test if your Min setting is set to zero.

Note: If the Min setting is too close to the actual part setting, one good part may be considered scrap and not counted due to the margin of error on the counter. Example: If during the Single Part Testing the parts typically measure 0.002, but the scrap setting (Min setting) is 0.004, then the difference is within the margin of error causing good parts to be counted as scrap. Therefore, the Min setting must be at least 0.005 less than the minimum tested part length.

Set the Min setting to zero if the minimum tested value is less than 0.006 or your part length is less than 0.5".

Step 12: Perform quality control testing.

After each mechanical, touch screen or eye setting is performed, counts must be tested to ensure that the counts are within your accepted level of accuracy. APPI suggests that every batch count be checked for quality for at least one hour after production starts. APPI recommends a check weigh scale for all automatic counting operations. However, manual scales (small platform scales) can be used to quickly count parts based on weight.

III. Troubleshooting Inaccurate Counts

Note: You MUST have good parts flow from the bowl before performing ANY troubleshooting. The parts must be dropping from the discharge of the bowl onto the V-track belt one at a time, every single time, with a suggested 4" gap on the V-track belt between each part. If this is not done correctly or if parts are overlapping or stacked on top of each other you may experience inaccurate counts.

Problem 1: Count is set to 25 but the bag contains 24 or less parts.

Possible Causes:

- A single part being measured by the eye is greater than the Max setting, meaning one part may have been counted as two.
 - *Solution: Increase the Max setting or disable the Max setting by changing the Max setting to 9.99.*
 - *Solution: Run eye test again to confirm the Max setting.*
 - *Solution: Set the Max setting to zero to disable the plus one function.*
- Scrap being measured by the eye is greater than the Min setting.
 - *Solution: Reduce the Min setting or change to zero.*

Problem 2: Count is set to 25 but the bag contains 26 or more parts.

Possible Causes:

- A single part being measured by the eye is less than the Min setting, meaning one part may not have been counted.
 - *Solution: Reduce the Min setting or change to zero.*
- Parts are too close together or overlapping on the belt.
 - *Solution: Reduce bowl speeds or increase belt speed.*
- Overlapping parts do not count as two parts.
 - *Solution: Decrease Max setting.*
- Two overlapping parts being measured as one part.
 - *Solution: Adjust settings to prevent overlapping parts.*
- Bowl speeds are too high.
 - *Solution: Reduce bowl speeds.*
- Slow count setting is too close to the fast count setting
 - *Solution: Reduce the slow count setting.*
- Parts are too small to be detected 100% of the time by the PLC
 - *Solution: Change to Small Parts Function by changing the Min setting to 0 and the Max setting to zero.*

IV. Setup Procedure Summary

Proper parts flow is absolutely required prior to performing eye tests, touch screen settings and eye pot adjustments. Hopper level components and programming adjustments are provided to maintain a consistent low level of parts in the bowl. Special tooling (slide drawers and wipers) are provided to

achieve good parts separation. By adjusting the bowl, good parts flow can be achieved for a wide variety of parts.

The Counter Eye Test screen, filter programming and overlap programming and eye pot settings are provided to achieve accurate parts counts. However, counts must be checked for accuracy, and adjustment must be made to improve the counts. The Small Parts Function is provided by setting the Min / Max settings both to zero. This allows the PLC to detect small inputs from the eye faster and more reliably.

Each setting on the touch screen must be completely understood before attempting to perform adjustments. Adjusting one setting to correct over counts may then cause undercounts. A thorough understanding of each adjustment is necessary. Become familiar with the Operation Guide and use these procedures to further assist your understanding of the system. Contact APPI Customer Support with any questions regarding this information.