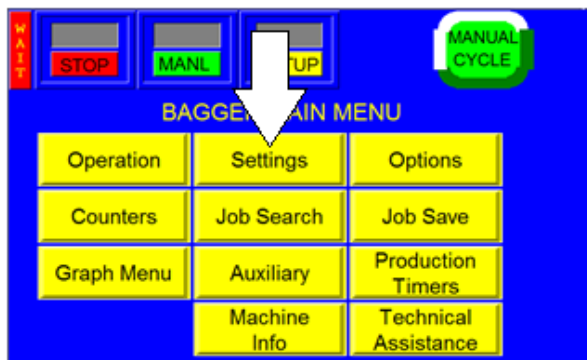**Document: #HT000083**

Document Title: Adjust Seal Time
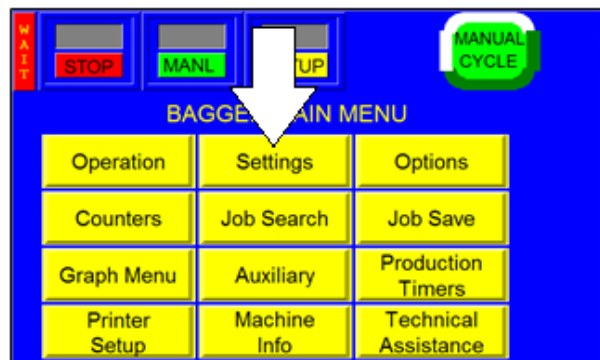
Product(s): T-300/375

Procedure:

From the **"Main Menu",** which will be different for the T-300 and T-375, select **"Settings"**.

Note: If the Pass Code function is enabled, access to the Main Menu will require the input of the Pass Code.

T-300 Main Menu   T-375 Main Menu

On the Bagger Settings screen, select **"Seal Time"**.

Enter the desired value on the numeric keypad, and then press **ENT**.