

How To


Service Documents from APPI

Document: #HT000211

Document Title: How to Install New Motor Driver Board


Product(s): Ti-1000z Xi4 and Xi3 In-Line Zebra Printer

Procedure:

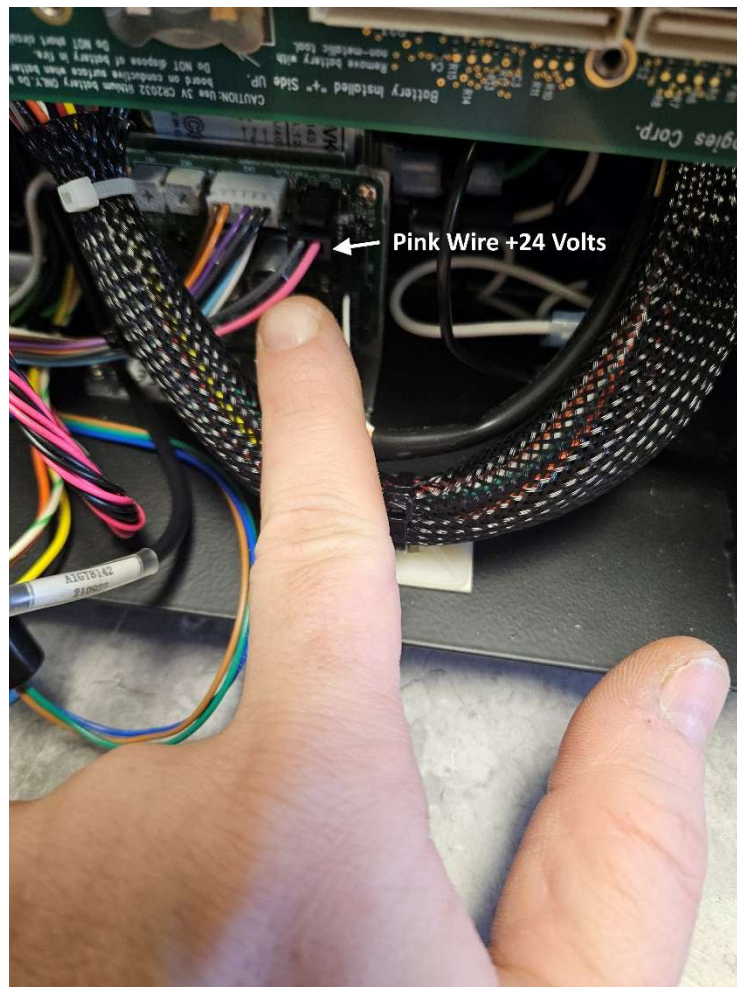

On the Connector Labeled Y8-F


Remove Existing Pink Wire from the Y8-F Connector and Install New Pink Wire from the New Motor Driver Board

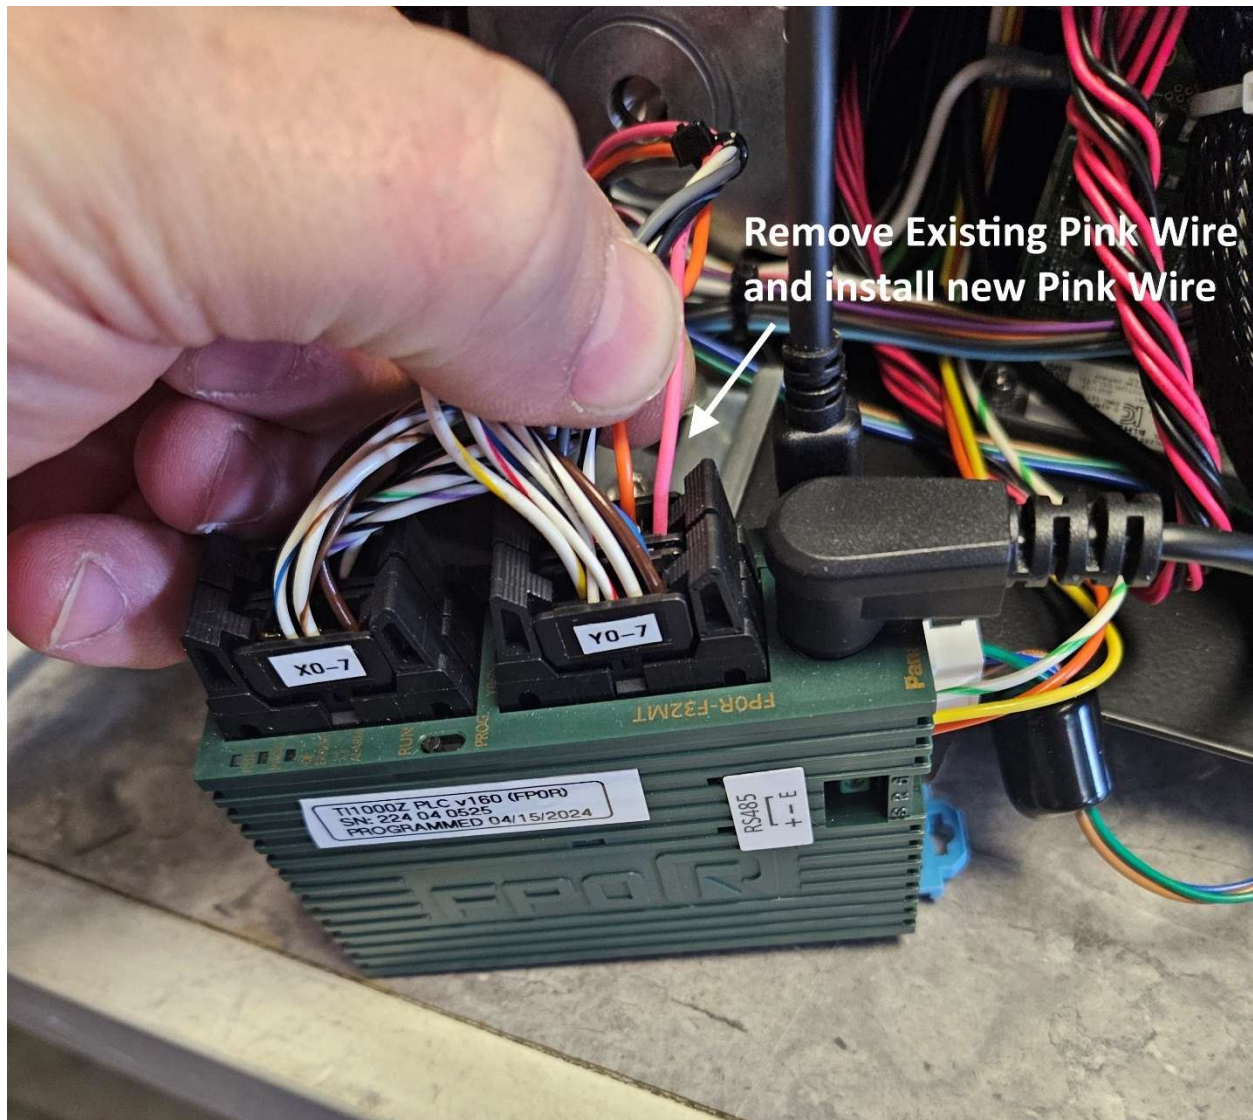

Ribbon Drive Alarm

On the Connector Labeled X0-7

Remove the Existing Brown Wire from X5 and install new Brown Wire into X5 from the New Motor Driver Board

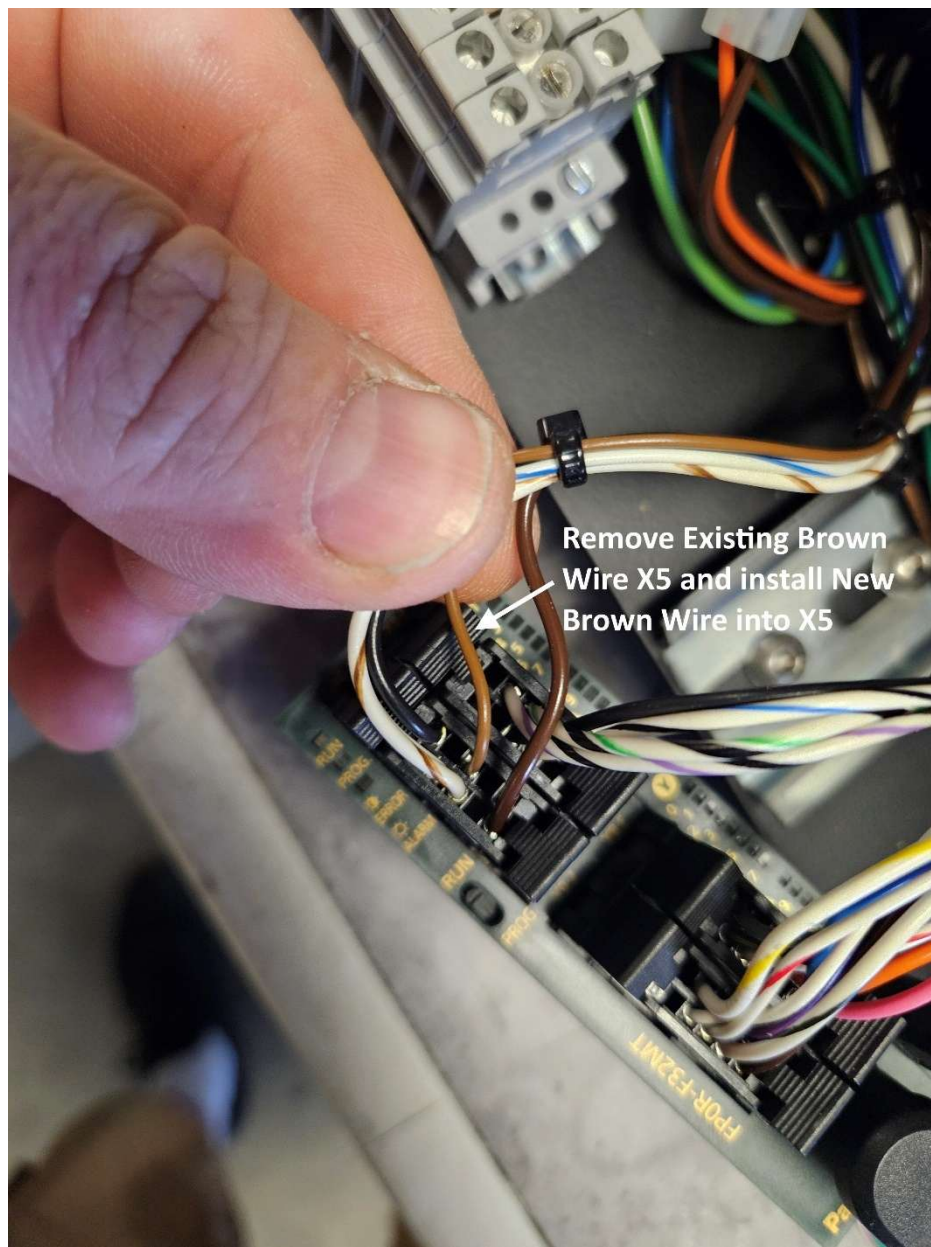


Ribbon Drive

On the Connector Labeled Y0-7

Remove the Existing White Wire from Y2 and install new White Wire into Y2 from the New Motor Driver Board



Another View

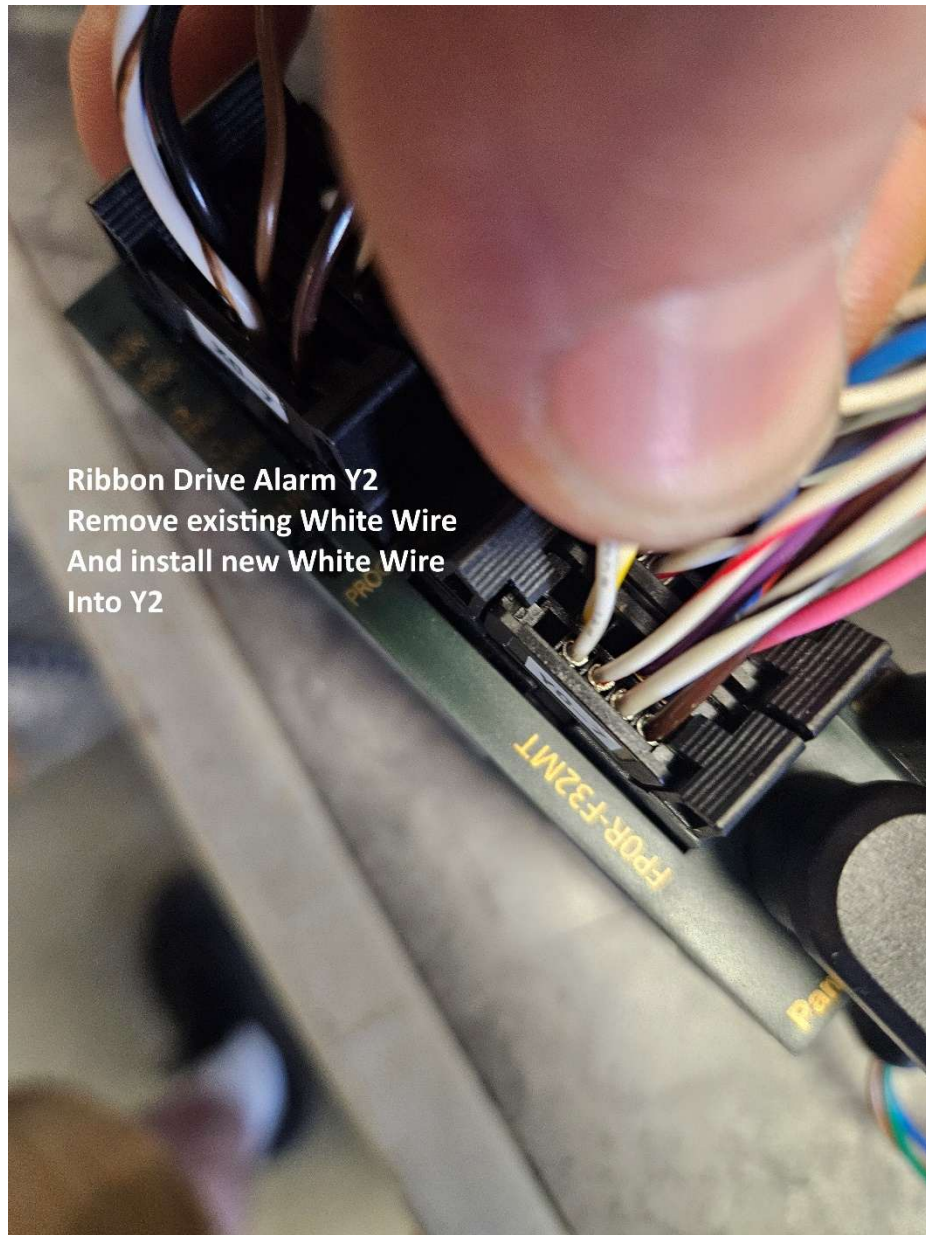


Ribbon Drive Alarm Y2
Remove existing White Wire
And install new White Wire
Into Y2


On the Connector Labeled Y0-7

Ribbon Drive Alarm Reset Y7

**Remove existing Purple Wire from Y7 and install new Purple Wire into Y7 from
the New Motor Driver Board**

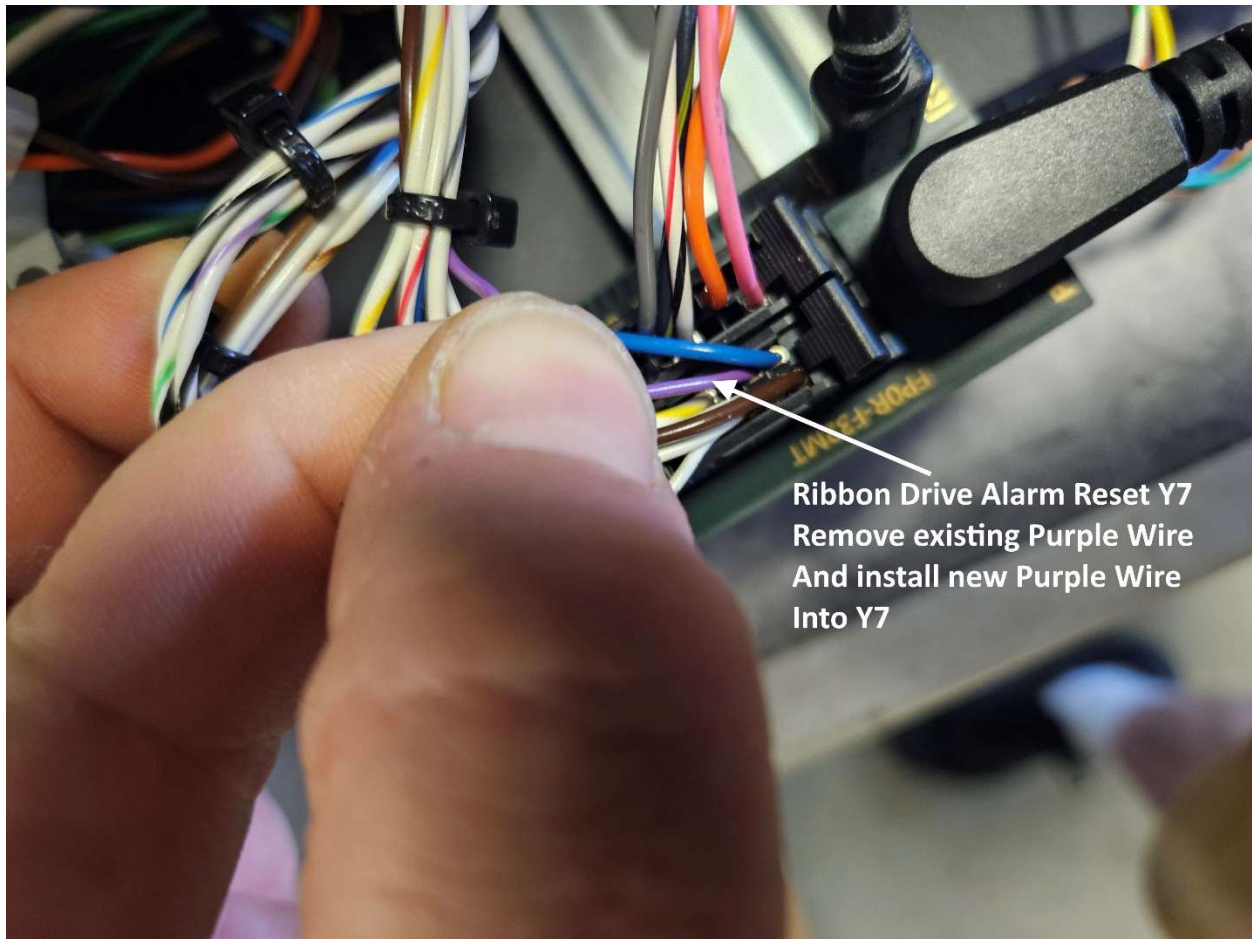

Remove all wires connected to the Power Bar from the old Motor Driver and connect the Green Wire to the Blue or Green Wires on the Power Bar from the new Motor Driver Board

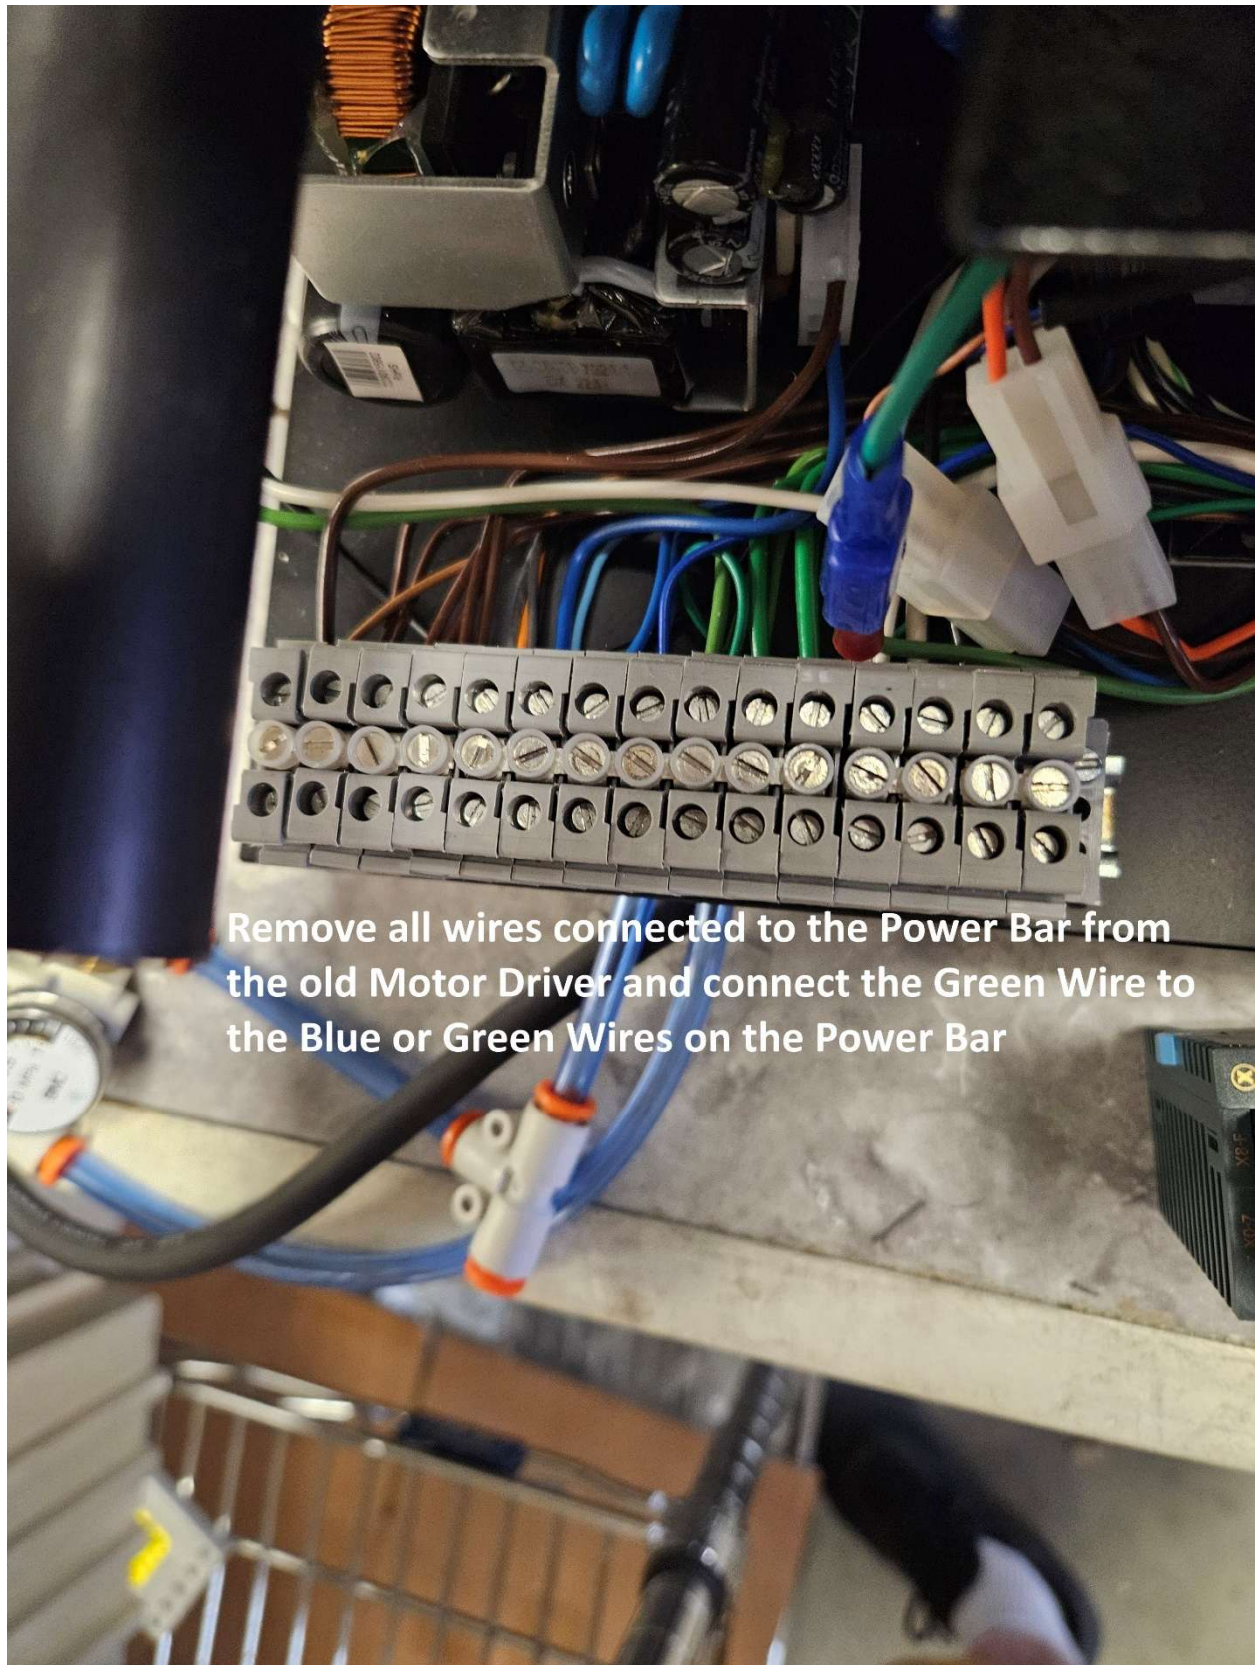

Remove all wires connected to the Power Bar from the old Motor Driver and connect the Green Wire to the Blue or Green Wires on the Power Bar

B. TIZ-E2_FPG-IO_Rev 8

Electrical Drawing

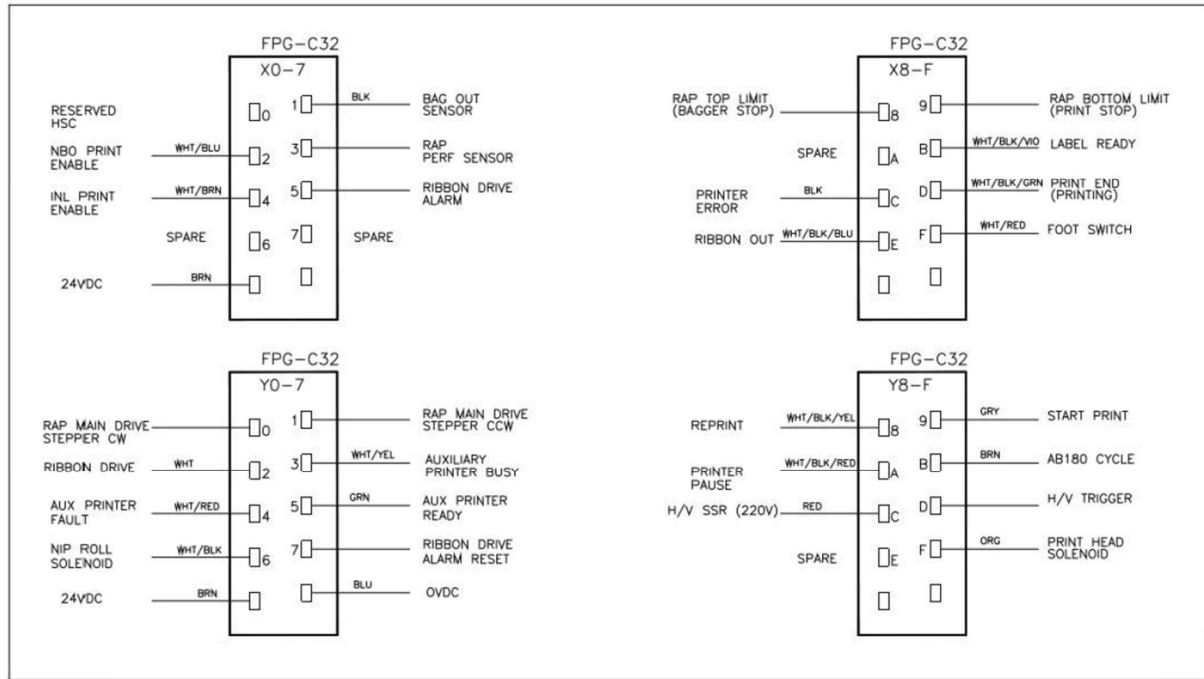


Figure 4-2