

How To

Service Documents from APPI


Document: #HT000203

Document Title: How To Install New High Voltage Board

Product(s): All Baggers

Procedure:

Dip Switch identifies New Style High Voltage Board.

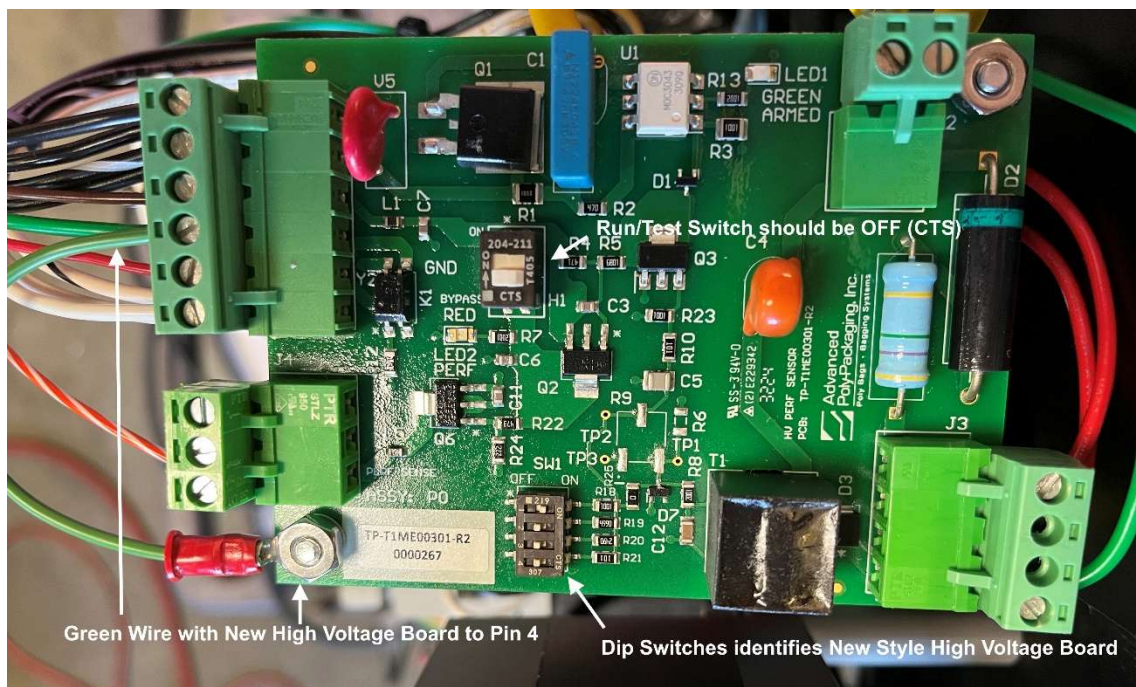

Green Wire needs to be installed with New High Voltage Board to Pin #4.

