

Document: #HT000027

**Document Title: Replace Print Head** 

Product(s): T-375

**Procedure:** 


Turn Power **OFF**.





Un-latch the Print Head.



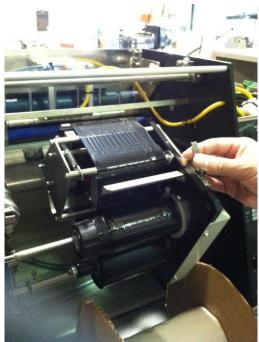


Tilt the Print Head back






Slide the Ribbon off the Print Head.



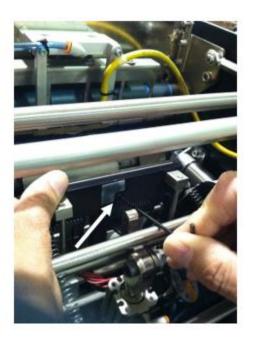


Gently push the Print Head Mount forward, and un-screw the small Socket Head Bolt.



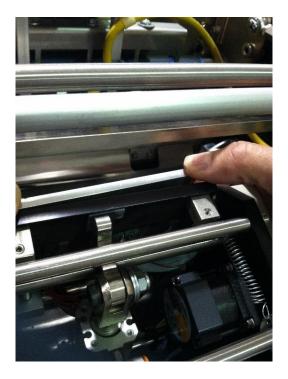

Separate the Print Head from the Print Head Mount.

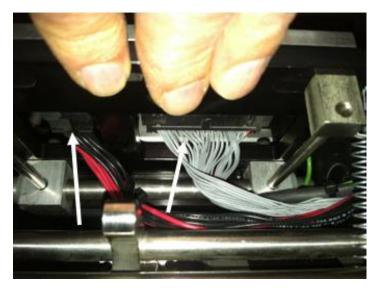


Unplug the two Cables on the Print Head.






Print Head Alignment Holes.

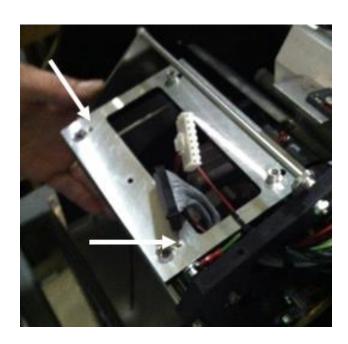


Print Head Alignment Pins.



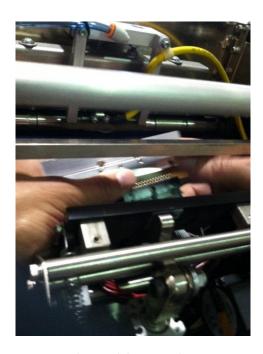

Re-connect the cables to the Print Head.

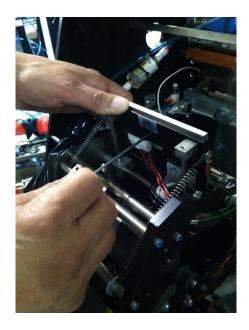

Attach Print Head to Print Head Mount being sure the Alignment Pins are lined up with the Alignment Holes. Then gently tighten bolt.



The new Print Head is now installed. It is recommended that you should test print a label.

If you need further help contact Advanced Poly at (800) 785-4403 and ask for the Service Dept.

For the best print quality, Advanced Poly recommends using Ribbon Part Number TH-ZEB-B-409.