

How To

Service Documents from APPI


Document: #HT000230

Document Title: How to Replace Print Head Mounting Assembly


Product(s): T-1000

Procedure:


Remove Ribbon From the Take Up and Supply Spindles

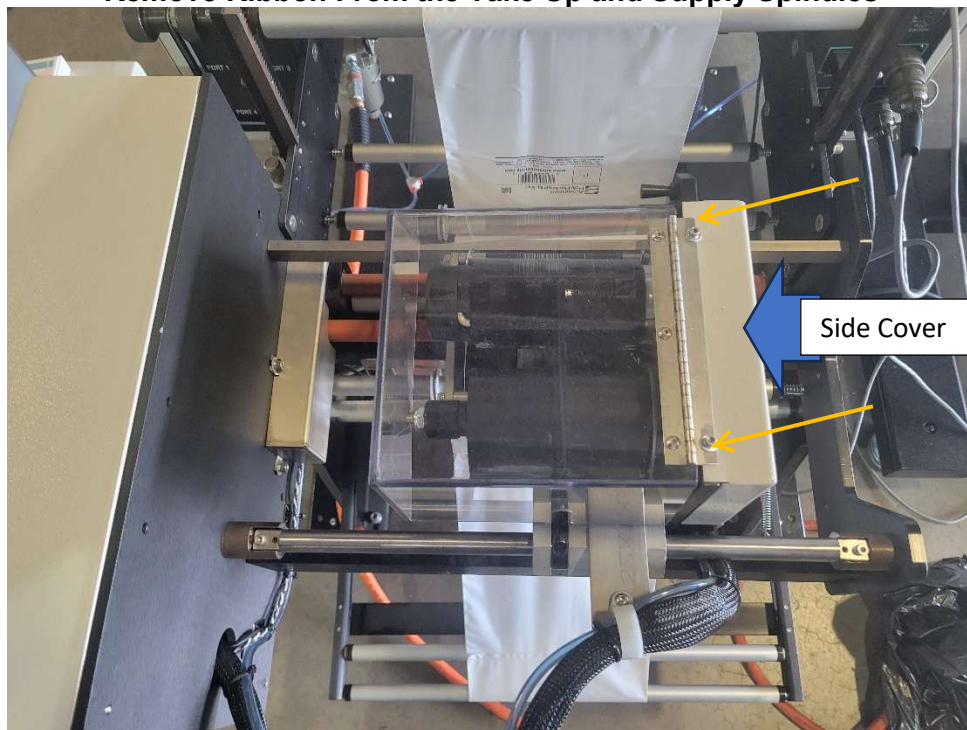


Remove Side Cover and Lexan Cover (4 Screws, 2 Top, 2 Bottom)

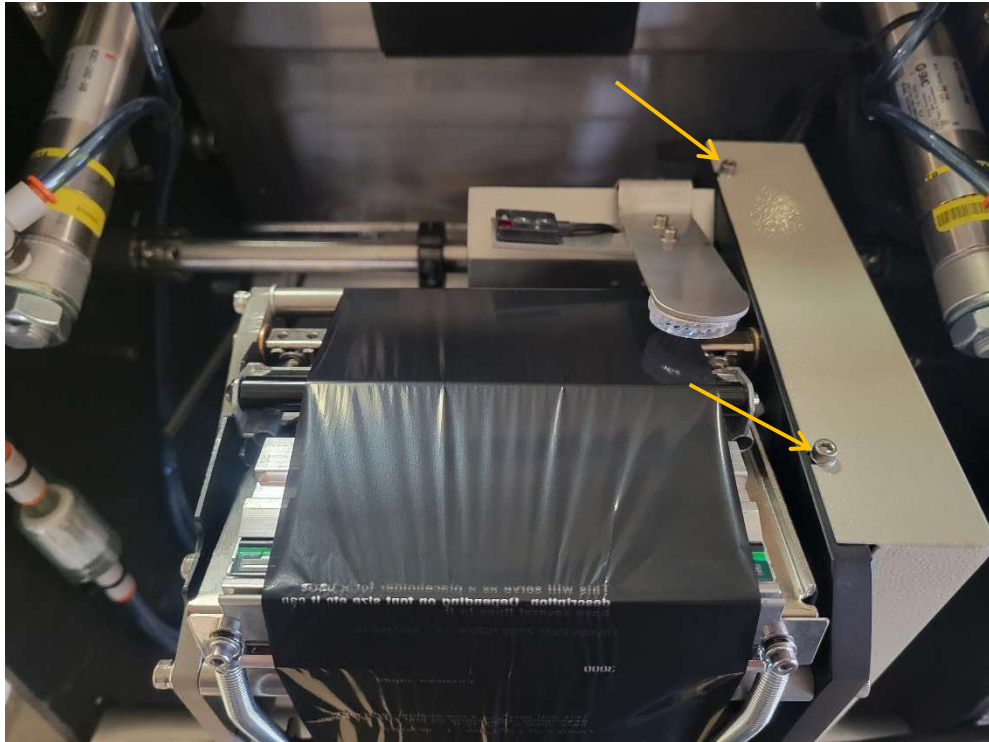


Remove the 2 Screws holding the springs in place

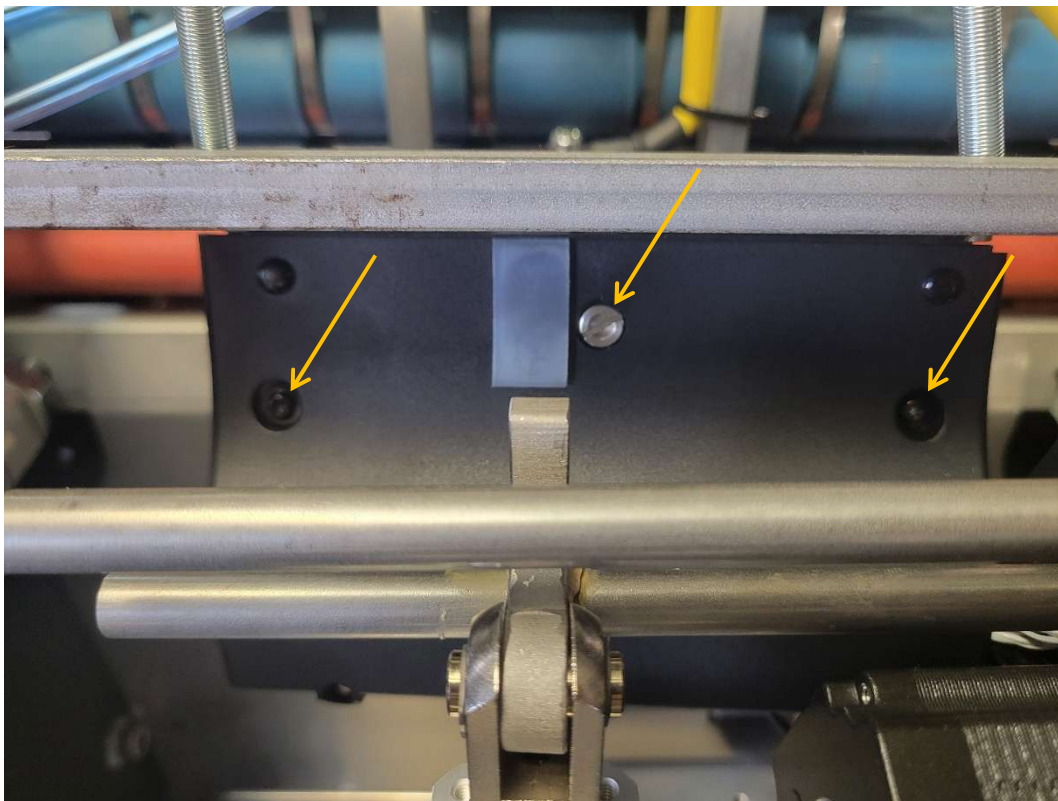


**Using a flat head, loosen silver printhead screw
Using a T10 Star Head remove 2 side printer plate screws and
Remove the Black Back Plate.**

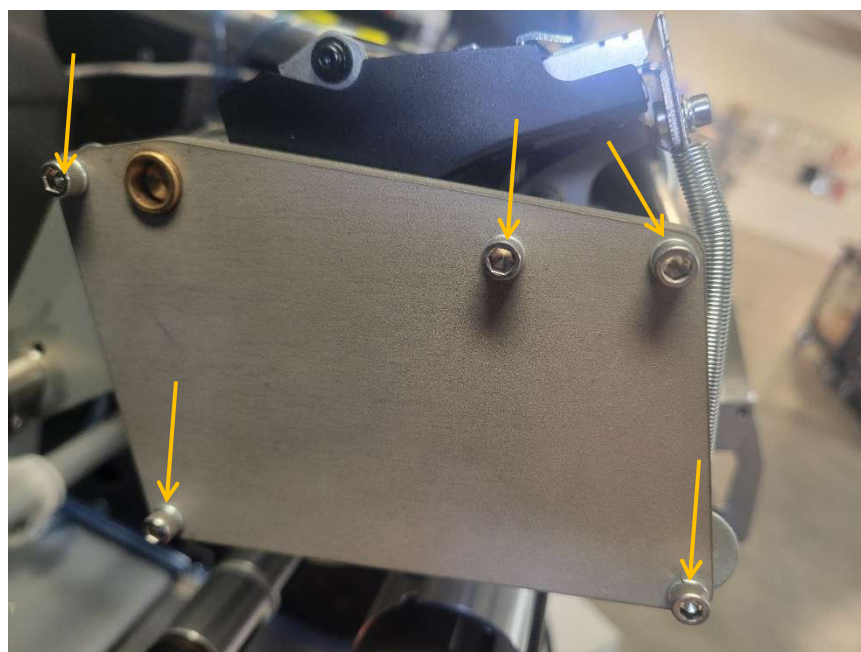


Remove 5 Screws and side plate

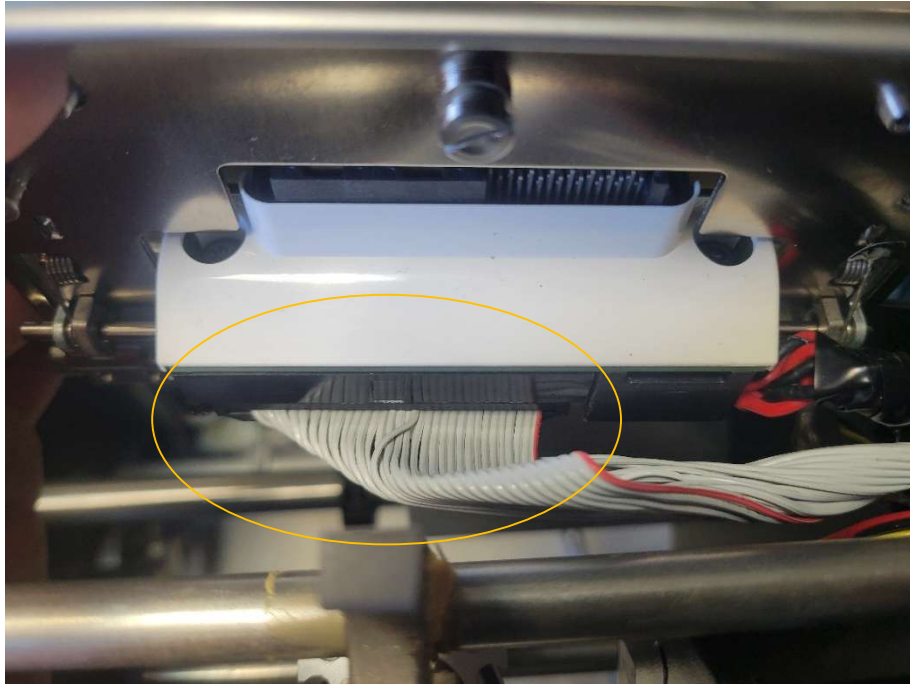


Unplug the Grey cable from the printhead. Follow the Red cable and disconnect on the side.

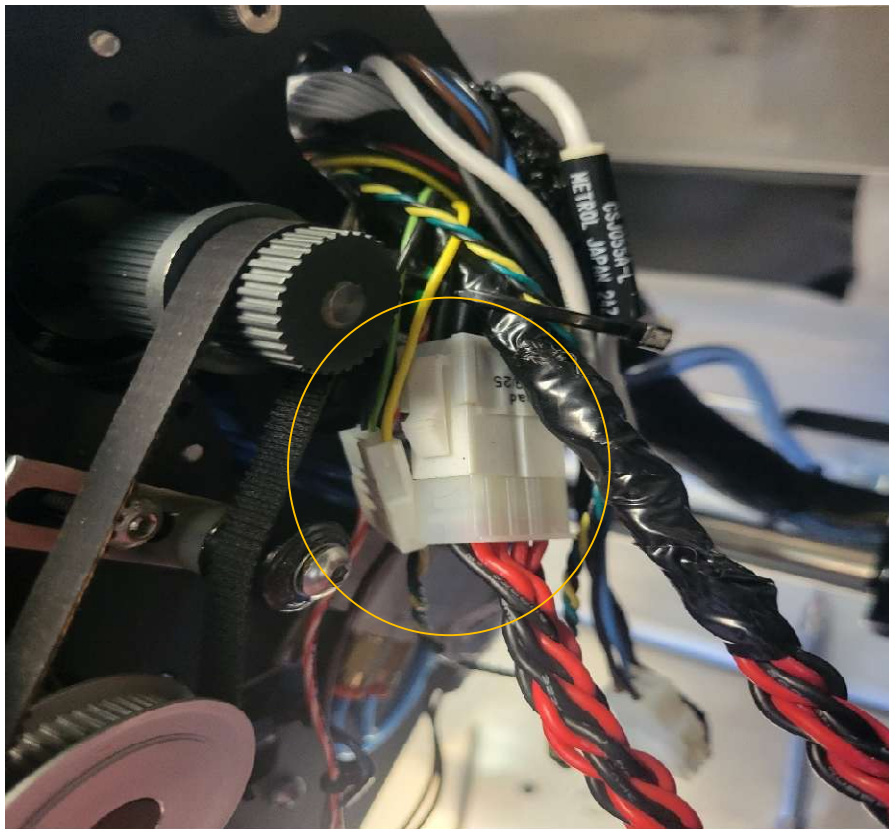

**Remove the Printhead Mounting assembly and swap with new one. Attach Printhead to new Mounting assembly and secure with silver screw on the back.
Connect the red cable, and plug in the Grey cable, reattach the black back plate.**

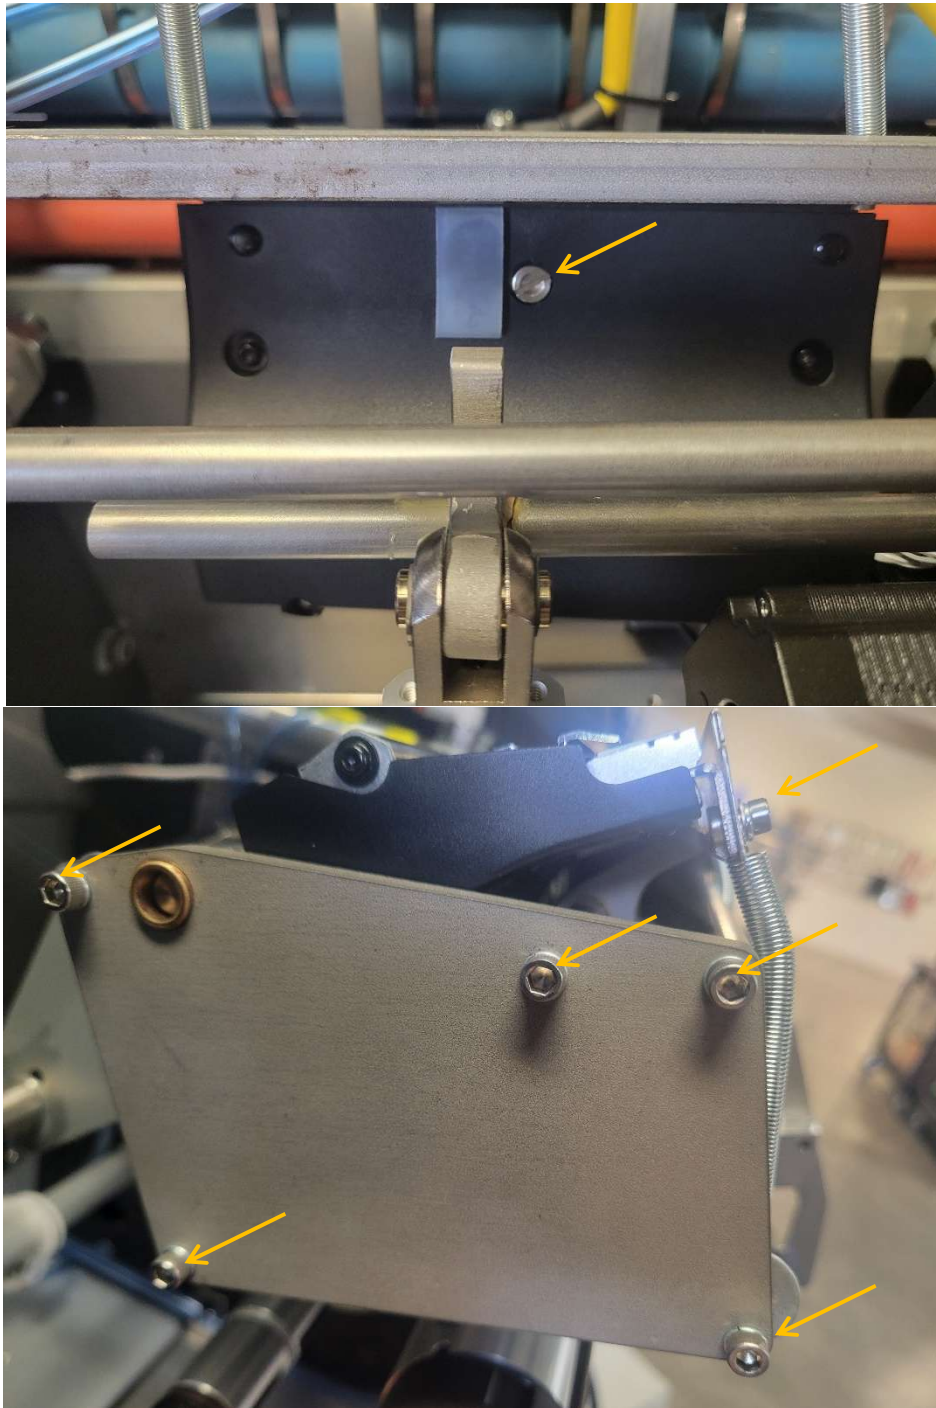

Reattach the side plate and connect Springs,

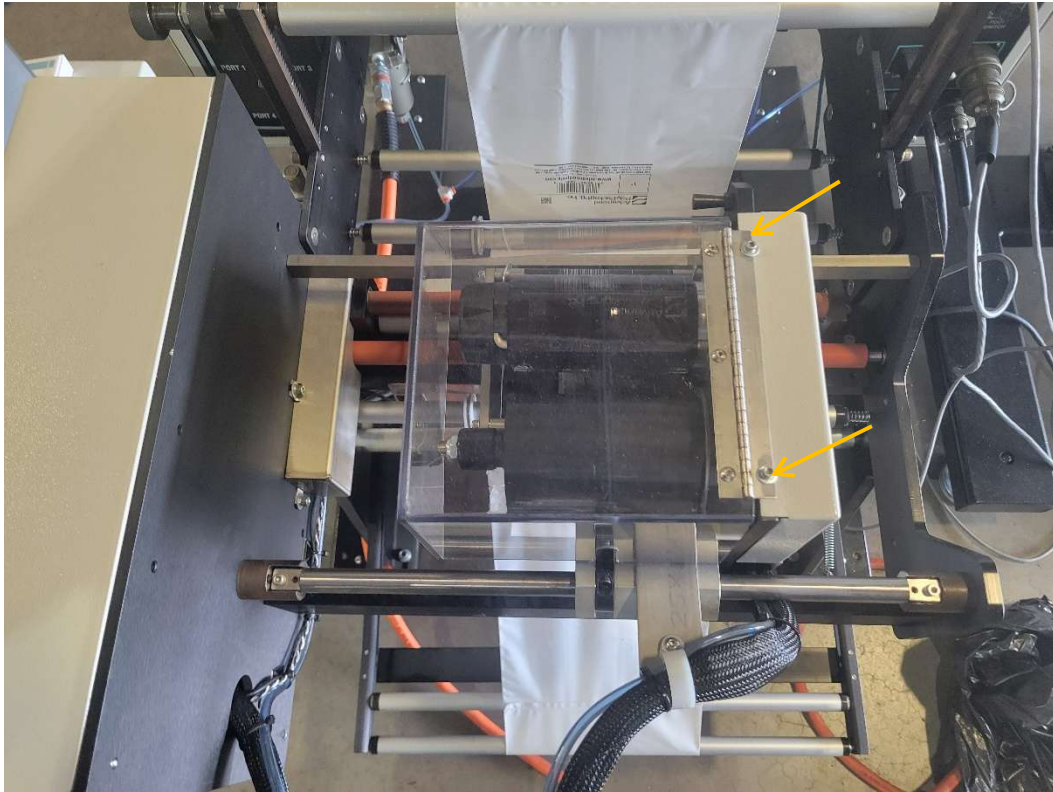

Reattach Side Cover, Lexan Cover and 4 Screws (2 Top, 2 Bottom)