

Document: #HT000002

Document Title: How to Activate/De-Activate Light Curtain

Product(s): T-375

Procedure:

To Activate:



Press Main Menu



Press 1001 then ENT



Press Tech Assist



Press Option PassW







Press Light Curtain



Press Activate Option

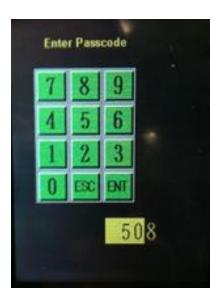


Press 0508, then ENT

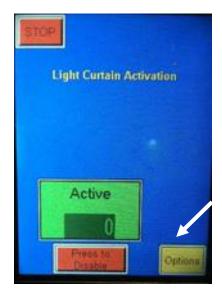


Press Options



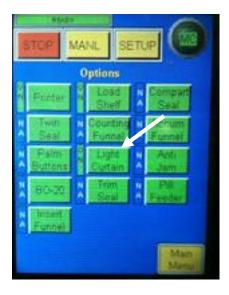

Press Light Curtain

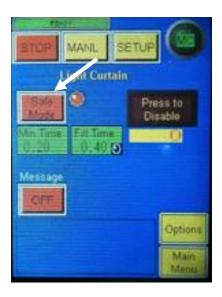

Press Safe Mode



The Light Curtain is now Activated and in Auto Mode



To De-Activate:



Press Tech Assist



Press 1001, then ENT



Press Option PassW



Press Light Curtain






Press to Disable



Press 0508, then ENT

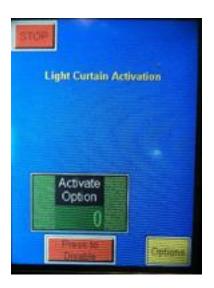



The Light Curtain is now De-activated or NA on the Options screen.