



How To

Service Documents from APPI


Document: #HT000035

Document Title: Adjust Lexan Cover Switch

Product(s): T-375

Procedure:


The Lexan Cover Switch is on located on the right side of the Bagger. When pushing the Lexan Cover down, the Lexan Cover Bracket goes up on this side, thus making the Switch.

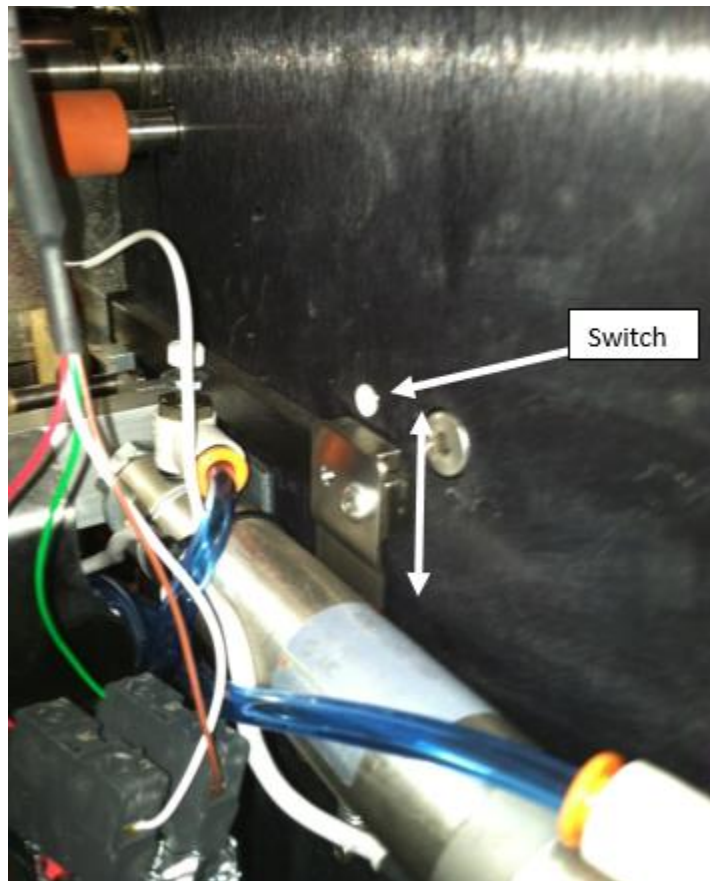



How To

Service Documents from APPI

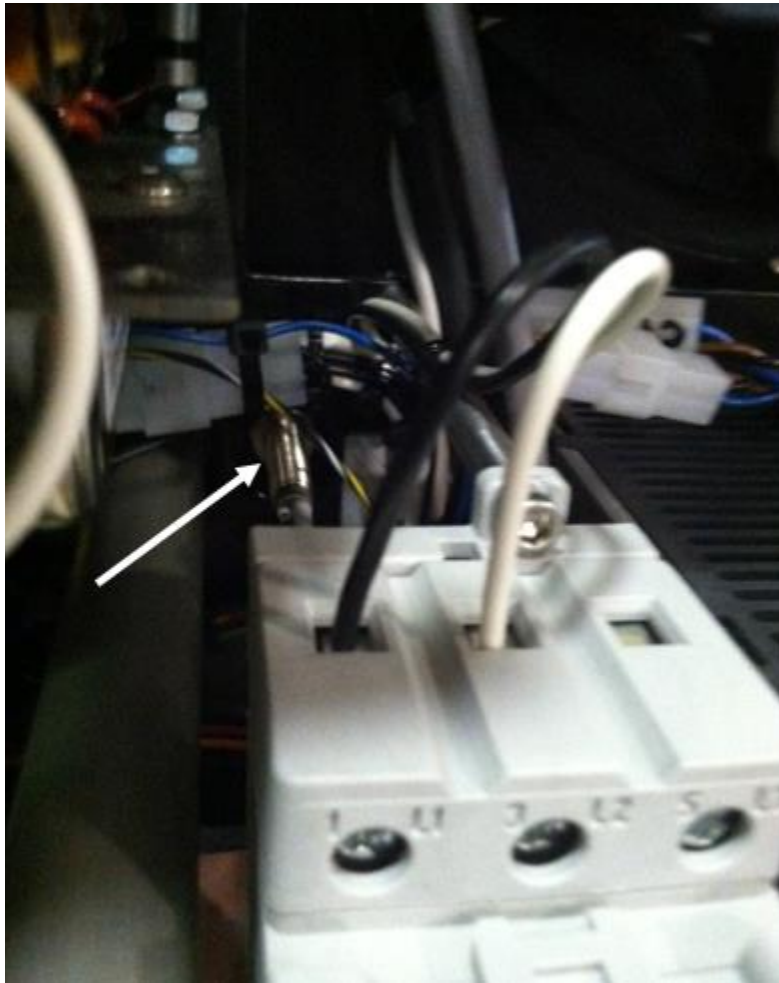

Loosen the Lock Nut then press down on the Lexan Cover; the Switch should light up when pushing down. If not, turn the Bolt/Switch in until it lights up when pushing Lexan down.

Note: On older T-375s there is no light. Adjust the same as above until bagger cycles when pushing down on Lexan Cover.



How To

Service Documents from APPI