



How To

Service Documents from APPI


Document: #HT000025

Document Title: Reset Ribbon Take-Up

Product(s): Ti-1000 TEC Printer

Procedure:

With power "OFF", hold down "FEED" and "PAUSE" buttons on the control panel.

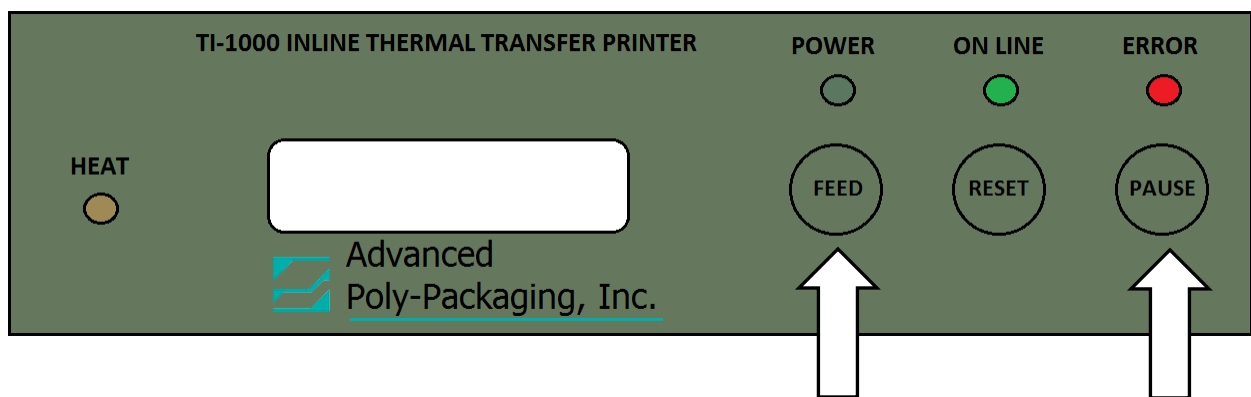

Turn power "ON" while holding the buttons. "DIAG V ____" will be displayed on panel.

Press the "FEED" button 1 time, and display will read "(2)"

PARAMETER SET

Press "PAUSE" button repeatedly until "RIBN ADJ (FW) +0" shows.

Press "RESET" button to "-3" is displayed.

Press "PAUSE" button until "(2) PARAMETER SET" is displayed.

Turn power "OFF" and wait till all lights on display panel go out.

Power now can be turned "ON" with new ribbon take-up speed.

Note: If a Parameter Clear is done, this speed will go to default setting of "0".