

How To

Service Documents from APPI

Document: #HT000224

Document Title: How to change High Voltage Board and Transformer


Product(s): T-1000



Procedure:

To replace the Transformer, first start by powering down the entire machine using the On/Off switch

Power Must Be OFF!!!!


Remove the button head on the side cover of the machine to remove the Side Cover

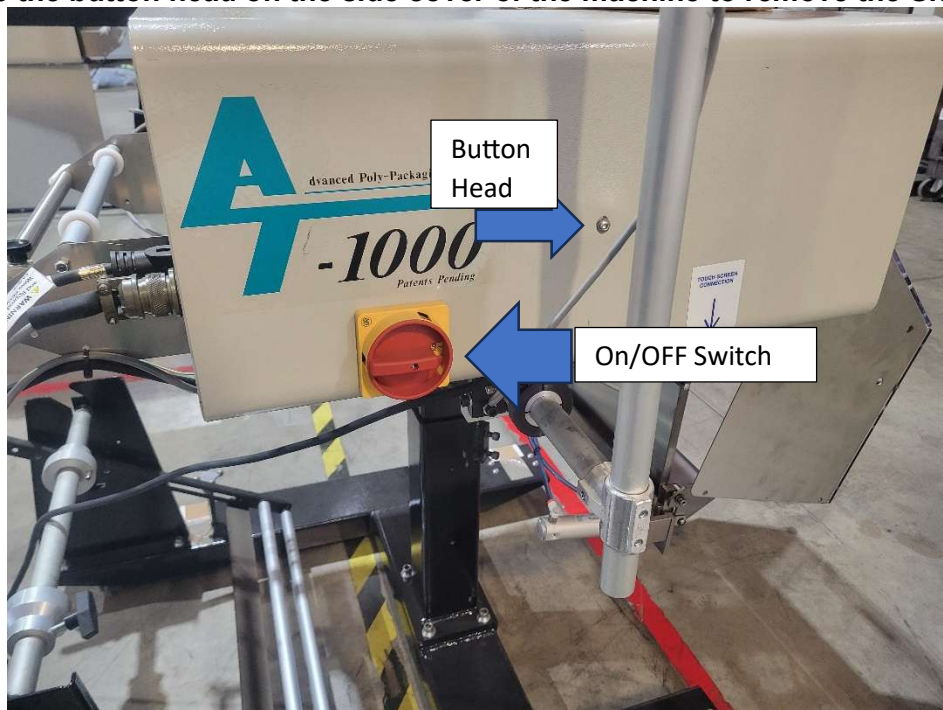

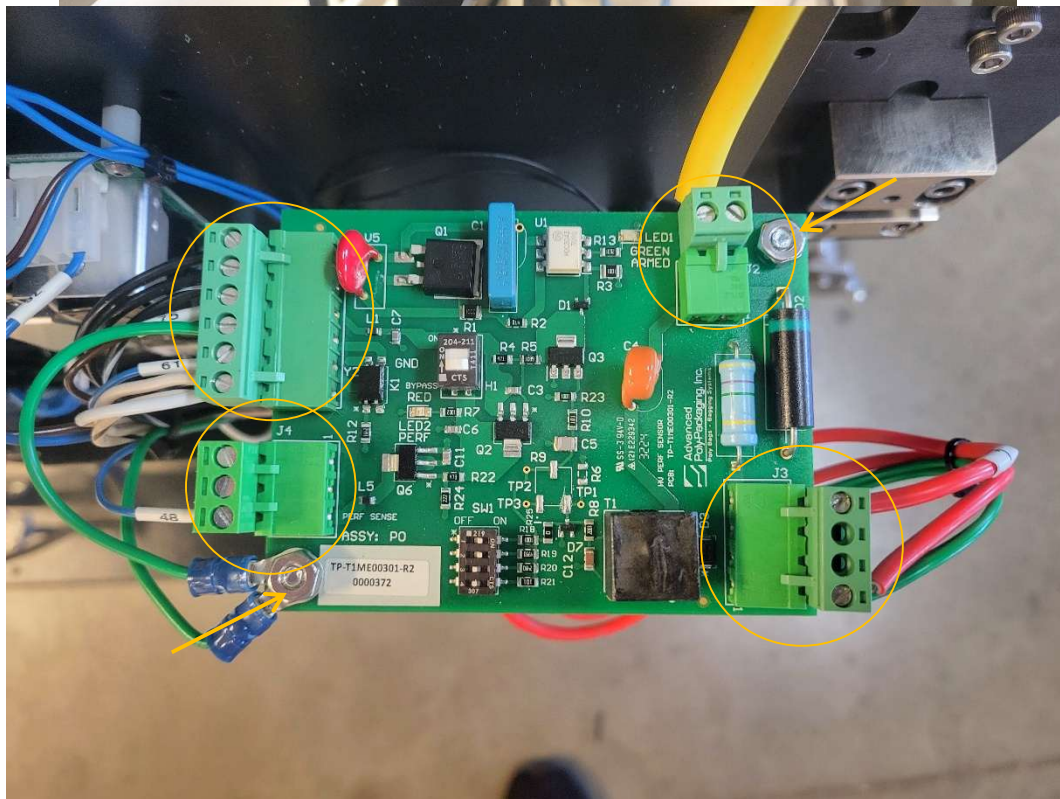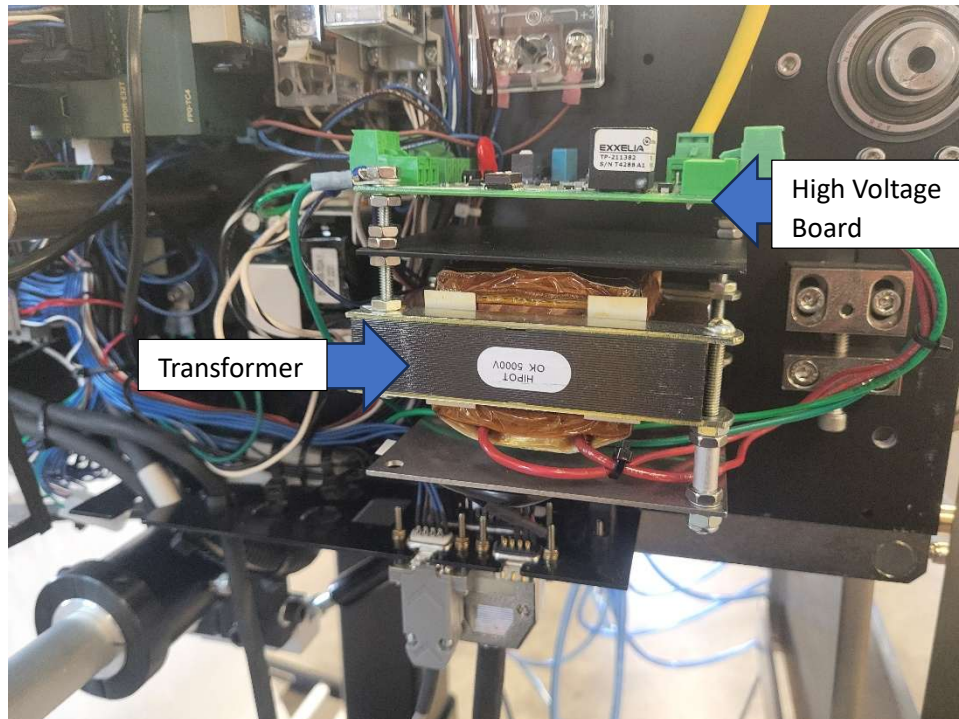

Undo all connections to the high voltage board (Circles), remove the Nuts and ground wires (Arrows)

If you are changing only the high voltage board, replace and connect the new High voltage board.

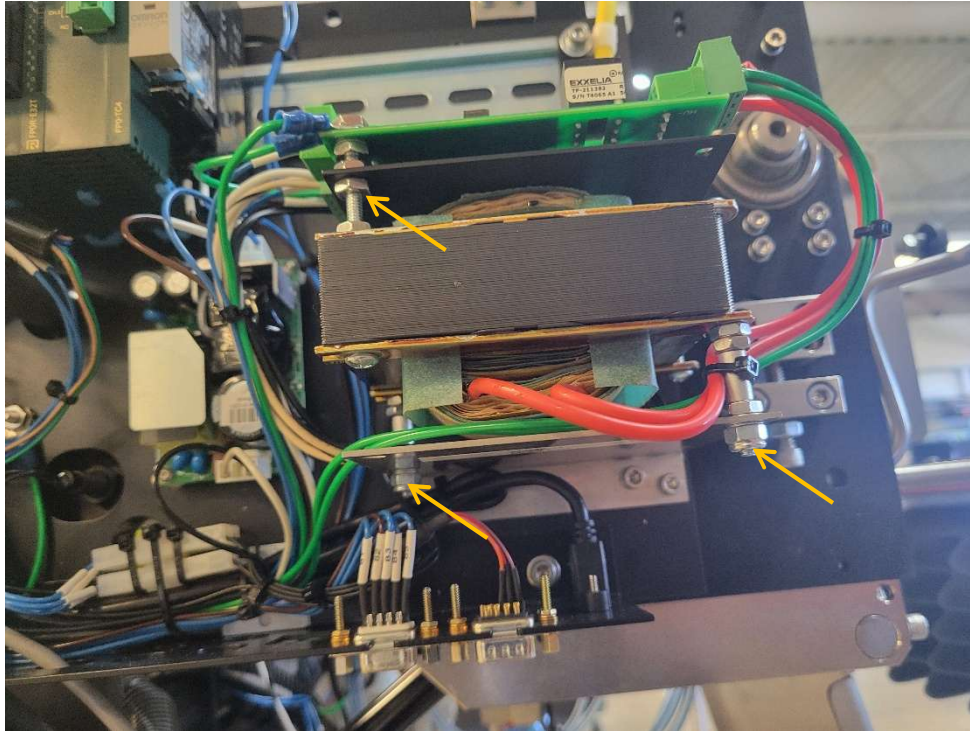

If you are Replacing the Transformer remove the nuts on top and bottom holding the transformer in place as well as the 2 Black, 2 Red, and 2 White wires coming from the transformer from the Green Connectors (Arrows) and swap the Transformer placing the wires from the new transformer in the same spots.

