



# How To

Service Documents from APPI

**Document: #HT000044**

**Document Title: Replace Heater Cartridge Cable**

**Product(s): T-1000**

**Procedure:**

Use this procedure to replace the Heater Cartridge Cable (PN TP-217116) on the T-1000 Bagger.



Keep the Heater Cartridge Cable close to the Heater Bar so it won't touch the springs on the PTFE Anti-Stick Sheet Holder.



# How To


Service Documents from APPI

## PTFE Sheet Holder



Extension Springs

Do not let the Heater Cartridge Cable rub against the Extension Spring (TP-108089).

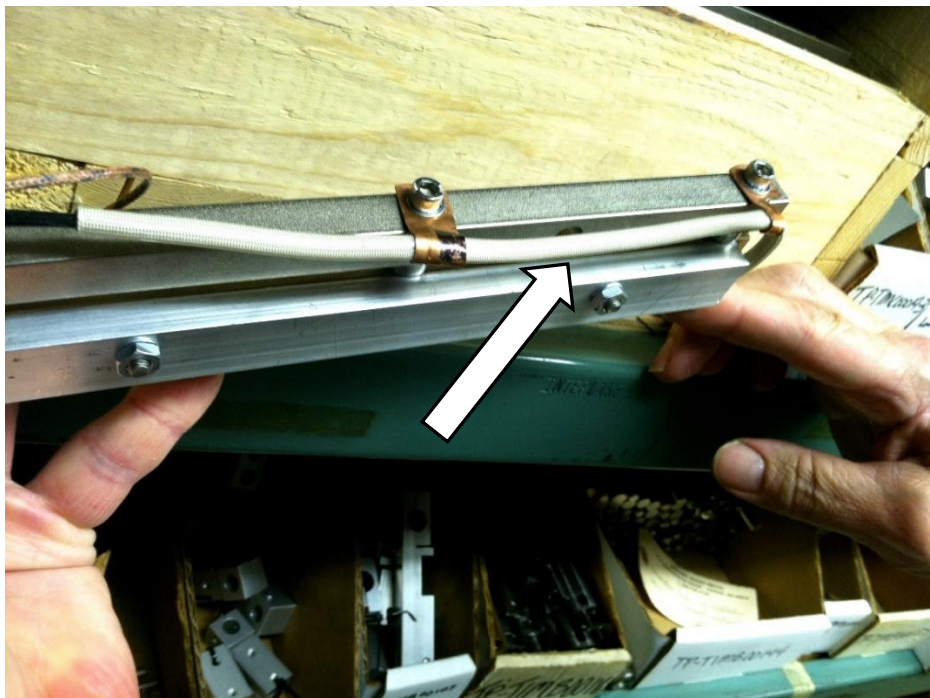

Be sure to leave some looseness here for the **Heater Bar Yoke**.